

7535 G2 Hand-Held Computer User Manual

June 19, 2006

Part No. 8000075.A



***ISO 9001 Certified
Quality Management System***



© Copyright 2006 by Psion Teklogix Inc., Mississauga, Ontario

This document and the information it contains is the property of Psion Teklogix Inc., is issued in strict confidence, and is not to be reproduced or copied, in whole or in part, except for the sole purpose of promoting the sale of Teklogix manufactured goods and services. Furthermore, this document is not to be used as a basis for design, manufacture, or sub-contract, or in any manner detrimental to the interests of Psion Teklogix Inc.

All trademarks are the property of their respective holders.

Return-To-Factory Warranty

Psion Teklogix Inc. provides a return to factory warranty on this product for a period of twelve (12) months in accordance with the Statement of Limited Warranty and Limitation of Liability provided at www.psionteklogix.com/warranty. (If you are not already a member of Teknet and you attempt to view this warranty, you will be asked to register. As a member of Teknet, you will have access to helpful information about your Psion Teklogix products at no charge to you.) In some regions, this warranty may exceed this period. Please contact your local Psion Teklogix office for details. For a list of offices, see Appendix A: “Support Services And Worldwide Offices”. The warranty on Psion Teklogix manufactured equipment does not extend to any product that has been tampered with, altered, or repaired by any person other than an employee of an authorized Psion Teklogix service organization. See Psion Teklogix terms and conditions of sale for full details.



Important: *Psion Teklogix warranties take effect on the date of shipment.*

Service

Psion Teklogix provides a complete range of product support services to its customers. For detailed information, please refer to Appendix A: “Support Services And Worldwide Offices”. This section also provides information about accessing support services through the Psion Teklogix web site.



Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

This Product, and its accessories, comply with the requirements of the Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC. If your end-of-life Psion Teklogix product or accessory carries a label as shown here, please contact your local country representative for details on how to arrange recycling.

For a list of international subsidiaries, please go to:

www.psionteklogix.com/public.aspx?s=us&p=Contacts

Restriction On Hazardous Substances (RoHS) Directive 2002/95/EC

What is RoHS?

The European Union has mandated that high environmental standards be met in the design and manufacture of electronic and electrical products sold in Europe, to reduce hazardous substances from entering the environment. The “Restriction on Hazardous Substances Directive (RoHS)” prescribes the maximum trace levels of

lead, cadmium, mercury, hexavalent chromium, and flame retardants PBB and PBDE that may be contained in a product. Only products meeting these high environmental standards may be “placed on the market” in EU member states after July 1, 2006.



RoHS Logo

Although there is no legal requirement to mark RoHS-compliant products, Psion Teklogix Inc. indicates its compliance with the directive as follows:

The RoHS logo located either on the back of the product or underneath the battery in the battery compartment (or on a related accessory such as the charger or docking station) signifies that the product is RoHS-compliant as per the EU directive. Other than as noted below, a Psion Teklogix product that does not have an accompanying RoHS logo signifies that it was placed on the EU market prior to July 1, 2006, and is thereby exempt from the directive.



Note: *Not all accessories or peripherals will have a RoHS logo due to physical space limitations or as a result of their exempt status.*

Disclaimer

Every effort has been made to make this material complete, accurate, and up-to-date. In addition, changes are periodically added to the information herein; these changes will be incorporated into new editions of the publication.

Psion Teklogix Inc. reserves the right to make improvements and/or changes in the product(s) and/or the program(s) described in this document without notice, and shall not be responsible for any damages, including but not limited to consequential damages, caused by reliance on the material presented, including but not limited to typographical errors.

TABLE OF CONTENTS

Program License Agreements	xiii
Approvals And Safety Summary	xix
Chapter 1: Introduction	
1.1 About This Manual	3
1.2 Text Conventions	4
1.3 7535 G2 Features	4
1.4 About The 7535 G2 Hand-Held Computer	6
1.4.1 The 7535 G2 Hand-Held Computer	7
1.4.2 Regulatory Labels	9
Chapter 2: Basic Checkout	
2.1 Preparing The 7535 G2 For Operation	13
2.1.1 Equipment You Need To Get Started	13
2.2 Powering Up The 7535 G2	13
2.2.1 Charging The Battery	13
2.2.2 Installing The Battery And Switching The Hand-Held On	14
2.3 Attaching Carrying Accessories.	15
2.3.1 Attaching The Hand Strap.	15
2.3.2 Attaching The Pistol Grip	17
2.4 Configuring An IEEE 802.11 Radio In The Unit	18
2.4.1 Assigning An IP Address	24
2.4.2 Name Servers Tab	25
2.4.3 Advanced Features.	26
2.4.3.1 Rearranging Preferred Networks	26
2.4.3.2 Deleting A Preferred Network.	26
2.4.3.3 Changing Network Properties	27
2.5 Checking The Scanner	27
2.6 Using Microsoft® ActiveSync®	27

2.7 Calibrating The Touchscreen 28

2.8 Resetting The Hand-Held 28

Chapter 3: Getting To Know Your 7535 G2

3.1 Features Of The 7535 G2 31

3.2 The Battery. 32

 3.2.1 Battery Safety 32

 3.2.2 Removing And Installing The Battery Pack 32

 3.2.3 Battery Chargers 33

3.3 Switching The Hand-Held On And Off 34

3.4 The Keyboard 35

 3.4.1 Modifier Keys 35

 3.4.1.1 Activating Modifier Keys 35

 3.4.1.2 Locking Modifier Keys. 36

 3.4.2 The Keys 36

 3.4.3 Function Keys, Softkeys And Macro Keys 37

 3.4.3.1 Function Keys 37

 3.4.3.2 Macro Keys. 38

 3.4.4 Alphanumeric Keyboard – 58-Key. 39

 3.4.5 Numeric Keyboard – 36-Key 39

 3.4.6 The Keypad Backlight 41

3.5 The Display 42

 3.5.1 Adjusting The Display Backlight 42

 3.5.2 Adjusting The Contrast. 42

 3.5.3 Calibrating The Touchscreen. 42

3.6 7535 G2 Indicators. 44

 3.6.1 LEDs 44

 3.6.1.1 Charge LED 45

 3.6.1.2 Radio Traffic LED 45

 3.6.1.3 Scan LED. 46

 3.6.1.4 User Application LED 46

 3.6.2 Onscreen Indicators 46

 3.6.3 Audio Indicators 49

 3.6.3.1 Adjusting The Beeper Volume 49

3.7 Internal Scanners. 50

 3.7.1 Scanning Techniques. 51

 3.7.2 Scan LED Indicators 51

3.7.3	Troubleshooting	52
3.7.4	Operating One Dimensional (1D) Internal Laser Scanners	52
3.7.5	Operating Internal PDF Laser Scanners	53
3.7.6	Operating Internal Two Dimensional (2D) Imager Scanners	53
3.7.7	Operating RFID/Scanner Modules	54
3.8	Connecting And Disconnecting Tethered Peripherals	54
3.9	Monitoring The Battery And Maximizing Run Time.	56
3.9.1	Storing Batteries	57
3.10	Monitoring The Network Connection.	57
3.11	Uploading Data In A Docking Station	58
3.12	General Maintenance	58
3.12.1	Caring For The Touchscreen	58
3.12.2	Cleaning The 7535 G2.	58

Chapter 4: Working With Windows CE

4.1	Navigating In Windows CE And Applications	63
4.1.1	Navigating Using A Touchscreen And Stylus.	63
4.1.2	Navigating Using The Keyboard	63
4.2	Working With Files, Folders And Programs	64
4.3	The Startup Desktop.	65
4.3.1	The Desktop Icons	66
4.3.2	The Taskbar	67
4.3.2.1	Using The Taskbar.	67
4.3.2.2	Customizing The Taskbar	68
4.4	The Start Menu	69
4.4.1	The Desktop	70
4.4.2	Security Settings.	70
4.4.3	Programs.	72
4.4.4	Shortcuts.	73
4.4.5	Settings.	75
4.4.6	Run.	76
4.4.7	Shutdown	76
4.5	Using A Dialog Box.	77

Chapter 5: Configuration

5.1	Remote Connect.	83
-----	-------------------------	----

Contents

5.2	The TekTerm Application	83
5.3	Pocket PC Compatibility.	83
5.4	The Control Panel	83
5.5	Control Panel Icons	85
5.6	Basic Setup.	89
5.6.1	Display Properties	89
5.6.1.1	Display Contrast	90
5.6.1.2	Display Backlight	90
5.6.1.3	Display Appearance	92
5.6.2	Keyboard Properties	93
5.6.2.1	Key Repeat	93
5.6.2.2	Keyboard Backlight	94
5.6.2.3	Keyboard One Shot Modes.	95
5.6.2.4	Keyboard Macro Keys	96
5.6.2.5	Unicode Mapping	98
5.6.2.6	Scancode Remapping	100
5.6.3	Volume And Sound Properties.	102
5.6.3.1	Volume Adjustments	103
5.6.3.2	Sound Tab	103
5.6.4	Power Management Properties.	104
5.6.4.1	Battery Capacity	104
5.6.4.2	Power Saving Schemes.	105
5.6.4.3	Suspend Threshold	106
5.6.4.4	Calibrate	107
5.6.4.5	Advanced.	107
5.6.4.6	Devices	108
5.6.5	Stylus Properties	109
5.6.5.1	Double-Tap.	109
5.6.5.2	Calibration	110
5.6.5.3	Touch	110
5.6.6	Manage Triggers	110
5.6.6.1	Trigger Mappings	111
5.6.6.2	Add And Edit Trigger Mapping	113
5.6.7	Certificate Assignment.	115
5.7	Bluetooth Setup	116
5.7.1	The Devices Tab	117
5.7.2	The Servers Tab	120
5.7.3	Outgoing Tab.	121
5.7.4	Active Conn. Tab.	122

5.7.5	The Properties Tab.	123
5.7.6	The Bluetooth GPRS WAN Connection	123
5.8	Total Recall	130
5.8.1	Creating A Backup Profile.	131
5.8.2	Restoring A Profile	136
5.9	The Storage Manager	136
5.9.1	Formatting A Memory Card.	136
5.9.2	Creating Partitions	137
5.9.3	Partition Management	138
5.10	IPv6 Support.	141
5.11	Scanner Settings.	142
5.11.1	Bar Codes	143
5.11.1.1	Scanner.	143
5.11.2	Non-Decoded Scanners	144
5.11.2.1	Options.	145
5.11.2.2	Code 39	146
5.11.2.3	Code 128.	147
5.11.2.4	EAN 13	148
5.11.2.5	EAN 8	150
5.11.2.6	UPC A	150
5.11.2.7	UPC E	151
5.11.2.8	Codabar	152
5.11.2.9	Code 93	152
5.11.2.10	Code 11	152
5.11.2.11	Interleaved 2 of 5	153
5.11.2.12	MSI Plessey	153
5.11.2.13	Discrete 2 of 5	154
5.11.2.14	IATA 2 of 5	154
5.11.3	Decoded (Internal) Scanners.	155
5.11.3.1	Options.	155
5.11.3.2	Advanced Options	156
5.11.3.3	2D Scanning Options	158
5.11.3.4	Data Options.	158
5.11.3.5	Code 39	159
5.11.3.6	Code 128.	161
5.11.3.7	EAN 13	162
5.11.3.8	EAN 8	162
5.11.3.9	UPC A	163
5.11.3.10	UPC E	163

Contents

5.11.3.11	UPC/EAN Shared Settings	164
5.11.3.12	Codabar	165
5.11.3.13	Code 93	166
5.11.3.14	Interleaved 2 of 5	167
5.11.3.15	MSI Plessey	167
5.11.3.16	Discrete 2 of 5	168
5.11.3.17	2D PDF-417	169
5.11.3.18	2D Micro PDF-417	169
5.11.3.19	RSS Code (Reduced Space Symbology).	170
5.11.3.20	Composite	170
5.11.4	Decoded (Intermec ISCP)	171
5.11.4.1	Options	171
5.11.4.2	Advanced Options	172
5.11.4.3	Code 39	172
5.11.4.4	Code 128	174
5.11.4.5	EAN 13	175
5.11.4.6	EAN 8	176
5.11.4.7	UPC A	176
5.11.4.8	UPC E	177
5.11.4.9	UPC/EAN Shared Settings	177
5.11.4.10	Codabar	178
5.11.4.11	Code 93	179
5.11.4.12	Code 11	180
5.11.4.13	Interleaved 2 of 5	180
5.11.4.14	Matrix 2 of 5	181
5.11.4.15	MSI Plessey	181
5.11.4.16	Discrete 2 of 5	182
5.11.4.17	2D PDF-417	183
5.11.4.18	2D Micro PDF-417	183
5.11.4.19	2D Codablock	184
5.11.4.20	RSS Code (Reduced Space Symbology).	184
5.11.4.21	Telepen	185
5.11.5	Imager	186
5.11.5.1	Options	186
5.11.5.2	Advanced Options	187
5.11.5.3	Code 39	190
5.11.5.4	Code 128	190
5.11.5.5	UPC/EAN	190
5.11.5.6	Codabar	191
5.11.5.7	Code 93	191
5.11.5.8	Interleaved 2 of 5	191

5.11.5.9	RSS Code	191
5.11.5.10	Postal: Australian	191
5.11.5.11	Postal: Japanese	192
5.11.5.12	Postal: Korean	192
5.11.5.13	Postal: PlaNET.	192
5.11.5.14	Postal: PostNET	192
5.11.5.15	Postal: Royal.	192
5.11.5.16	2D Data Matrix	193
5.11.5.17	2D Maxicode	193
5.11.5.18	2D PDF-417	193
5.11.5.19	2D Micro PDF-417	193
5.11.5.20	2D QR Code	193
5.11.5.21	Aztec.	194
5.11.5.22	Composite	194
5.11.6	Options.	194
5.11.6.1	Double Click.	195
5.11.6.2	Display.	195
5.11.7	Translations	197
5.11.8	Ports	198
5.11.8.1	Tether Port (COM1)	199
5.11.8.2	Console Port (COM3)	200
5.11.8.3	Port Replicator Tether (COM6)	201
5.11.8.4	Port Replicator 9-pin (COM5).	202
5.12	SNMP (Simple Network Management Protocol) Setup	203
5.12.1	Contact Tab	204
5.12.2	Communities Tab	205
5.12.2.1	Adding A Community.	205
5.12.2.2	Modifying A Community Setting	206
5.12.2.3	Removing An Existing Community.	206
5.12.3	Trap Destination Tab	207
5.12.3.1	Enabling Authentication TRAPS	207
5.12.3.2	Adding A Destination	207
5.12.3.3	Changing A Destination	208
5.12.3.4	Removing A Trap Destination.	208
5.12.4	Permitted Hosts Tab	209
5.12.4.1	Adding A Host.	209
5.12.4.2	Changing A Host	210

Chapter 6: Peripheral Devices & Accessories

6.1	External Bar Code Readers	213
-----	-------------------------------------	-----

Contents

6.1.1	PowerScan® Standard, LR and XLR Bar Code Scanners	213
6.1.2	Entering Data With The Bar Code Reader	213
6.2	RD7950 Integrated UHF RFID Reader	213
6.3	Batteries	214
6.4	Battery Charging	214
6.4.1	Battery Gas Gauge Calibration	214
6.5	Gang Charger	215
6.5.1	Installation	215
6.5.2	Operator Controls	216
6.5.3	Charge Indicators	216
6.5.4	Charging Batteries	217
6.5.5	Troubleshooting	217
6.5.5.1	Excessive Charge Duration	217
6.5.5.2	Improper Battery Storage	217
6.5.5.3	Indicator Flashing Red	218
6.5.5.4	Power LED Does Not Light Up	218
6.5.5.5	Indicator Does Not Light When Battery Installed	218
6.6	Combo Charger	218
6.6.1	Installation	219
6.6.2	Operator Controls	219
6.6.3	Using the Combo Charger With The 7535 G2	219
6.6.4	Charging The Spare Battery	219
6.6.5	Charge Indicators	220
6.6.6	Troubleshooting	220
6.7	Combo Dock	221
6.7.1	Installation	221
6.7.2	Using The Combo Dock	221
6.7.3	Network Access	221
6.7.4	Troubleshooting	222
6.8	Quad Dock	222
6.8.1	Installation	222
6.8.2	Indicators And Controls	223
6.8.3	Using The Quad Dock	223
6.8.4	Network Access	223
6.8.4.1	Network Addressing	223
6.8.5	Battery Charging	223
6.8.6	Troubleshooting	224

6.8.6.1	Network Link Unsuccessful	224
6.8.6.2	7535 G2 LED Does Not Light When Docked.	224
6.9	Portable Docking Module (PDM).	224
6.10	Bluetooth Peripherals	227
6.11	The 7535 G2 Picker Cradle	227
6.11.1	Picker Cradle Mounting Recommendations.	228
6.11.1.1	Mounting Template	228
6.11.2	Wiring Guidelines	229
6.11.3	Using The Picker Cradle.	229
6.11.4	Maintaining The Picker Cradle	229
6.11.5	Powered Cradle Installation In High Voltage Vehicles	230
6.11.5.1	Extreme Wet Environments	230
6.11.6	Powered Cradle Installation	231
6.11.6.1	Wiring Vehicle Power To The Cradle	232
6.11.7	The Port Replicator	232
6.12	Tether Adaptor Cables.	233

Chapter 7: Specifications

7.1	7535 G2 Hand-Held Computer Specifications	237
7.2	Radio Specifications.	239
7.3	Internal Scanner Port	240
7.4	RFID Applications	240
7.5	External Scanners	240
7.6	Internal Scanner Specifications	241
7.6.1	EV15 Scanner Specs	241
7.6.1.1	Decode Zones	242
7.6.2	SE1200 High Performance & Long Range Specs.	243
7.6.3	SE1200 Advanced Long Range & SE2223PDF Specs	244
7.6.3.1	Decode Zones	245
7.6.4	SE1224HP Specs	246
7.6.4.1	Decode Zones	247
7.6.5	SE1524ER – Extended Range Scanner	248
7.6.5.1	Decode Zones	248
7.6.6	SX5303 Imager Specs	250
7.6.6.1	SX5303 Typical Performance @ 300 Lux.	251
7.7	External Scanner Specifications.	252
7.7.1	PowerScan® LR and XLR Industrial Scanner Specs	252

7.7.2 PowerScan® Standard Range Scanner Specs 254

7.8 RD7950 Integrated UHF RFID Reader 255

7.9 HU3000 - 1900 mAh Lithium-Ion Battery Pack 256

Appendices

Appendix A: Support Services And Worldwide Offices

A.1 Technical Support A-1

A.2 Product Repairs A-1

A.3 Worldwide Offices A-2

Appendix B: RD7950 Integrated UHF RFID Reader

B.1 Introduction B-3

B.2 Current Software And RFID File System Versions B-3

B.3 RFID Tag Compatibility B-3

B.4 Installation B-3

 B.4.1 Attaching The Pistol Grip B-4

 B.4.2 Attaching The RD7950 B-5

 B.4.3 Installing The RFID File System Software From Flash B-8

 B.4.4 Enabling The RD7950 B-10

B.5 Product Specifications B-11

 B.5.1 RFID Standards Compliance B-11

 B.5.2 Host Device B-11

 B.5.3 Programming Environment B-11

 B.5.4 RFID Applications B-11

 B.5.5 Technical Specifications B-11

B.6 Regulatory Information B-13

 B.6.1 RF Exposure Statement B-13

 B.6.2 Approvals B-13

Appendix C: Port Pinouts

C.1 Tether Port Pinout C-3

C.2 Docking Station Connector C-3

C.3 Battery Contacts C-4

C.4 JB5 To USB Type B Cable - P/N CA1020 C-5

C.5	JB5 To RS-232 Serial Cable - P/N CA1010	C-5
-----	---	-----

Appendix D: USB Setup Application

D.1	USB Setup.	D-3
D.1.1	Launching The Application	D-3
D.1.2	Installation Complete Dialog Box	D-5

Appendix E: Wireless Wide Area Network (WWAN)

E.1	Wireless WAN.	E-3
E.1.1	Taskbar Icons	E-3
E.1.2	Establishing A Connection	E-4
E.1.3	Advanced Information	E-6
E.1.4	Tools Menu	E-8
E.1.5	SMS Menu	E-15
E.2	Power Mode.	E-17

INDEXI
--------------	-----------	-----------

PROGRAM LICENSE AGREEMENTS

Microsoft's End User License Agreement

You have acquired a device (“DEVICE”) that includes software licensed by Psion Teklogix Inc. from Microsoft Licensing Inc. or its affiliates (“MS”). Those installed software products of MS origin, as well as associated media, printed materials, and “online” or electronic documentation (“SOFTWARE”) are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT (“EULA”), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT PSION TEKLOGIX INC. FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. **ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).**

GRANT OF SOFTWARE LICENSE. This EULA grants you the following license:

- You may use the SOFTWARE only on the DEVICE.
- **NOT FAULT TOLERANT.** THE SOFTWARE IS NOT FAULT TOLERANT. PSION TEKLOGIX INC. HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON PSION TEKLOGIX INC. TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.
- NO WARRANTIES FOR THE SOFTWARE. **THE SOFTWARE is provided “AS IS” and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST**

INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR THE SOFTWARE, THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.

- **Note on Java Support.** The SOFTWARE may contain support for programs written in Java. Java technology is not fault tolerant and is not designed, manufactured, or intended for use or resale as online control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of Java technology could lead directly to death, personal injury, or severe physical or environmental damage. Sun Microsystems, Inc. has contractually obligated MS to make this disclaimer.
- **No Liability for Certain Damages.** **EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).**
- **Limitations on Reverse Engineering, Decompilation, and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- **SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS.** You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.
- **EXPORT RESTRICTIONS.** You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information see <http://www.microsoft.com/exporting/>.

Psion Teklogix Inc. End User License Agreement

IMPORTANT – READ CAREFULLY:

This License Agreement (“Agreement”) is a legal agreement between you and Psion Teklogix (“we”), the licensor of this software package (“Software”), for your use of the Software only as authorized in this Agreement.

By clicking on the “Accept” or other appropriate assent button and/or installing the Software, you agree to be and are hereby bound by the terms and conditions of this Agreement. If you do not agree with this Agreement, we do not grant you a license to the Software, and you may not install or use the Software or any accompanying documentation.

The Software is the property of Psion Teklogix Inc. or its licensors and is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The Software is licensed, not sold. Psion Teklogix Inc. provides the Software and licenses its use worldwide. You assume responsibility for the selection of the Software to achieve your intended results, and for the use and results obtained from it.

1. GRANT OF LICENSE

We hereby grant you and you hereby accept a non-exclusive, non-transferable, limited license to install and use the Software in object code form only, subject to the terms and restrictions set forth in this Agreement. Except as explicitly set forth below, (i) you are not permitted to copy, sell, lease or rent, distribute or sublicense the Software or to use the Software in a time-sharing arrangement or in any other unauthorized manner; (ii) no license is granted to you in the human readable code of the Software (source code); and (iii) this Agreement does not grant you any rights to patents, copyrights, trade secrets, trademarks, intellectual property or any other ownership rights with respect to the Software.

2. DESCRIPTION OF REQUIREMENTS, RESTRICTIONS, RIGHTS AND LIMITATIONS

- a. Copy.** The right and license granted to you shall be limited to installation and use of the Software up to but not exceeding the number of copies you have licensed. However, you may make a copy of the Software for backup or archival purposes. You shall not remove any copyright notice or proprietary notices, labels or marks in or on the Software.

License Agreement

- b. Evaluation.** As part of evaluation, you may install and use the Software only during the specified evaluation period. Unless you register the license as described below, the evaluation license shall expire upon the expiration of the evaluation period.
- c. License Registration.** You will be required to provide a license ID, unique to each device, for registering your Software license. As part of your software license registration, we will provide you a corresponding license key for each device.
- d. No Modifications.** You may not modify or create any derivative work of the Software or any copy or portion thereof nor may you remove any Software identification, copyright or other notices.
- e. No Distribution.** You may not distribute the Software, in whole or in part, to any other third party.
- f. Virus Program.** You may not develop or knowingly incorporate any virus program that may be harmful to a computer or a network in conjunction with the Software, or use the Software for any other purpose as which may be harmful to a third party.
- g. Assignment.** You may not assign or transfer the Software to a third party or allow a third party to use the same.
- h. Reverse Engineering.** Modification, reverse engineering, reverse compiling, disassembly, unbundling or extraction of the Software is expressly prohibited.
- i. Export Restrictions.** You agree to comply with all applicable laws and regulations and that you will not export or re-export the Software, or any part or copies thereof, or any products utilizing the Software in violation of applicable laws or regulations of the United States or the country in which you obtained them.

3. HIGH RISK ACTIVITIES.

The Software is not fault-tolerant and is not designed, manufactured or intended for use or resale as on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the Software could lead to death, personal injury, or severe physical or environmental damage (“High Risk Activities”). We specifically disclaim any express or implied warranty of fitness for High Risk Activities.

4. DISCLAIMER OF WARRANTY

We do not warrant uninterrupted or error free operation of the Software nor do we warrant that the Software will meet your requirements. THE SOFTWARE IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY WHATSOEVER AND WITHOUT ANY TECHNICAL SUPPORT OF ANY KIND. WE DISCLAIM ANY AND ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WE DO NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, USE WITH FUTURE PSION TEKLOGIX DEVICES INTRODUCED, OR OTHERWISE. YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SOFTWARE IS AT YOUR SOLE RISK AND YOU ARE RESPONSIBLE FOR INSTALLATION OF THE SOFTWARE ON YOUR COMPUTER.

5. LIMITATION OF LIABILITY

We are liable for no more than the value of the license fee that you paid for the Software. This limitation is cumulative and our responsibility for multiple claims will not exceed in aggregate this limit.

Under no circumstances are we or our third party suppliers liable for damages of third parties claimed against you, or for harm to your records or data, or special, incidental, indirect, or consequential damages, including but not limited to lost profits, lost business revenue or failure to realize expected savings, loss of data, loss of use of the Software or any associated equipment, downtime and user’s time, even if you informed us of their possibility, or for breach of any express or implied warranty, breach of contract, negligence, strict liability or any other legal theory related to the Software. This limitation applies whether you are entitled to claim damages from us or our third party suppliers as a matter of contract or tort.

6. COPYRIGHTS, OWNERSHIP AND PROPRIETARY RIGHTS

All title and copyrights in and to the Software, and any copies thereof, are owned by Psion Teklogix Inc. or its suppliers. The Software also contains copyrighted material licensed from our suppliers or obtained from open source and all rights to such copy-

License Agreement

righted material rests with such suppliers. Additional third party license terms and conditions may apply. We retain title to the Software and any copies made from it. Any copies of the Software you made are subject to the restrictions of this Agreement.

WE DISCLAIM ALL WARRANTIES AND INDEMNITIES, EXPRESS, IMPLIED OR STATUTORY, FOR PATENT OR COPYRIGHT INFRINGEMENT.

7. CONFIDENTIALITY

You agree not to use or disclose any proprietary information provided by us, except for the purposes of this Agreement. You agree not to reproduce any of the copyrighted materials unless expressly permitted by this Agreement.

8. ENDING THIS AGREEMENT

We may terminate this Agreement and your license immediately without notice if (a) you fail to comply with any term of this Agreement, or (b) your rights are assigned by you, by operation of law or otherwise. In such event, you must return or destroy all copies and component parts of the Software and documentation, as well as any other Psion Teklogix proprietary information in your possession, within fourteen (14) days of the date of termination. Any rights and obligations under this Agreement that by their nature continue after it ends will remain in effect until they are completed.

9. GENERAL

The laws of the Province of Ontario and the federal laws applicable therein, excluding the conflict of laws provisions, govern this Agreement. If any provision of this Agreement is deemed invalid or unenforceable by any country, that particular provision will be deemed modified to the extent necessary to make the provision valid and enforceable, and the remaining provisions will remain in full force and effect. Failure by us to insist on strict performance or to exercise a right when entitled, does not prevent us from doing so at a later time, either in relation to that default or any subsequent one.

No modifications of this Agreement shall be effective unless in writing and approved by us.

You acknowledge that you have read this Agreement, understand it, and that it is the complete agreement between you and Psion Teklogix with respect to the subject matter hereof and supersedes all prior agreements, oral or written.

APPROVALS AND SAFETY SUMMARY

FCC DECLARATION OF CONFORMITY (DoC)

Applicant's Name & Address: PSION TEKLOGIX
2100 Meadowvale Blvd.
Mississauga, Ontario
Canada L5N 7J9
Contact Person: Iain Roy
Telephone No.: (905) 813-9900

US Representative's Name & Address: 1810 Airport Exchange Blvd., Suite 500
Erlanger, KY, 41018, USA
Contact Person: Kyle Day
Telephone No.: (859) 372-4329

Equipment Type/Environment: Computing Devices

Trade Name / Model No.: 7535 G2 Hand-Held Micro-computer with
Portable Docking Module

Year of Manufacture: 2006

Standard(s) to which Conformity is Declared:

The 7535 G2 Hand Held Micro-computer with Portable Docking Module, supplied by Psion Teklogix, has been tested and found to comply with **FCC PART 15, SUBPART B - UNINTENTIONAL RADIATORS, CLASS B COMPUTING DEVICES FOR HOME & OFFICE USE.**

I, the undersigned, hereby declare that the equipment as tested is representative within manufacturing tolerance to units.

Applicant

Signature

Mike Doyle

Full Name

Vice President, Engineering

Position

Mississauga, Ontario, Canada

Place

June 2006

Date

Legal Representative in U.S.

Signature

Kyle Day

Full Name

Vice President, Channel Sales

Position

Erlanger, KY 41018, USA

Place

June 2006

Date

CE Marking

When used in a residential, commercial or light industrial environment the product and its approved UK and European peripherals fulfil all requirements for CE marking.

R&TTE Directive 1999/5/EC

This equipment complies with the essential requirements of EU Directive 1999/5/EC (Declaration available: www.pSIONteklogix.com).

Cet équipement est conforme aux principales caractéristiques définies dans la Directive européenne RTTE 1999/5/CE. (Déclaration disponible sur le site: www.pSIONteklogix.com).

Die Geräte erfüllen die grundlegenden Anforderungen der RTTE-Richtlinie (1999/5/EG). (Den Wortlaut der Richtlinie finden Sie unter: www.pSIONteklogix.com).

Questa apparecchiatura è conforme ai requisiti essenziali della Direttiva Europea R&TTE 1999/5/CE. (Dichiarazione disponibile sul sito: www.pSIONteklogix.com).

Este equipo cumple los requisitos principales de la Directiva 1995/5/CE de la UE, “Equipos de Terminales de Radio y Telecomunicaciones”. (Declaración disponible en: www.pSIONteklogix.com).

Este equipamento cumpre os requisitos essenciais da Directiva 1999/5/CE do Parlamento Europeu e do Conselho (Directiva RTT). (Declaração disponível no endereço: www.pSIONteklogix.com).

Ο εξοπλισμός αυτός πληροί τις βασικές απαιτήσεις της κοινοτικής οδηγίας EU R&TTE 1999/5/EK. (Η δήλωση συμμόρφωσης διατίθεται στη διεύθυνση: www.pSIONteklogix.com)

Deze apparatuur voldoet aan de noodzakelijke vereisten van EU-richtlijn betreffende radioapparatuur en telecommunicatie-eindapparatuur 199/5/EG. (verklaring beschikbaar: www.pSIONteklogix.com).

Dette udstyr opfylder de Væsentlige krav i EU's direktiv 1999/5/EC om Radio- og teleterminaludstyr. (Erklæring findes på: www.pSIONteklogix.com).

Dette utstyret er i overensstemmelse med hovedkravene i R&TTE-direktivet (1999/5/EC) fra EU. (Erklæring finnes på: www.pSIONteklogix.com).

Utrustningen uppfyller kraven för EU-direktivet 1999/5/EC om ansluten teleutrustning och ömsesidigt erkännande av utrustningens överensstämmelse (R&TTE). (Förklaringen finns att läsa på: www.pSIONteklogix.com).

Tämä laite vastaa EU:n radio- ja telepäätelaitedirektiivin (EU R&TTE Directive 1999/5/EC) vaatimuksia. (Julkilausuma nähtävillä osoitteessa: www.pSIONteklogix.com).

Psion Teklogix tímto prohlašuje, že 7535 G2 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1995/5/ES (NV č. 426/2000 Sb.) a Prohlášení o shodě je k dispozici na www.pSIONteklogix.com. Toto zařízení lze provozovat v České republice na základě generální licence č. GL-12/R/2000.

Psion Teklogix tímto vyhlasuje, že 7535 G2 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1995/5/ES (NV č. 443/2001 Z.z.) a Vyhlásenie o zhode je k dispozícii na www.pSIONteklogix.com. Toto zariadenie je možné prevádzkovať v Slovenskej republike na základe Všeobecného povolenia č. VPR-01/2001.

- ❗ Use of the 802.11g 7535 G2 Hand-Held in France:
Owing to French Government restrictions, the 802.11g 7535 G2 Hand-Held Computer is limited to indoor use. It may be used outdoors, on private property, only with prior authorization from the French Ministry of Defense.

FCC Information To Users

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Approvals And Safety Summary

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment under 47 CFR 2.1093 paragraph (d)(2), for use in a PDA. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Some equipment in hospitals and aircraft are not shielded from radio frequency energy. Do not use the 7535 G2 hand-held onboard aircraft, or in hospitals, without first obtaining permission.

Do not use near pacemakers. The product may affect the operation of some medically implanted devices such as pacemakers, causing them to malfunction. Avoid placing your product next to such devices. Keep a minimum distance of 20 cm between the device and the product to reduce the risk of interference. If you have any reason to suspect that interference is taking place, turn off the 7535 G2 hand-held and contact your cardiologist for assistance.



Note: *To maintain compliance with the FCC RF exposure guidelines, if you wear the 7535 G2 on your body, use the Psion Teklogix approved carrying case.*

Use of non-approved accessories may violate FCC RF exposure guidelines.

Emissions Information For Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations. When using the 802.11 radio option, to prevent radio interference, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada. En cas d'utilisation du module radio 802.11, afin d'éviter toute interférence radio avec le service autorisé, l'appareil doit être utilisé à l'intérieur, tout en tant éloigné de toute fenêtre afin de garantir le maximum de protection. Si cet équipement (ou son antenne émettrice) est installé à l'extérieur, il est alors soumis à licence.

WARNING TO USERS

This product is a Class I/Class II laser product according to CDRH 21 CFR 1040.10 and 1040.11 and Class1/Class 2 laser product according to IEC 60825-1:1993+A1:1997+A2:2001.

The SE1200 ALR has an maximum radiated power less than 1.4 mW; according to EN 60825-1: 2001 it is classified as a Class 3B laser product.




LASER WARNINGS

For your own safety, it is *critical* that you comply with the following warnings:



CAUTION

Do not look into the laser beam or point the beam at people or animals.

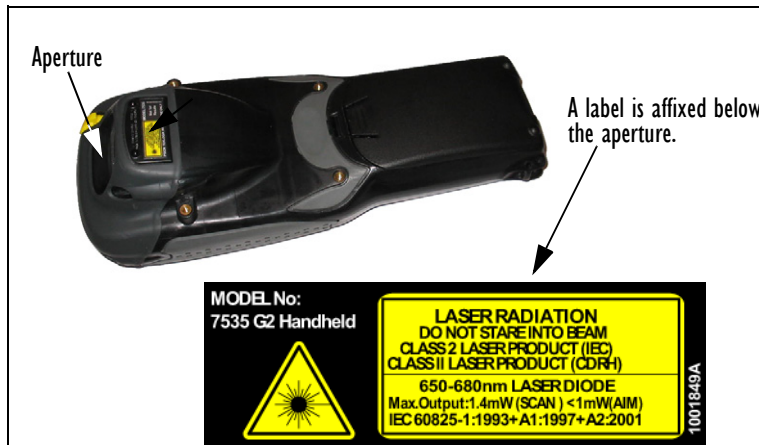

Approvals And Safety Summary



CAUTION

Using controls or adjustments, or performing procedures other than those specified herein may result in hazardous radiation exposure.



CAUTION

The use of optical instruments (magnification devices) with this product will increase eye hazard.



DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Operating Psion Teklogix equipment where explosive gas is present may result in an explosion.



DO NOT REMOVE COVERS OR OPEN ENCLOSURES

To avoid injury, the equipment covers and enclosures should only be removed by qualified service personnel. Do not operate the equipment without the covers and enclosures properly installed.



CAUTION!

Danger of explosion if a 7535 G2 battery is incorrectly handled, charged, disposed of or replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the instructions described in “Lithium-Ion Battery Safety Precautions” on page xxiv. Carefully review all battery safety issues.



VORSICHT!

Explosionsgefahr bei unsachgemäßem Austausch der Batterie Ersatz nur durch denselben oder einen vom Hersteller empfohlenen gleichwertigen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

LITHIUM-ION BATTERY SAFETY PRECAUTIONS



Important: *Before charging or using the battery pack, it is critical that the safety information in this section is reviewed and that all warnings are strictly followed.*



Warning: ***BATTERIES ARE CONSIDERED HAZARDOUS WASTE and must be returned to Psion Teklogix for proper disposal. Forward all used batteries to one of the following offices:***

Psion Teklogix Inc.
2100 Meadowvale Blvd.
Mississauga, Ontario
Canada L5N 7J9

Psion Teklogix Corp.
1810 Airport Exchange Blvd.
Suite 500
Erlanger, Kentucky
USA 41018

Psion Teklogix S.A.
La Duranne, 135 Rue Rene Descartes
BP 421000, 13591 Aix-En-Provence
Cedex 3; France



Warning:

TO PREVENT the battery from leaking acid, generating heat or exploding, adhere to precautions listed below.

- The battery incorporates built-in safety devices. To ensure their proper function, do not disassemble or alter any parts of the battery.
- Do not short-circuit the battery by directly connecting any of the exposed terminals with metal objects such as wire. Do not transport or store the battery together with metal objects such as necklaces, hair pins, etc.
- Do not dispose of batteries in fire.
- Do not use or leave the battery near a heat source such as a fire or heater.
- Do not immerse the battery in water.
- When charging, use the battery charger specifically designed for the battery.
- Do not pierce, strike, throw or step on the battery.
- Do not directly solder the battery.
- Do not connect the battery to an electrical outlet, vehicle cigarette lighter, etc.
- Do not put battery into a microwave oven or pressurized container.
- Do not use the battery in combination with primary batteries (such as dry-cell batteries) or batteries of different capacities or brands.
- Immediately remove the battery from the device or battery charger and stop use if the battery gives off an odor, generates heat, becomes discoloured or deformed, or in any way appears abnormal during use.
- Do not continue charging the battery if it does not recharge within the specified charge time.

Approvals And Safety Summary

- The battery may burst or ignite if the battery leaks. Always ensure that it is away from any exposed flames.
- If leaking electrolyte sprays into your eyes, rinse them with clean running water, and immediately seek medical attention.
- Do not store the battery in extremely high temperatures (e.g., a vehicle, strong direct sunlight, etc.). This may cause the battery to overheat or ignite, and it may also reduce the performance and service life of the battery.
- Do not use in areas where static electricity is greater than what the manufacturer guarantees.
- Keep batteries out of reach of children.

Always switch the unit off **before** changing the battery. While the battery is being replaced, the 7535 G2 will save its current data for at least 10 minutes.



IMPORTANT CHARGER AND AC/DC ADAPTOR SAFETY INSTRUCTIONS

- **SAVE THESE INSTRUCTIONS** – This manual contains important safety and operating instructions for battery chargers and AC/DC adaptors.
- Before using the battery charger or AC/DC adaptor, read all instructions and cautionary markings on the (1) AC/DC adaptor, (2) battery charger, (3) battery, and (4) product using the battery.
- The mains power cord shall comply with national safety regulations of the country where the equipment is to be sold.
- Use of an attachment not recommended or sold by the battery charger or AC/DC adaptor manufacturer may result in fire, electric shock, or personal injury.
- To reduce risk of damage to the electric plug and cord when unplugging the charger or AC/DC adaptor, pull the plug rather than the cord.
- Make sure the cord is positioned so that it is not stepped on, tripped over, or otherwise subjected to damage or stress.
- Do not operate the charger or AC/DC adaptor with a damaged cord or plug. Replace immediately.
- Do not operate the charger or AC/DC adaptor if it has received a sharp blow, been dropped, or otherwise damaged in any way; it should be inspected by qualified service personnel.

- Do not disassemble the charger or AC/DC adaptor; it should be repaired by qualified service personnel. Incorrect reassembly may result in electric shock or fire.
- To reduce risk of electric shock, unplug the charger or AC/DC adaptor from the outlet before attempting any maintenance or cleaning.
- An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in fire or electric shock.
If an extension cord must be used, make sure:
 - The plug pins on the extension cord are the same number, size, and shape as those on the charger or AC/DC adaptor.
 - The extension cord is properly wired and in good electrical condition and that the wire size is larger than 16 AWG.
- Do not expose the charger or AC/DC adaptor to rain or snow.
- Do not use the charger if, after an overnight charge, any of the batteries feel warmer than the charger housing. The charger should be inspected by qualified service personnel.
- Do not use the charger if any of the batteries or the charger get more than lukewarm. Do not use the AC/DC adaptor if it gets more than lukewarm. The equipment should be inspected by qualified personnel.

INTRODUCTION

1

1.1 About This Manual	3
1.2 Text Conventions	4
1.3 7535 G2 Features	4
1.4 About The 7535 G2 Hand-Held Computer	6
1.4.1 The 7535 G2 Hand-Held Computer	7
1.4.2 Regulatory Labels	9

1.1 About This Manual

This manual describes how to configure, operate and maintain the Psion Teklogix 7535 G2 hand-held computer.

Chapter 1: Introduction

provides a basic overview of the 7535 G2 hand-held.

Chapter 2: Basic Checkout

describes the steps required to get the 7535 G2 ready for operation.

Chapter 3: Getting To Know Your 7535 G2

describes the 7535 G2 features and outlines how to charge and maintain the battery. This chapter also provides a description of the keyboard, how to navigate in Microsoft® Windows® CE, how to use the internal scanner, and so on.

Chapter 4: Working With Windows CE

describes the Microsoft Windows CE desktop and how to use it. This chapter also outlines the basics of moving around a Windows CE window, selecting and opening icons, files, folders and working with a Windows dialog box.

Chapter 5: Configuration

provides a description of the Windows CE Control Panel and how to use it to configure the 7535 G2, along with the scanners attached to the hand-held, and so on.

Chapter 6: Peripheral Devices & Accessories

describes the peripherals and accessories available for your 7535 G2 hand-held.

Chapter 7: Specifications

details radio, hand-held computer and battery specifications.

Appendix A: Support Services And Worldwide Offices

provides helpdesk phone numbers and provides web-based information to help you search for worldwide office addresses and phone numbers.

Appendix B: RD7950 Integrated UHF RFID Reader

describes how to install and enable the RD7950 RFID reader.

Appendix C: Port Pinouts

includes 7535 G2 pinouts.

Appendix D: USB Setup Application

provides detailed instructions on USB setup.

Appendix E: Wireless Wide Area Network (WWAN)

details WWAN configuration information.

1.2 Text Conventions



Note: *Notes highlight additional helpful information.*



Important: *These statements provide particularly important instructions or additional information that is critical to the operation of the equipment.*



Warning: *These statements provide critical information that may prevent physical injury, equipment damage or data loss.*

1.3 7535 G2 Features

- Rugged design:
 - fully-sealed enclosure (rated to IP65). Totally protected against dust ingress. Protected from low pressure water jets from all directions.
 - multiple 1.5m (5 ft.) drops to polished concrete.
- Processor and memory:
 - Intel PXA270 @ 520MHz
 - 32 KB instruction and 32 KB data cache
 - On-board RAM: 128 MB SDRAM
 - On-board ROM: 64 MB FLASH
- Operating system:
 - Windows CE 5.0
- Programming environment:
 - HTML, XML
 - Psion Teklogix Mobile devices SDK for CE
 - Java™, Embedded Visual C++, Microsoft Visual Studio® 2005
 - Standard CE APIs - MFC, ATL
- Wireless communications:
 - IEEE 802.11g 54 Mbps 2.4 GHz Compact Flash radio
 - Bluetooth SDIO radio 2.4 GHz (10 m range)
- Application software:
 - Internet Explorer for Windows CE

- Optimized for use with Open TekTerm (for details, see the *TekTerm Software User Manual, P/N 8000073*)
- Display:
 - 320 x 240 (1/4 VGA) graphic colour TFT
 - 8.9 cm (3.5 in.) diagonal portrait mode
 - 64K displayable colours
 - Contrast control and automatic backlight
 - Sunlight readable (for outdoor use)
 - Optional monochrome screen
 - Optional non-touchscreen
- Touchscreen:
 - Passive stylus or finger operation
 - Signature capture
 - Integral stylus holder
 - 4-wire or high durability 5-wire technology options
- Keyboards:
 - Automatic bright EL backlight
 - Ergonomically designed for left- or right-hand use
 - Dedicated function keys
- Two formats available:
 - 36-key large button numeric with a total of 20 function keys (10 direct-access)
 - 58-key alpha with a total of 30 function keys (6 direct-access)
- Indicators and controls:
 - Beeper with volume control
 - LEDs for radio transmit and receive, scanning, battery status and user applications
- Bar code applications:
 - Internal 1D & 2D scan engines: standard, long range, advanced long range
 - Fuzzy logic internal scan engine
 - Internal 1.3 megapixel CMOS image capture scan engine
 - Supports decoded and undecoded tethered scanners
- RFID applications:
 - Tethered 900 MHz RD7950 Integrated UHF RFID Reader

- Internal expansion slots:
 - One SDIO/MMC slot
 - One Type II Compact Flash slot
- External ports:
 - Tether Port with:
 - RS232 serial (decoded scanner, printer)
 - Undecoded scanner support
 - USB host
 - Docking station port with:
 - RS232 serial with diagnostics
 - USB device
 - USB host
 - Power in/out
- Power management:
 - Typical 8-hour usage Lithium-Ion standard battery
 - Quick swap packs
 - Advanced smart battery with gas gauge
 - Runs with battery, wall adaptor or cigarette lighter
 - Built-in fast charger (2 hours)
 - System backup during battery swap (more than 10 minutes)
 - One week real-time clock backup
- Network Management:
 - SNMP MIB 2 support
 - Remote software download
 - Remote WLAN management

I.4 About The 7535 G2 Hand-Held Computer

The 7535 G2 is a ruggedized hand-held personal computer, running the Microsoft Windows CE 5.0 operating system. It is intended for use in commercial and light industrial applications with a focus on real time wireless data transactions. All possible bar code input methodologies are supported by one of a variety of scanners available. Optimization for specific operational environments is supported with a wide range of peripheral options and carrying accessories.

1.4.1 The 7535 G2 Hand-Held Computer



Figure 1.1 7535 G2 With 58-Key Keyboard



Figure 1.2 7535 G2 Docking Port

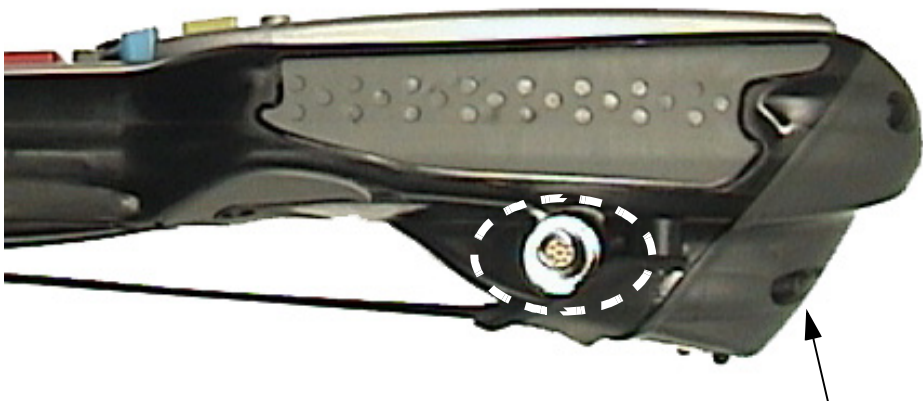


Figure 1.3 Tether Port

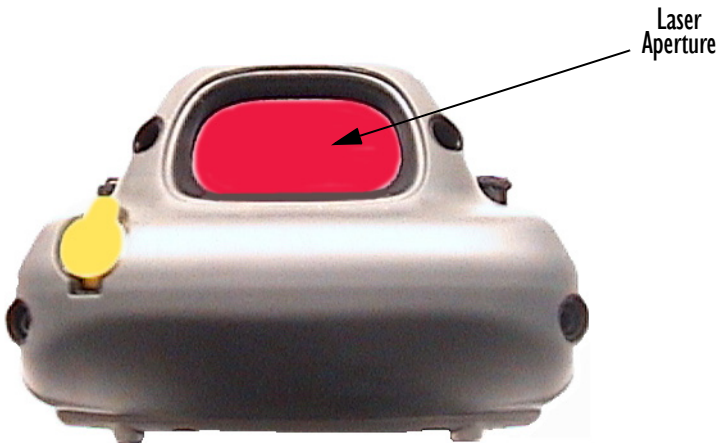


Figure 1.4 Scanner Window

1.4.2 Regulatory Labels



This label is affixed below the scanner window.

Figure 1.5 Laser Warning Label



Warning: *Using controls or adjustments or performing procedures other than those specified herein may result in hazardous radiation exposure.*



This label is affixed below the scanner window.

Figure 1.6 LED Radiation Notice Label

BASIC CHECKOUT

2

2.1	Preparing The 7535 G2 For Operation	13
2.1.1	Equipment You Need To Get Started	13
2.2	Powering Up The 7535 G2	13
2.2.1	Charging The Battery	13
2.2.2	Installing The Battery And Switching The Hand-Held On.	14
2.3	Attaching Carrying Accessories	15
2.3.1	Attaching The Hand Strap	15
2.3.2	Attaching The Pistol Grip	17
2.4	Configuring An IEEE 802.11 Radio In The Unit	18
2.4.1	Assigning An IP Address	24
2.4.2	Name Servers Tab	25
2.4.3	Advanced Features	26
2.4.3.1	Rearranging Preferred Networks	26
2.4.3.2	Deleting A Preferred Network	26
2.4.3.3	Changing Network Properties	27
2.5	Checking The Scanner	27
2.6	Using Microsoft® ActiveSync®	27
2.7	Calibrating The Touchscreen	28
2.8	Resetting The Hand-Held	28

2.1 Preparing The 7535 G2 For Operation

Typically, 7535 G2 hand-helds are configured at the factory and arrive ready for use. Although these hand-helds are equipped with an internal Compact Flash and SD I/O slot, these slots are not intended for user modification. If a device needs to be changed or added in these slots, contact qualified Psion Teklogix personnel. Refer to *Appendix A: Support Services And Worldwide Offices* for the service number closest to you.

2.1.1 Equipment You Need To Get Started

You'll need:

- A compatible battery charger, docking station or portable docking module (PDM) with power supply.
- An operating wireless network (if you are not operating the equipment in batch mode).
- A medium Phillips head screwdriver (if you need to attach a carrying strap or pistol grip handle).

2.2 Powering Up The 7535 G2



Note: *Psion Teklogix offers a Portable Docking Module (PDM) along with its power supply to help speed the checkout and confirmation process for your 7535 G2. The PDM can power your hand-held with or without a battery installed in the unit. Refer to Chapter 6: Peripheral Devices & Accessories beginning on page 211 for more information about this accessory.*

2.2.1 Charging The Battery



Important: *The 7535 G2 uses a high capacity Lithium-Ion battery. It is critical that you review the battery safety guidelines in “Lithium-Ion Battery Safety Precautions” on page xxiv before charging the battery.*

Batteries shipped from the factory are not charged. They must be fully charged prior to use. Full capacity may not be reached until at least 5 full charge/discharge cycles have been performed. Batteries can be charged using a gang charger or the unit's

Installing The Battery And Switching The Hand-Held On

internal charger. When using the internal charger, a suitable power source is required. All chargers and docking stations are described in *Chapter 6: Peripheral Devices & Accessories* beginning on page 211.



Important: *The 7535 G2 battery properties dialog box (see “Battery Capacity” on page 104) may indicate an incorrect battery capacity until the new battery has been fully charged. It may take several charge/discharge cycles for the battery capacity gauge to register capacity with the full 95% accuracy.*

2.2.2 Installing The Battery And Switching The Hand-Held On



Important: *Always switch the unit off before changing the battery. While the battery is being replaced, the 7535 G2 will save its current data for up to 20 minutes.*

If you are not using a docking station or PDM:

- Slide the charged battery with the contoured plastic facing you into the unit. Click the battery into place.

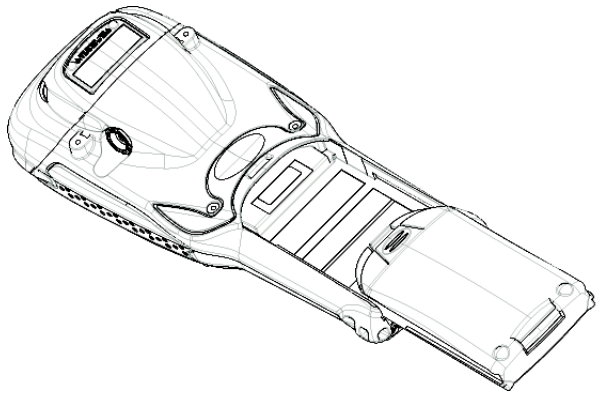


Figure 2.1 Installing The Battery



Note: *If you are using a docking station, you can insert an uncharged battery, dock the unit and switch it on.*

If you are using a PDM, you can configure your unit without a battery, with a charged battery or with an uncharged battery.

If you are using a hand strap:

- Hook the bottom of the hand strap into the slot at the base of the battery.

To switch the unit on:

- Press and hold down the [ENTER/ON] key for at least one second.
- When all four LEDs flash yellow, release the [ENTER/ON] button.

A splash screen displaying the Psion Teklogix logo and the Windows CE logo appears. When Windows CE has successfully loaded, the startup desktop is displayed.



Note: *The screen may go blank for a few seconds after the splash screen loading bar reaches the end. This is part of the normal Windows CE cold boot process. The desktop is displayed after a few moments.*

2.3 Attaching Carrying Accessories

Psion Teklogix recommends that a carrying accessory—a hand strap, pistol grip or shoulder strap—be installed on the 7535 G2 before use. If your hand-held is not fitted with a hand strap or pistol grip, you can install either using the carrying accessory kit supplied. You'll need:

- A Phillips head screwdriver.



Important: *Do not use adhesives such as Loctite to secure screws on carrying accessories. These chemicals may damage the plastic casing.*

2.3.1 Attaching The Hand Strap

Two Phillips head screws are provided with the hand strap.

- Attach the strap to the two threaded inserts located at the back of the 7535 G2 near the top of the unit (see Figure 2.2 on page 16).

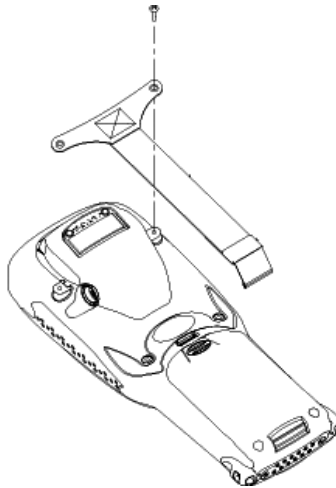


Figure 2.2 Attaching The Hand Strap

- Stretch the handstrap toward the base of the 7535 G2, and hook the bottom of the handstrap into the slot near the base of the battery pack.

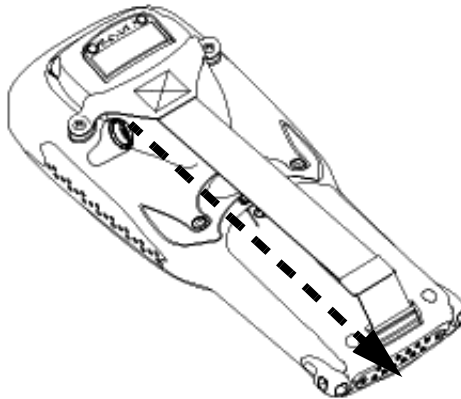


Figure 2.3 Hooking The Hand Strap In Place

2.3.2 Attaching The Pistol Grip



Note: A Phillips head screwdriver is required.

The pistol grip is attached to the back of the 7535 G2 using the four threaded inserts in the upper part of the 7535 G2 casing. Four black #4-40 Phillips head screws are provided with this accessory.



Note: Prior to installation, make sure the trigger mechanism is securely snapped into the pistol grip body and that the trigger operates properly.

- Position the pistol grip so that it fits snugly over the back of the unit and the inserts on the back of the hand-held are aligned with the holes in the pistol grip.

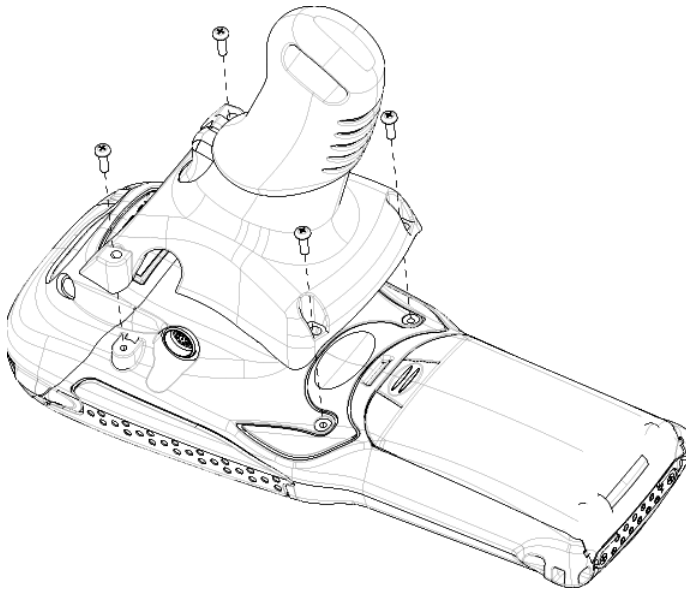


Figure 2.4 Attaching The Pistol Grip

- Using a Phillips screwdriver, securely fasten the pistol grip to the back of the 7535 G2.

2.4 Configuring An IEEE 802.11 Radio In The Unit

The most common 802.11g settings are configured as defaults. However, there are some fields that must be completed, including the SSID of your access point and the security methods implemented in the network (including access keys).



Note: *In most situations the configuration of your 802.11 radio will require parameters, settings, and access keys from a network administrator.*

Network administrators should review the detailed security information in this section in order to effectively configure the 802.11 wireless network.



Important: *If the 7535 G2 is equipped with a radio that has never been configured, the radio settings dialog box opens automatically when the unit is powered on. In this case, skip to Step 4 on page 20.*

To configure the 802.11g radio:

1. Press [BLUE] [0] to display the *Start Menu*, and tap on **Settings, Network and Dial-up Connections.**

If you're using the keyboard, press [BLUE] [0] to display the *Start Menu*. Use the [DOWN] arrow key to highlight **Settings**. Press the [RIGHT] arrow key to display the sub-menu. *Highlight Network*, and press [ENTER].

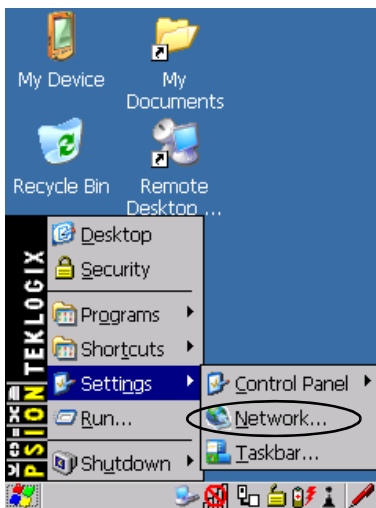


Figure 2.5 Network And Dial-Up Connections

2. Choose the radio icon to open the **802.11g Wireless LAN Settings** window. In the sample screen, this is labelled *PTXCF8385P N1*.

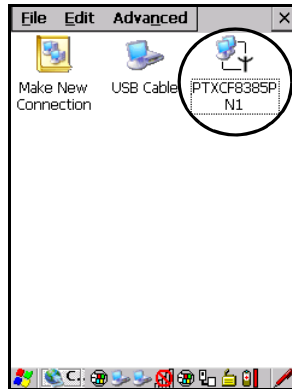


Figure 2.6 802.11g Wireless LAN Settings Window

3. Wireless Statistics Tab
When you choose the **Wireless LAN** icon, an *802.11g Wireless LAN Settings* window (*PTXCF8385P N1* in the sample below) is displayed.

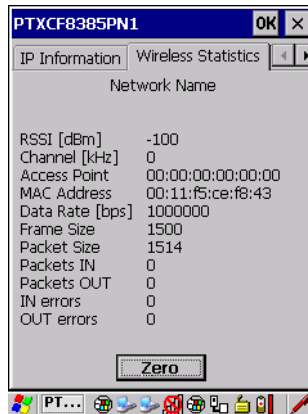


Figure 2.7 Wireless Statistics

This tab lists your radio statistics. Choosing the Zero button resets the statistics of the last four items: Packets IN, Packets OUT, IN errors and OUT errors.

- Display the next tab in this window, *Wireless Information*.
4. Wireless Information Tab

The options under this tab display existing networks to which you can connect, and it allows you to add a new network or modify the settings for an existing network.

- **Configure button** – To change the settings in an existing network, highlight the network you want to modify, and choose the Configure button to display the Wireless Properties dialog box.
- **Connect button** – To force connection to a specific, existing network, highlight the network to which you want your 7535 G2 to connect, and choose the Connect button.

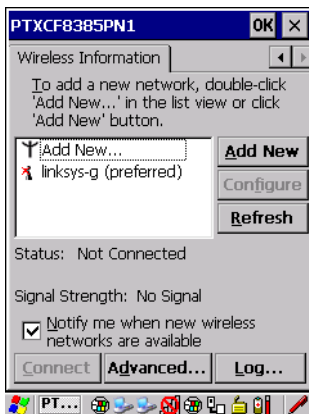


Figure 2.8 Wireless Information Tab

This tab lists available networks—any access points that are broadcasting an SSID, and it lists preferred networks—networks that you have configured. Since access points are generally secure, they will most likely not be listed here. By default, 7535 G2 attempts to connect to preferred networks. This behaviour can be changed by enabling *Automatically connect to non-preferred networks* in the *Advanced* dialog box (page 26).

- To add a new configuration, tap on the **Add New** button. A blank *Wireless Properties* dialog box is displayed.

5. Wireless Properties

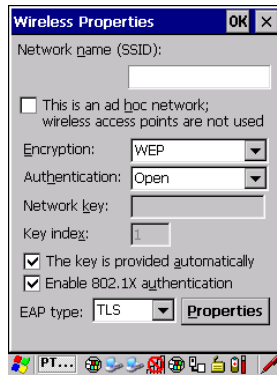


Figure 2.9 Wireless Properties Dialog Box

Network name (SSID)

- Type the appropriate SSID (Service Set Identifier) in the *Network name (SSID)* text box at the top of this dialog box.

The *Network name* field can contain a maximum of 32 characters. The name assigned here is listed as a preferred network.



Important: *Keep in mind that the 7535 G2 will only communicate with access points that are configured with the same SSID.*

Ad Hoc And Infrastructure

If you are using an *Infrastructure* network—one in which 7535 G2s must pass data through an access point—leave the checkbox next to *This is an ad hoc network* blank.

If you are using an *Ad Hoc* network—a network in which 7535 G2s pass data directly to other 7535 G2s without an access point—highlight *This is an ad hoc network*, and add a checkmark in the checkbox to enable *Ad Hoc*.

Encryption

WEP (Wired-Equivalent Privacy) encryption prevents others from accidentally accessing your network. If you are not using encryption, you can choose *Disabled* from the dropdown encryption menu. Otherwise, leave this field as is.



Note: *WEP cannot be disabled if you are using WPA or WPA-PSK authentication.*

TKIP (Temporal Key Integrity Protocol) is an encryption protocol included as part of the IEEE 802.11 standard for wireless LANs. Designed to enhance WEP, TKIP uses the original WEP encryption but ‘wraps’ additional code at the beginning and end to encapsulate and modify it, encrypting each data packet with a unique encryption key.

Authentication

802.11 supports four subtypes of network authentication services: *Open*, *Shared*, *WPA*, and *WPA-PSK*. Under *Open* authentication, any wireless station can request authentication. The station that needs to authenticate with another wireless station sends an authentication management frame that contains the identity of the sending station. The receiving station then sends back a frame that indicates whether it recognizes the identity of the sending station.

Under *Shared* authentication, each wireless station is assumed to have received a secret shared key over a secure channel that is independent from the 802.11 wireless network communications channel.

Under *WPA and WPA-PSK* authentication, the use of 802.1x authentication is required. For wireless networks *without* a Remote Authentication Dial-In User Service (RADIUS) infrastructure, WPA supports the use of a pre-shared key. For wireless networks *with* a RADIUS infrastructure, Extensible Authentication Protocol (EAP) and RADIUS is supported.

Network Key:

This text box is used to specify a 5 or 13 ASCII character sequence or an equivalent 10 or 26 Hexadecimal digit sequence that matches the active WEP key on the access point.

- To assign a Network key, highlight **The key is provided automatically**, and uncheck the checkbox to disable this option.

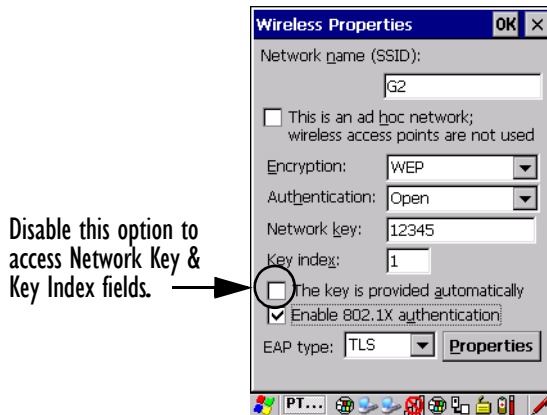


Figure 2.10 Accessing Network Key And Key Index

Key Index:

This field is used to identify the WEP key.

- Enter a value from **1** to **4**.

Enable 802.1x authentication

802.1X is the IEEE standard that offers additional security for local area networks. It provides authentication for user devices attached to an Ethernet network, whether wired or wireless. A security protocol packet such as TLS or MD5 encapsulated in an *EAP* is used in conjunction with the 802.1X standard to authenticate users at the MAC layer. Available EAPs are listed in the dropdown menu next to the *EAP* option.

- To activate *802.1X*, highlight **802.1x authentication**, and check the checkbox.

EAP Type (Extensible Authentication Protocol):

This dropdown menu lists the EAP types available on your system. The items in this dropdown menu will vary depending on your network setup. Keep in mind also that some authentication protocols require that you select a *Certificate*. By selecting the *Properties* button, you will be able to select a Certificate. “Certificate Assignment” on page 115 provides a website that outlines how to create certificates for your network.

- Saving and exiting the radio setup.
Once you have completed the configuration, press [ENTER] or tap on **OK**.

The connection you created will be listed in the *Wireless Information* tab as a preferred network. The radio will search for the SSID and will compare the WEP and authentication information you specified. If there is a match between your hand-held settings and the access point settings, the hand-held will communicate on the network through the access point.

2.4.1 Assigning An IP Address

If your network is not using a DHCP server, you will need to assign an IP address.

- In the *PTXCF8385P NI Settings* window, display the **IP Information** tab.

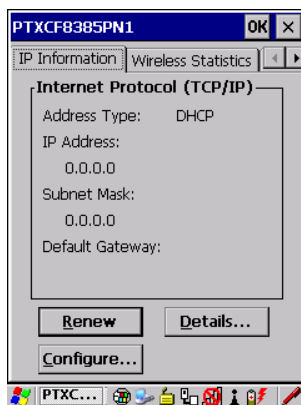


Figure 2.11 IP Information



Note: *Choosing the Renew button forces the 7535 G2 to renew or find a new IP address. This is useful if, for example, you are out of communication range for a longer period of time and your 7535 G2 is dropped from the network.*

To define a static IP address:

- Tap on the **Configure** button.

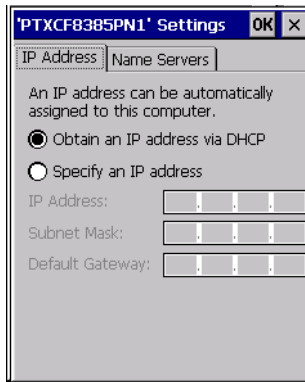


Figure 2.12 Defining An IP Address

- Tap the stylus on the radio button next to **Specify an IP address** to select it.
- Type an *IP*, *Subnet Mask* and *Default Gateway* address in the appropriate fields. Press [ENTER] to save your information.

2.4.2 Name Servers Tab



Note: *If DHCP is enabled, name server addresses are assigned automatically.*

- In the *PTXCF8385P N1 Settings* window, display the **IP Information** tab.
- In the *IP Information* tab, tap on the **Configure** button.
- Display the **Name Servers** tab.

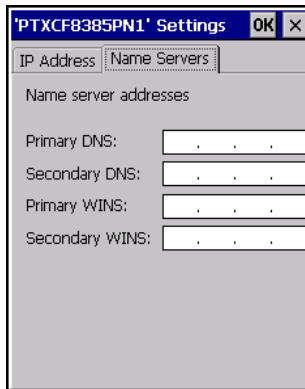


Figure 2.13 Name Servers Tab

The DNS and WINS fields in the *Name Servers* tab allow you to specify additional WINS and DNS resolvers. The format for these fields is ###.###.###.###.

2.4.3 Advanced Features

To display the *Advanced Wireless Settings* dialog box:

- Tap the **Advanced** button in the *Wireless Information* tab.

This window lists the available preferred networks.



Figure 2.14 Advanced Settings

2.4.3.1 Rearranging Preferred Networks

The 7535 G2 attempts to connect with the networks listed in this dialog box in sequence, beginning at the top of the list. If you need to rearrange this list of networks, move networks up and down in the list:

- Move the cursor into the *networks list*, and
In the networks list, highlight the **network** that you want to move up or down in the list.
- To move the highlighted item in the list upward or downward, tap on the **Up** or **Down** button.

2.4.3.2 Deleting A Preferred Network

To delete a network from this list:

- In the *networks list*, highlight the **network** that you want to remove.
- Tap on the **Delete** button.

2.4.3.3 Changing Network Properties

To change the properties of an existing preferred network:

- Highlight the **network** that you want to modify.
- Tap on the **Properties** button.
- Make any necessary changes in the *Wireless Properties* dialog box, and press [ENTER] to save the changes.

2.5 Checking The Scanner



Note: *Details about operating and troubleshooting scanners and RFID readers are provided under the heading “Internal Scanners” on page 50.*

If your 7535 G2 is equipped with an internal scanner, you can test it to ensure that it is operating properly. Point the scanner window at a bar code that your scanner was designed to decode—for example, a 1D UPC bar code or 2D bar code. Press the SCAN button or pistol trigger, and check for a valid decode on the hand-held’s screen. Performance is improved if you disable all unneeded bar codes in the *Bar Codes* screen. Review “Scanner Settings” on page 142 for details about bar codes.

2.6 Using Microsoft® ActiveSync®

ActiveSync®—Microsoft PC connectivity software—can be used to connect the hand-held to PCs running this software.



Note: *Keep in mind that you’ll need to run the USB Setup program to configure your workstation before connecting the 7535 G2 via USB. For information about the USB application, refer to Appendix D: USB Setup Application.*

By connecting the 7535 G2 to a PC with a cable and running ActiveSync on the PC, you can:

- View 7535 G2 files from Windows Explorer.
- Drag and drop files between the 7535 G2 and the PC in the same way that you would between PC drives.
- Back up 7535 G2 files to the PC, then restore them from the PC to the hand-held again, if needed, and so on.

To install ActiveSync, follow the step-by-step instructions provided with the program’s setup wizard. Refer to the following website for details:
<http://www.microsoft.com/windowsmobile/addons/default.mspx>

2.7 Calibrating The Touchscreen



Note: *Keep in mind that 7535 G2 hand-helds can be ordered with or without touchscreens, and that the touchscreen function can be turned off (see “Touch” on page 110).*

If you have the 7535 G2 touchscreen feature, it is factory-calibrated and ready-to-go; however, over time the touchscreen's operating parameters may change, and it may need to be recalibrated for correct operation. Refer to “Calibrating The Touchscreen” on page 42 for details.

2.8 Resetting The Hand-Held

Warm Reset

To execute a warm reset:

- Press and hold down the [BLUE] key and the [ENTER/ON] key simultaneously for a minimum of six seconds.

A warm reset closes open applications; any unsaved data are lost. Installed programs and saved data are preserved.



Note: *You do not need to reset your 7535 G2 after configuring the radio.*

Cold Reset



Important: *A cold reset returns the 7535 G2 to factory settings.*

There are two options when executing a cold reset: reset to the BooSt console or reset directly to the Windows CE operating system.

To execute a cold reset and access the BooSt menu:

- Press and hold down the [BLUE] key, the [ENTER] key, and the [SCAN] key, simultaneously for a minimum of six seconds.

After a cold reset, the BooSt menu appears.

- Type **1** to continue loading the Windows CE operating system.
- If you want a clean start, press **!** (that is, the [SHIFT] key and **1**). All data and settings are lost. Files and data stored in flash are preserved.

To execute a cold reset and launch the Windows CE operating system immediately:

- Press and hold down, in this order, the [BLUE], [ORANGE] and [ENTER] keys for a minimum of 6 seconds.

GETTING TO KNOW YOUR 7535 G2

3

3.1 Features Of The 7535 G2	31
3.2 The Battery	32
3.2.1 Battery Safety	32
3.2.2 Removing And Installing The Battery Pack	32
3.2.3 Battery Chargers	33
3.3 Switching The Hand-Held On And Off.	34
3.4 The Keyboard	35
3.4.1 Modifier Keys	35
3.4.1.1 Activating Modifier Keys	35
3.4.1.2 Locking Modifier Keys	36
3.4.2 The Keys	36
3.4.3 Function Keys, Softkeys And Macro Keys.	37
3.4.4 Alphanumeric Keyboard – 58-Key	39
3.4.5 Numeric Keyboard – 36-Key	39
3.4.6 The Keypad Backlight	41
3.5 The Display	42
3.5.1 Adjusting The Display Backlight.	42
3.5.2 Adjusting The Contrast	42
3.5.3 Calibrating The Touchscreen	42
3.6 7535 G2 Indicators	44
3.6.1 LEDs	44
3.6.1.1 Charge LED	45
3.6.1.2 Radio Traffic LED	45
3.6.1.3 Scan LED	46
3.6.1.4 User Application LED	46
3.6.2 Onscreen Indicators.	46
3.6.3 Audio Indicators	49
3.6.3.1 Adjusting The Beeper Volume.	49
3.7 Internal Scanners	50
3.7.1 Scanning Techniques	51
3.7.2 Scan LED Indicators	51
3.7.3 Troubleshooting.	52
3.7.4 Operating One Dimensional (1D) Internal Laser Scanners	52

3.7.5	Operating Internal PDF Laser Scanners	53
3.7.6	Operating Internal Two Dimensional (2D) Imager Scanners	53
3.7.7	Operating RFID/Scanner Modules	54
3.8	Connecting And Disconnecting Tethered Peripherals.	54
3.9	Monitoring The Battery And Maximizing Run Time	56
3.9.1	Storing Batteries.	57
3.10	Monitoring The Network Connection	57
3.11	Uploading Data In A Docking Station	58
3.12	General Maintenance.	58
3.12.1	Caring For The Touchscreen.	58
3.12.2	Cleaning The 7535 G2.	58

3.1 Features Of The 7535 G2

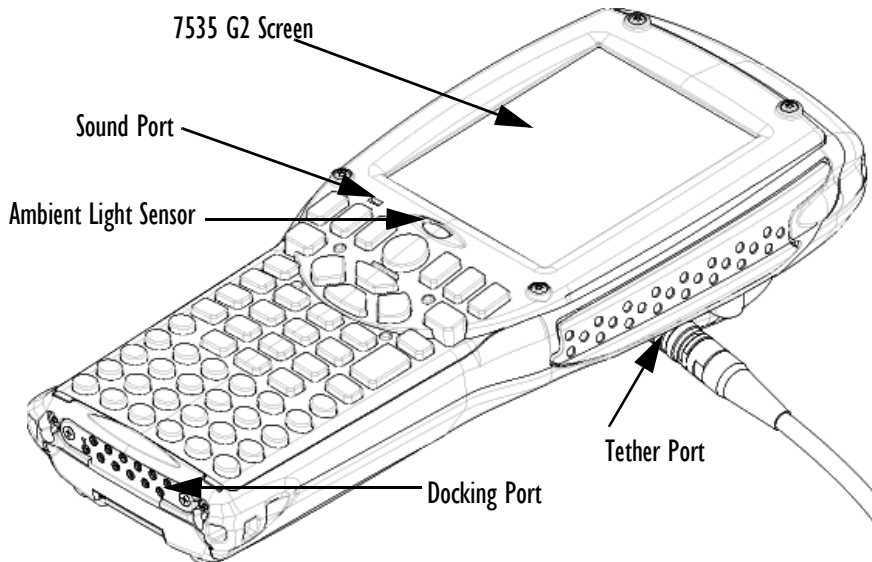


Figure 3.1 Front Of 7535 G2

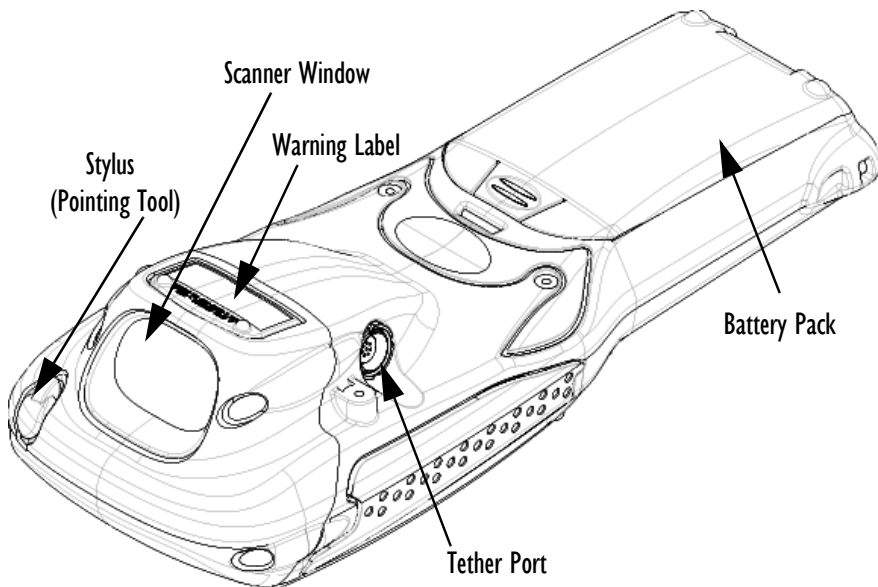


Figure 3.2 Back Of 7535 G2

3.2 The Battery

The hand-held operates with a Lithium-Ion battery pack. Preparing the unit for operation requires that a battery pack be charged and installed in the 7535 G2.

3.2.1 Battery Safety



Important: *Before attempting to install, use or charge the battery pack, it is critical that you review and follow the important safety guidelines in the section entitled “Lithium-Ion Battery Safety Precautions” on page xxiv.*

3.2.2 Removing And Installing The Battery Pack



Important: *Always switch the unit off before changing the battery. If you do not turn the hand-held off before removing the battery, it may be necessary to reboot the unit. Any active sessions may be lost. While the battery is being replaced, the 7535 G2 will save its current data for up to 20 minutes.*

Removing The Battery Pack

- If your unit is equipped with a hand strap, unhook it from the base of the battery.
- Press down the release tab at the top of the battery, and slide the battery out.

Installing The Battery Pack

To install the battery pack:

- Slide the battery pack with the contoured plastic facing you into the 7535 G2. Click the battery into place.

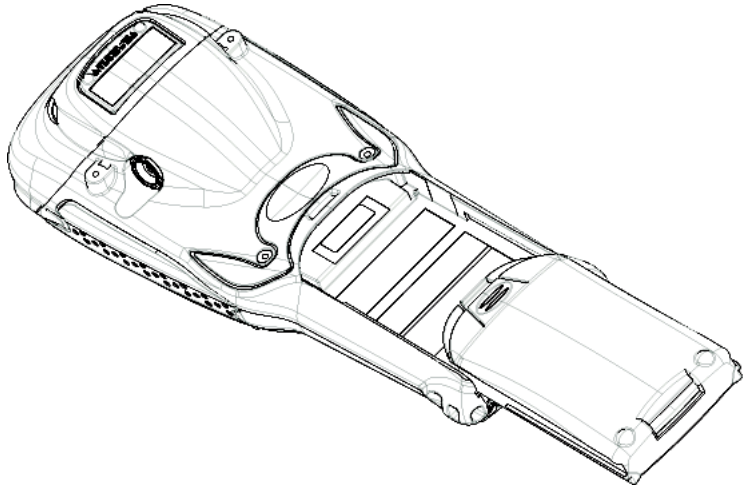


Figure 3.3 Installing The Battery Pack

- If your computer is equipped with a hand strap, insert the hook at the end of the hand strap into the slot at the base of the battery.

3.2.3 Battery Chargers



Important: *FOR DETAILED INFORMATION about chargers and docking stations, refer to Chapter 6: Peripheral Devices & Accessories beginning on page 211. For battery safety, refer to “Lithium-Ion Battery Safety Precautions” on page xxiv.*

All batteries must be charged before use. The battery can be charged with a variety of chargers. These include:

- 6-Unit Gang Charger (Model #HU3006): charges up to six Lithium-Ion batteries at one time.
- Portable Docking Module (Model #HU4001 or HU1005 and HU3220): charges the 7535 G2 battery (with the battery installed in the unit).
- Combo Charger (Model #HU3002): a desktop charger that charges the internal battery along with a spare battery pack.
- Combo Docking Station (Model #HU4002): operates as both a charger and a docking station. Operating as a charger, both the battery installed in the computer and a spare battery can be charged simultaneously.

Switching The Hand-Held On And Off

- Quad Docking Station (Model #HU4004): can charge the battery of up to four hand-helds inserted in the docking station while transferring data through an Ethernet connection.
- Powered Cradle (Model # HU1010): can charge the hand-held with the battery installed in the hand-held.

It can take from 1.5 to 4 hours to charge a battery. The unit's intelligent charging system protects the battery from over-charging by terminating the charge process when the battery is at maximum capacity.



Note: Refer to “Monitoring The Battery And Maximizing Run Time” on page 56 for additional information about the battery.



Important: To avoid damaging the battery, chargers will not begin the charge process until the battery temperature is between 0° C (32° F) and 39° C (102° F). If the battery is too hot or cold, the battery status LED flashes yellow and the charge is suspended. Refer to Table 3.1, “Charge LEDs” on page 45 for details.

3.3 Switching The Hand-Held On And Off

Switching On The Unit

- Press and hold down the [ENTER/ON] key for at least one second.
- When all four LEDs flash yellow, release the [ENTER/ON] button.



Note: If the 7535 G2 is in suspend state, pressing [ENTER/ON] key ‘wakes’ the unit from this state. The screen in which you were working before the computer entered suspend state is displayed.

Switching Off The Unit



Important: Keep in mind that turning off the 7535 G2 does not result in a complete reboot; rather, the unit enters a power-saving, “suspend” state. When the 7535 G2 is turned on from suspend state, operation resumes within a few seconds.

To switch off the 7535 G2:

- Press the [BLUE] key, and then press the [ENTER/ON] key.



Important: *If the word 'BLUE' is displayed in uppercase in the taskbar area at the bottom of the screen, this key is locked "on" and the 7535 G2 will not switch off. Press the [BLUE] key twice followed by [ENTER/ON] to switch the 7535 G2 off.*

If, however, you've disabled the "Blue Key" in the 'One Shot' dialog box (see "Keyboard One Shot Modes" on page 95), the 7535 G2 can be turned off even when the [BLUE] key is locked 'on'.

3.4 The Keyboard

The 7535 G2 offers two types of keyboard layouts: a 58-key keyboard and a 36-key, large button keyboard. Most of the keys on these keyboards operate much like a desktop computer. Where a key or key function is not consistent with the PC keyboard, the differences are noted.

The [BLUE] and [ORANGE] modifier keys provide access to additional keys and system functions. These functions are colour coded in *orange* and *blue* print above the keyboard keys.

3.4.1 Modifier Keys

The [SHIFT], [CTRL], [ALT], [BLUE] and [ORANGE] keys are *modifier* keys. Pressing a modifier key changes the function of the next key pressed. For example, on a 7535 G2 58-key keyboard, a square bracket is printed in *orange* print above the [4] key. Pressing the [ORANGE] key followed by the [4] key displays a square bracket rather than the number 4.

The [SHIFT], [CTRL] and [ALT] keys operate much like a desktop keyboard except that they are not chorded (two keys held down simultaneously). The modifier key must be pressed first followed by the key whose function you want modified.

3.4.1.1 Activating Modifier Keys

When a modifier key is pressed once, it is displayed in lowercase letters in the taskbar at the bottom of the hand-held screen. For example, if the [CTRL] key is pressed, *ctrl* key is displayed at the bottom of the unit screen. Once the next key is pressed, the modifier key becomes inactive and disappears from the taskbar.

Locking Modifier Keys

3.4.1.2 Locking Modifier Keys

When a modifier key is pressed twice, it is ‘locked’ on. A ‘locked’ modifier key is displayed in uppercase letters in the taskbar. For example, pressing the [BLUE] key twice locks it on—it is displayed as BLUE KEY in the taskbar at the bottom of the computer screen.

The locked modifier key will remain active until it is pressed a third time to unlock or turn it off. Once a modifier key is unlocked, the uppercase representation at the bottom of the screen is no longer displayed.



Note: *The locking function of the [ORANGE] and [BLUE] keys can be disabled so that pressing either of these keys **once** will lock the keys ‘on’. If you disable the ‘One Shot’ function of either of these keys, pressing the [BLUE] and/or [ORANGE] key once will lock the key ‘on’. Pressing the same key a second time will unlock or turn it ‘off’. Refer to “Keyboard One Shot Modes” on page 95 for details.*

3.4.2 The Keys

The [SHIFT] Key

The [SHIFT] key is used to display uppercase alpha characters and provide access to the symbols above the numeric keys.

The Arrow Keys

The Arrow keys move the cursor around the screen in the direction of the arrow: up, down, left and right. The cursor is the flashing box or underline character that indicates where the next character you type will appear.

The [BKSP/DEL] Key

The [BKSP] key (sometimes referred to as destructive backspace) moves the cursor one character to the left, erasing the incorrectly entered key stroke.

The [DEL] key ([BLUE] [BKSP]) erases the character at the cursor position.

The [CTRL] And [ALT] Key

The [CTRL] and [ALT] keys modify the function of the next key pressed and are application dependent.

The [TAB] Key

Typically, the [TAB] key moves the cursor to the next field to the right or downward.

The [ESC] Key

Generally, this key is used as a keyboard shortcut to close the current menu, dialog box or activity and return to the previous one.

The [SPACE] Key

Pressing this key inserts a blank space between characters. In a Windows dialog box, pressing the [SPACE] key enables or disables a checkbox.

The [SCAN] Key

Pressing the [SCAN] key—the yellow key with the star-burst scan symbol on it—activates the scanner beam while pressed. For units that *do not have* internal scanners, this key can be re-mapped to another function.

3.4.3 Function Keys, Softkeys And Macro Keys

In addition to the standard keyboard functions (see “The Keyboard” on page 35), The 7535 G2 supports function keys, softkeys and macro keys.

3.4.3.1 Function Keys

58-Key Keyboard Function Keys

The 7535 G2 58-key keyboard is equipped with thirty function keys. Function keys [F1] to [F6] are located across the top of the keyboard and are directly accessible, a key combination is not required. Function keys [F7] to [F30] are colour coded in blue print above the alpha keys and are accessed using a key combination, [BLUE] followed by the appropriate alpha key.

To access function keys [F7] to [F30]:

- Press the [BLUE] key followed by the alpha key to which the function key you want to use is mapped. For example:
To access function key [F7], press [BLUE] [C].
To access function key [F8], press [BLUE] [D], and so on.

36-Key Keyboard Function Keys

The 36-key keyboard is equipped with thirty function keys. Function keys [F1] to [F4] are located across the top of the keyboard and function keys [F5] to [F10] are located at the bottom of the keyboard.

Additional function keys, [F11] to [F20], are colour coded in orange print above function keys [F1] to [F10].

To access function keys [F11] to [F20]:

- Press the [ORANGE] key followed by the appropriate function key.
For example:
To access function key [F11], press the [ORANGE] key followed by [F1].
To access function key [F12], press [ORANGE] followed by [F2],
and so on.

To access function keys [F21] to [F30], you'll need to press [SHIFT] [F1] to [F10].

To access function keys [F21] to [F30]:

- Press the [SHIFT] key followed by the appropriate function key.
For example:
To access function key [F21], press the [SHIFT] key followed by [F1].
To access function key [F22], press [SHIFT] followed by [F2],
and so on.



3.4.3.2 Macro Keys

Important: *Refer to “Keyboard Macro Keys” on page 96 for details about creating macros.*

7535 G2 hand-helds are equipped with a series of macro keys that can be programmed to replace frequently used keystrokes, along with the function of executable keys like the [ENTER] key, the [BKSP] key, any function key and arrow key, and so on.

Alphanumeric Keyboard Macro Keys

Alphanumeric (58-keys) keyboards have twelve macro keys: [M1] to [M12]. These keys are colour coded in orange print above alpha keys [O] to [Z].

To access a macro key:

- Press the [ORANGE] key followed by the appropriate alpha key from O to Z. For example:
To access macro key [M1], press [ORANGE] [O].
To access macro key [M2], press [ORANGE] [P], and so on.

Numeric Keyboard Macro Keys

Numeric keyboards (36-keys) are equipped with six macro keys: [M1] to [M6]. Macro keys [M1] to [M2] are directly accessible in the bottom row of the keyboard—a key combination is not required.

Macro keys [M3] and [M4] are colour coded in orange print above macro keys [M1] and [M2].

- To access [M3], press the [ORANGE] key followed by [M1]
- To access [M4], press [ORANGE] [M2].

Macro keys [M5] to [M6] are colour coded in blue print above macro keys [M1] and [M2].

- To access [M5], press the [BLUE] key followed by [M1].
- To access [M6], press [BLUE] [M2].

3.4.4 Alphanumeric Keyboard – 58-Key

In addition to alphanumeric keys that are directly accessible on the keyboard (no key combination is required) and the keys described in this chapter, the 58-key keyboard also provides function keys and macro keys.

Function keys [F1] through [F24] can be used with the CE operating system or another application. The additional function keys, [F25] through [F30] along with the macros, are not used as part of the Windows CE operating system.

All function keys and macro keys can be custom defined for each application. The TekTerm application utilizes these keys (for detailed information, see the *TekTerm Software User Manual*, P/N 8000073). Refer to “Function Keys, Softkeys And Macro Keys” on page 37 for details about accessing function keys [F25] to [F30].

3.4.5 Numeric Keyboard – 36-Key

On 36-key 7535 G2s, all alpha characters are printed on the unit plastic in orange typeface above the numeric keys. An indicator in the left corner of the taskbar displays the currently selected character. To access an alpha character, first press the [ORANGE] key and then press the numeric key above which the alpha character you want to type is printed.

Choosing A Single Alpha Character



Note: *The following examples assume that the [ORANGE] key is enabled as 'Lock' mode in the 'One Shot' screen (accessible through the Control Panel Keyboard icon). In 'Lock' mode, pressing the [ORANGE] key once locks it 'on'. Refer to "Keyboard One Shot Modes" on page 95 for details.*

The examples below illustrate how to access A, B and C, all of which are printed in *orange* characters above the numeric key, [2].

To choose the letter 'a':

- Press the [ORANGE] key, and press the numeric key [2].
- Press the [ORANGE] key again to unlock or turn it off.

To choose the letter 'b':

- Press the [ORANGE] key, and press [2] twice.
- Press the [ORANGE] key again to unlock or turn it off.

To choose the letter 'c':

- Press the [ORANGE] key, and press [2] three times.
- Press the [ORANGE] key again to unlock or turn it off.

Creating Uppercase Letters

To display a capital letter:

- Press the [ORANGE] key and then the [SHIFT] key before typing the alpha character.



Note: *If you want to use uppercase characters at all times, press [BLUE] [SHIFT]. An icon of an uppercase 'A' is displayed in the taskbar indicating that all letters will be displayed as uppercase characters.*

Choosing Multiple Characters From The Same Key

If you need to choose more than one alpha character from a single key, you'll need to press the **Accept** key between alpha selections. The *Accept* key is presented as an arrow \Rightarrow symbol above the 0 (zero) key.

For example, suppose you want to type the letters 'a', 'b' and 'c'. These letters are all accessible from the numeric key, [2].

To type the letter 'a':

- Press the [ORANGE] key, and then press the numeric key, [2].

- Press the **Accept** key [=⇒] (zero key) to indicate that the letter ‘a’ should be accepted and that another letter from the same key will be chosen.

To type the letter ‘b’:

- Press the [2] key twice, and press [=⇒] to accept the letter ‘b’.

To type the letter ‘c’:

- Press the [2] key three times.

When you have completed your alpha selections *from this key*, you can do one of the following:

- If you want to choose additional alpha characters from **another** key(s), leave the [ORANGE] key ‘on’, and press the numeric key with the alpha character you require, **or**
- If you **do not** want to choose any additional alpha characters, press [ORANGE] again to unlock or turn ‘off’ the key and end alpha selection.

Choosing Multiple Characters From A Range Of Keys

If you plan on choosing alpha characters from a number of different keys, you are **not** required to press the *Accept* [=⇒] key after each alpha selection. The [=⇒] key is only required when you are choosing more than one alpha character from the **same** key, e.g. ‘a’, ‘b’ and ‘c’ from the [2] key.

Suppose you want to type the letters ‘a’, ‘d’ and ‘g’. These alpha characters are accessed from the numeric keys [2], [3] and [4].

- With the [ORANGE] key locked ‘on’, press [2] to type the letter ‘a’.
- Press [3] to type ‘d’, and press [4] to type the letter ‘g’.
- To end alpha selection, press the [ORANGE] key again to unlock it.

3.4.6 The Keypad Backlight

The intensity of the keypad backlight and the conditions under which this backlight is activated can be configured using the *Keyboard* icon in the Windows CE *Control Panel*. The behaviour of the keypad backlight is tailored in the *Keyboard Properties* dialog box. Refer to “Keyboard Backlight” on page 94 for details about this option.



Note: *Keep in mind that this option may be restricted to supervisory use only.*

3.5 The Display

7535 G2s are equipped with display backlighting to improve character visibility in low light conditions. The backlight switches on when a key is pressed and the ambient light is below the set threshold. A light sensor on the front of the hand-held determines the ambient light level. On some displays, the contrast can also be adjusted to further improve character visibility.

3.5.1 Adjusting The Display Backlight

The behaviour of the display backlight (the ambient light threshold below which the backlight will become active) and the intensity of the backlight can be specified in the *Display Properties* dialog box in the *Control Panel*.





Note: Refer to “*Display Backlight*” on page 90 for details about the *Display Properties* dialog box.



3.5.2 Adjusting The Contrast



Note: In addition to the manual adjustments described in this section, the display contrast can also be adjusted using the *Windows CE Control Panel*. Refer to “*Display Backlight*” on page 90 for details about this dialog box.

The display contrast can be adjusted from the unit keyboard using the [BLUE] key and function keys [F1] and [F2]. Pressing [F1]  darkens the display, and pressing [F2]  lightens the display. Keep in mind that adjusting the contrast on a colour display is much less pronounced than on a monochrome display.

To adjust the display contrast:

- Press the [BLUE] key twice to lock it on, and then press [F1]  to darken the display or [F2]  to lighten the display.
- Once you’ve successfully adjusted the display contrast, remember to press the [BLUE] key again to turn it ‘off’.



Note: Contrast settings are optimized for the maximum readability. However, if the display jitters or flickers, consider adjusting the contrast at power up.

3.5.3 Calibrating The Touchscreen

If your 7535 G2 touchscreen has never been calibrated, or if you find that the stylus pointer is not accurate when you tap on an item, use the *Stylus Properties* dialog box in the *Control Panel* to recalibrate the screen.

- In the *Control Panel*, choose the **Stylus** icon to display the *Stylus Properties* window.



Figure 3.4 Stylus Icon

- Select the **Calibration** tab, and then choose the **Recalibrate** button.



Figure 3.5 Calibration Screen

- Follow the directions on the calibration screen to calibrate the screen.

3.6 7535 G2 Indicators

7535 G2s use LEDs (Light Emitting Diodes), onscreen messages and audio tones as indicators.

3.6.1 LEDs

Hand-helds are equipped with four tri-coloured LEDs. This section outlines what these LEDs indicate.



Important: *If an LED is illuminated in red, the operator should be cautious as this generally indicates an abnormal operating condition or active laser emission.*



Figure 3.6 Keyboard LEDs

3.6.1.1 Charge LED

The lower-right LED is reserved for internal charger/power status. This indicator is active even when the hand-held is inserted in a docking station (and in suspend mode) so that the charge status of the battery can be detected easily.

Function	Charge LED Behaviour
External power not available.	LED off.
Fully charged to within 95% of charge capacity.	LED displays solid green colour.
Quick charge successfully completed to within 75% of charge capacity.	LED flashes slow green.
Charge in progress.	LED displays solid yellow colour.
Cell temperature out of range for charge.	LED flashes yellow.
Unable to charge battery.	LED displays solid red colour.
Charge circuit failure.*	LED flashes fast red.*

Table 3.1 Charge LEDs

* If the charge fails, refer to the charger troubleshooting sections in Chapter 6: “Peripheral Devices & Accessories” for helpful details.

3.6.1.2 Radio Traffic LED

The upper-left LED on your unit flashes either yellow or green to indicate when the radio transmits and receives data.



Note: Keep in mind that while the standard 802.11g radio supports the transmit/receive LED, not all radios support this function.

Function	Radio Traffic LED Behaviour
Radio Transmit	LED flashes yellow.
Radio Receive	LED flashes green.

Table 3.2 Transmit and Receive LEDs

3.6.1.3 Scan LED

Successful scans are indicated in two ways: with a scan LED and with an audio tone.

Function	Scan LED Behaviour
Scan in progress	LED displays solid red during scan.
Successful scan	LED displays solid green after decode. Off when scan ended.
Unsuccessful scan	LED flashes red.

Table 3.3 Scan LED

3.6.1.4 User Application LED

This indicator is available for user-loaded custom Windows CE applications. Refer to the *7535 G2 SDK Manual* for details about this LED. Neither Windows CE nor TekTerm use this LED.

3.6.2 Onscreen Indicators

The taskbar at the bottom of the screen displays a variety of system status indicators.

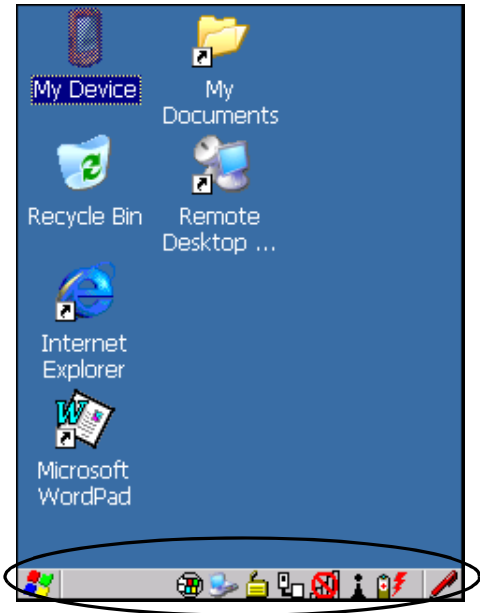


Figure 3.7 Taskbar

The taskbar changes dynamically, and only those icons that are applicable are displayed. For example, if a radio is not installed in your 7535 G2, the radio signal icon is not displayed in the taskbar.



Windows® Start Button

If you are using the touchscreen, you can either tap the Windows icon at the bottom left of the screen, or press [BLUE] [0] to display the *Start Menu*, and then tap on the desired application.



Modifier Key Indicators

[SHIFT], [CTRL], [ALT], [BLUE] and [ORANGE] are modifier keys that have onscreen indicators to show when a key is active or locked. If a modifier key is pressed once to activate it, the key is displayed in the taskbar in *lowercase* characters, for example, pressing the [BLUE] key once displays **blue key** in the taskbar. If a modifier key is pressed twice, it is 'locked on' and the onscreen indicator is displayed in *uppercase* letters in the taskbar, for example, pressing [BLUE] twice displays **BLUE KEY** in the taskbar.



Battery Gauge

The battery shaped icon displayed in the taskbar provides a visual indication of the remaining battery power. The icon acts as a meter that is either full, at three-quarter level, half, quarter level or empty.

When the battery level is low—approximately 15 minutes from empty—a warning window pops up. When the battery power is completely depleted, a final warning window indicates that the 7535 G2 will be powered down.

If the 7535 G2 is using external AC power, an AC icon is displayed in the taskbar.



Full



75%



50%



25%



Empty



AC Connection



Battery Charge

The battery charge icon is displayed in the taskbar when the hand-held battery is being charged.



802.11 Radio Signal Quality

Increasing radio signal quality is represented by longer, filled bars within this icon.



Good
Reception



Weak
Reception

No Radio
Link



Tethered Devices

When a peripheral is attached to the tether port and activated, an associated icon appears in the taskbar.



Scanner



USB Device



RFID



Serial Device



Docking Device

When a hand-held is inserted in a docking station, charger or cradle, an associated icon appears in the taskbar.



Gang Charger, Combo Charger &
Combo Docking Station



Quad Docking Station



Power Cradle



Portable Docking
Module (PDM)



Bluetooth Radio

This icon displayed in the taskbar represents the installed Bluetooth radio.



Security Level



Security levels can be set to limit user access. In addition, applications can be restricted to prevent inadvertent changes.

Wireless WAN

These icons provide access to and information about the 7535 G2 GSM/GPRS wide area networking status. Refer to Appendix E: Wireless Wide Area Network (WWAN) for details about each of these taskbar icons.



3.6.3 Audio Indicators


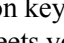
The beeper provides a variety of sounds and can be configured to emit a sound when a key is pressed, a keyboard character is rejected, scan input is accepted or rejected, an operator's entry does not match in a match field or the battery is low. The volume function keys are located in the top row of the keyboard. The *increase* volume key is labelled with a plus symbol  and the *decrease* volume function key is labelled with a minus symbol .

3.6.3.1 Adjusting The Beeper Volume

On 58-key and 63-key keyboards, the volume function keys are accessed by pressing [BLUE] [F5] and [F6].

On 36-key and 37-key keyboards, the volume function keys are accessed by pressing [BLUE] [F3] and [F4].

To adjust the beeper volume:

- Press the [BLUE] key twice to lock the key 'on' and then, press the *increase volume* function key  or the *decrease volume*  function key until the volume meets your requirements.
- Remember to press the [BLUE] key again to turn it 'off'.

3.7 Internal Scanners



Important: For detailed scanner specifications and decode zone tables, refer to “Internal Scanner Specifications” beginning on page 241.

The 7535 G2 supports a wide range of scanner options to address a variety of user application requirements. The scanner installed in your unit can be configured using the *Scanner Settings* dialog box in the *Control Panel* (see page 142) and the *Manage Triggers* application (see page 110). External, *non-decoded* scanners are also configured through the *Scanner Settings* and *Manage Triggers* applications.

However, external *decoded* scanners must be configured by scanning special configuration bar codes. In these cases, the scanner manufacturer provides programming manuals for configuration purposes.

- For Symbol decoded scanners, refer to the appropriate programming guide:
 - LS3408
- For Symbol non-decoded scanners, refer to the *LS3200 Programming Guide*.
- For PowerScan® (PSC) decoded and non-decoded scanners, refer to the *PowerScan Programing Guide (PSC)*.

Scanner types include:

- Advanced Long Range: reads very large 1D bar codes (60 mil+) at very long distances (up to 14m).
- Long Range: reads large 1D bar codes (55 mil) at long distances (up to 3m).
- High Performance: reads 1D linear bar codes (5 - 55 mil) at medium distances (up to 1m).
- Extended Range: reads regular 1D bar codes (5 - 55mil) at short to medium distances (1m), as well as large 1D bar codes (e.g. 55 mil) at long distances.
- RFID: The RD7950 UHF RFID Reader is an EPC-compliant 900MHz RFID reader which can be integrated with laser bar code scanning or imaging.
- Fuzzy Logic: reads damaged or low contrast regular 1D bar codes (5 - 55mil) at medium distances (up to 1m).
- PDF Raster Laser: reads 2D PDF bar codes or regular 1D bar codes at short to medium distances.
- 2D Imager: reads regular 1D and all 2D bar codes at short to medium distances.
- 1D Imager: reads regular 1D and PDF417 bar codes at short to medium distances.

It is critical that you review the “Laser Warnings” on page xxiii in the “Approvals and Safety” section at the beginning of this manual before using any of the scanners described in this chapter. “Scanning Techniques” on page 51 outlines the mechanics of a successful scan. In addition, review “Scan LED Indicators” on page 51 to better understand how to interpret whether or not a bar code has been successfully scanned. Finally, “Troubleshooting” on page 52 provides some helpful suggestions should the scan fail.

3.7.1 Scanning Techniques



Note: *The scanning techniques described here apply to internal and external scanners.*

- Hold the scanner at an angle. Do not hold it perpendicular to the bar code.
- Do *not* hold the scanner directly over the bar code. In this position, light can reflect back into the scanner’s exit window and prevent a successful decode.
- Scan the entire bar code. If you are using a 1D or PDF laser scanner, make certain that the scan beam crosses every bar and space on the bar code, including the margins on either end of the symbol.
- If you are using a 2D imaging scanner, make certain the red, oval shaped framing mark is centered within the bar code you want to scan.
- When using imaging scanners, do not move the scanner while decoding the bar code. Movement blurs the image.
- Hold the scanner farther away for larger bar codes.
- Hold the scanner closer for bar codes with bars that are close together.

3.7.2 Scan LED Indicators

The scanner LED (the lower-left LED) indicates whether or not your scan is successful. The LED behaves as follows:

- Scan In Progress: scan LED displays solid red colour.
- Successful Scan: scan LED displays solid green colour and turns off when the scan is ended.
- Unsuccessful scan: scan LED flashes red.

A bar code icon appears on the screen during a scan. While the scanner beam is active, the onscreen message states: SCANNING. If you want to turn off the onscreen message, disable “Scan Indication” in the *Options* tab of the *Scanner Settings* menu in the Control Panel

Troubleshooting

When the scan is successful, the bar code data is displayed on the screen until the scan button (or pistol trigger) is released, but only if “Scan Result” is turned on in the *Options* tab of the *Scanner Settings* menu in the Control Panel.

3.7.3 Troubleshooting

If the scanner is not working, investigate the following:

- Is the unit on?
- Check that the bar code symbology being scanned is enabled for the hand-held you are using. Check any other parameters that affect the scanning procedure or the bar code.
- Check the bar code to make sure it is not damaged. Try scanning a different bar code to verify that the problem is not with the bar code.
- Check that the bar code is within the proper range.
- Does the hand-held display the warning without scanning? This suggests a hardware problem in the hand-held.
- Is the laser beam scanning across the bar code?
- Once the scan beam has stopped, check the scanner window for dirt or fogging.

3.7.4 Operating One Dimensional (1D) Internal Laser Scanners

- Turn the hand-held on. Wait until the unit has booted up completely.



Important: *If an aiming dot is available on the installed scanner, the dot will be enabled for a configurable time period (including off), after which normal scanning begins. Refer to “Dot Time (msec)” on page 145 for details.*

Double-clicking the trigger will override the aiming delay and initiate an immediate scan. Note that the aiming dot is standard on long-range and high visibility internal scanners.

- Aim at the bar code and press the scan key or the trigger. A scan beam and a warning indicator appear until a successful decode is achieved or six seconds have elapsed.

3.7.5 Operating Internal PDF Laser Scanners

This scanner decodes PDF417 two-dimensional bar codes.

- Turn the hand-held on. Wait until the unit has booted up completely.
- Aim at the bar code and press the scan key or the trigger. The beam expands into a rectangle covering the bar code to properly scan it. The scan beam and a warning indicator are visible until a successful decode is achieved or three seconds have elapsed.

3.7.6 Operating Internal Two Dimensional (2D) Imager Scanners

An imager scanner takes a snap shot of a single bar code or multiple bar codes (at one time). It can find a bar code regardless of its orientation—that is, even a bar code printed at a 45 degree angle to the hand-held will be decoded successfully.



Note: *When scanning **multiple** bar codes, ensure that all of the desired bar codes are within the field of view of the scanner. It is possible that even when all bar codes are within the field of view, not all of them will be decoded. Only successfully decoded bar codes are passed to the application program. The application program then issues a warning, asking that you scan the missing bar codes.*

*When scanning a **single** bar code, ensure that only the desired bar code is within the field of view of the scanner.*

Because imager scanners generally have a shorter depth of field than laser scanners, some practise may be required to find the optimal distance from the types of bar codes being scanned. Although the imager includes illumination LEDs, ambient light will help the imager decode the bar codes, especially if the bar code is far from the hand-held.



Important: *Keep in mind that the imager scanner is a camera, and the LED illumination is a flash. Glare can be an issue on reflective media such as plastic coated bar codes, just as glare is an issue for photographers. When pointing at a shiny surface, either shift the bar code to the side or top, or angle the bar code so that the glare reflects away from the imager scanner.*

Most imagers take several ‘snap shots’ of the bar code in order to decode it. It is normal for the LEDs to flash two or three times. Hold the unit steady between flashes to improve decode performance.

Operating RFID/Scanner Modules

- Turn the hand-held computer on. Wait until the unit has booted up completely.
- Aim at the bar code and press the scan key or the trigger. Hold the trigger until a successful or failed scan result is obtained.
- When the scan button or trigger is pressed, a red, oval shaped light (the framing marker) is displayed. Centre the framing marker in the field—either in the centre of the bar code you want to scan or in the centre of the area in which multiple bar codes are to be scanned.

The illumination LEDs will flash (typically several times) and a picture of the bar code(s) is taken.

3.7.7 Operating RFID/Scanner Modules

For detailed information on the RD7950 RFID Reader refer to Appendix B: RD7950 Integrated UHF RFID Reader.



Important: *For successful reads, the distance from the hand-held to the RFID tag varies depending on the type of tag.*

3.8 Connecting And Disconnecting Tethered Peripherals

Tethered peripherals such as scanners and printers connect to the hand-held computer with a quick release, circular connector. When a peripheral is connected to the hand-held, the unit detects the peripheral and loads the necessary drivers for it. An icon in the taskbar at the bottom of the screen provides a visual representation of the peripheral and indicates that it is ready for operation. To attach the peripheral to the round, tether port on the side of the unit:

- Insert the barrel of the plug into the tether port and rotate slowly until it clicks into place. The red dot on the port and on the connector should be aligned.

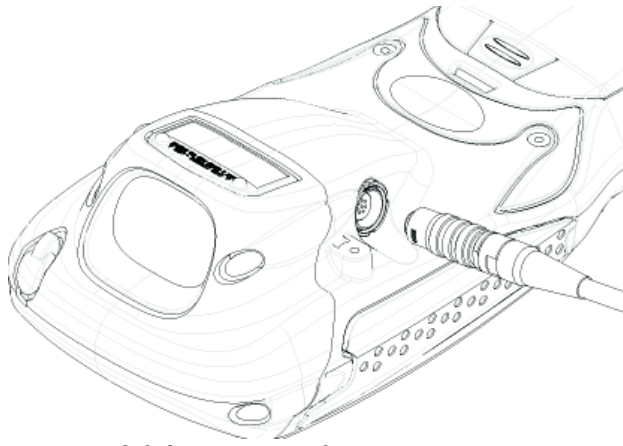


Figure 3.8 Attaching The Cable To The Tether Port

To remove the peripheral:

- Grasp the *shell* of the plug, and pull it back gently to unlock and release the connector.

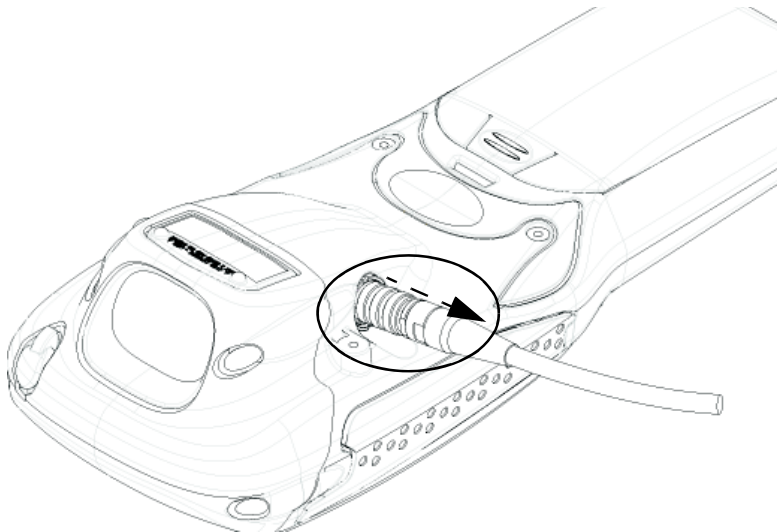


Figure 3.9 Disconnecting The Tether Cable



Important: *Never attempt to disconnect a peripheral by pulling the connector by the wire. The connector is locked into place and can only be unlocked and removed by pulling back the plug shell.*

3.9 Monitoring The Battery And Maximizing Run Time

Under normal operating conditions, fully charged batteries last for 8 hours. As Lithium-Ion batteries age, their capacity decreases gradually, and they are generally considered depleted after approximately 2 years of use (less than 60% of original capacity remaining). Keep in mind however that heavy usage or operating the 7535 G2 at temperature extremes will shorten the battery life.

Lithium-Ion batteries do not require conditioning cycles and the 7535 G2 battery system (including chargers) requires no user interaction to maintain peak performance.

To maximize the run time of your batteries, consider the following:

- The display backlight is the largest drain on the battery. Try to keep its brightness as low as possible. Adjusting the keyboard backlight also helps.
- The hand-held is ‘event’ driven. That is, when the unit is not in use, it reverts to *sleep* mode (even when it appears to be running), saving battery power. Events include a key press, touchscreen taps and scan triggers. Power consumption is reduced if you avoid unnecessary events, and allow the unit to *sleep* as much as possible.
- The hand-held battery is a ‘smart battery’ with built-in intelligence. The taskbar battery icon is a linear gauge used to estimate the remaining run time of the battery. It is important to note that the battery capacity icon displays quarter percentages of *nominal* capacity (the capacity of a new battery). An aged battery, even when fully charged, shows somewhat less capacity than nominal.

Double-tapping on the battery icon displays a dialog box that provides detailed information about the battery status and performance. If the remaining capacity indication seems inaccurate, the battery may need recalibration. Recalibration requires that the battery be fully charged, discharged and then charged again before use. *If the battery is fully discharged and charged on a regular basis, recalibration should not be necessary.*

- When the hand-held is switched off, it goes into a low-power, suspend state but continues to draw a small amount of power from the battery. This should not be an issue unless the unit is left in suspend state for more than a week—in this case, the battery should be removed.
- Batteries left unused for durations of more than one or two months should be fully charged, operated in the hand-held until the battery is empty (i.e. the low battery warning appears), and then charged again before use. This recalibrates the gas gauge and allows the internal electronics to determine

the actual capacity of the battery. See “Battery Gas Gauge Calibration” on page 214 for a detailed discussion of battery calibration.

3.9.1 Storing Batteries

Long term battery storage is not recommended. If storage is necessary:

- Always try to use a ‘first-in first-out’ approach to minimize storage time.
- Lithium-Ion batteries age much faster at elevated temperatures. Store batteries at temperatures between 0° C and 20°C.
- Always charge batteries to 40 to 60% before storing them. Batteries can be damaged by an over-discharge phenomenon that occurs when an empty battery is stored for a long period of time such that the cell voltage drops below a lower limit.
- To minimize storage degradation, recharge stored batteries to 40 to 60% every 4 or 6 months to prevent over-discharge damage.
- A ‘never used’ Li-Ion battery that has been stored for 3 years may have limited or no useful life remaining once put into service. Think of batteries as perishable goods.

3.10 Monitoring The Network Connection

If your hand-held is equipped with a wireless LAN radio, it will typically associate with the nearest access point. The radio signal quality meter in the taskbar indicates the relative strength of the communication link.

To access the radio signal icon:

- Tap on the radio icon in the taskbar to display the wireless statistics dialog box.

To access the radio signal icon using the keyboard:

- Press [BLUE] [0] to display the *Start Menu*.
- Highlight **Shortcuts** and then choose **System Tray** from the sub-menu.
- Use the [LEFT] and [RIGHT] arrow keys to highlight the **radio signal** icon in the taskbar.
- Press [ENTER] to display the *Wireless Statistics* dialog box.



Note: *Moving in and out of the radio coverage area can have varying effects on a network session. At times, you may need to renew your connection by logging in again.*

3.11 Uploading Data In A Docking Station

The Combo Docking and Quad Docking peripherals allow your hand-held to link to an Ethernet network. They are typically used to upload transaction data to a server computer when a radio link is not available. When a 7535 G2 is properly inserted in a docking station, a dock icon is displayed in the taskbar at the bottom of the unit screen. The hand-held also detects the presence of the Ethernet network. Review the documentation provided with the user application installed in your 7535 G2 before performing data uploads.

3.12 General Maintenance

3.12.1 Caring For The Touchscreen

The touchscreen is covered with a thin, flexible polyester plastic sheet with a conductive coating on the inside. The polyester can be permanently damaged by harsh chemicals and is susceptible to abrasions and scratches. Using sharp objects on the touchscreen can scratch or cut the plastic, or crack the internal conductive coating. The chemicals listed below must not come into contact with the touchscreen:

- mustard, ketchup
- sodium hydroxide,
- concentrated caustic solutions,
- benzyl alcohol, and
- concentrated acids.

If the touchscreen is used in harsh environments, consider applying a disposable screen protector (PN HU6110). These covers reduce the clarity of the display slightly but will dramatically extend the useful life of the touchscreen. When they become scratched and abraded, they are easily removed and replaced.

3.12.2 Cleaning The 7535 G2



Important: *Do not immerse the unit in water. Dampen a soft cloth with mild detergent to wipe the unit clean.*

To prevent damage to the touchscreen, use only the stylus (pen) supplied with your 7535 G2.

- Use **only** mild detergent or soapy water to clean the hand-held unit.

- Avoid abrasive cleaners, solvents or strong chemicals for cleaning. The 7535 G2 has a plastic case that is susceptible to harsh chemicals. The plastic is partially soluble in oils, mineral spirits and gasoline. The plastic slowly decomposes in strong alkaline solutions.
- To clean ink marks from the keypad and touchscreen, use isopropyl alcohol.

WORKING WITH WINDOWS CE

4

4.1	Navigating In Windows CE And Applications	63
4.1.1	Navigating Using A Touchscreen And Stylus	63
4.1.2	Navigating Using The Keyboard	63
4.2	Working With Files, Folders And Programs	64
4.3	The Startup Desktop	65
4.3.1	The Desktop Icons	66
4.3.2	The Taskbar	67
4.3.2.1	Using The Taskbar	67
4.3.2.2	Customizing The Taskbar	68
4.4	The Start Menu	69
4.4.1	The Desktop	70
4.4.2	Security Settings	70
4.4.3	Programs	72
4.4.4	Shortcuts	73
4.4.5	Settings	75
4.4.6	Run	76
4.4.7	Shutdown	76
4.5	Using A Dialog Box	77

4.1 Navigating In Windows CE And Applications



Note: *In order to access many of the menus discussed in this chapter, the security level must be set to ‘Supervisor’ (see “Security Settings” on page 70).*

Graphic user interfaces like Windows CE for portable devices and desktop Windows (2000, XP, etc.) utilize ‘point and click’ navigation. An equivalent keyboard shortcut is also available for every ‘point and click’ action.

Windows CE supports the same ‘point and click’ user interface and keyboard shortcuts as desktop Windows with one difference—the ‘point and click’ action is accomplished using a touchscreen rather than a mouse. Actions can be performed using any combination of keyboard shortcuts or touchscreen tapping.

4.1.1 Navigating Using A Touchscreen And Stylus



Note: *If the touchscreen is not registering your screen taps accurately, the touchscreen may need recalibration. Refer to “Calibrating The Touchscreen” on page 42.*

A touchscreen is an optional feature on 7535 G2s. A hand-held equipped with a touchscreen comes equipped with a *stylus*—a pointing tool that looks like a pen—stored in a slot at the top of the unit. The stylus is used to select objects on the touchscreen.



Note: *To prevent damage to the touchscreen, use only the stylus (pen) supplied with your 7535 G2.*

To choose an icon, open a file, launch an applet or open a folder:

- Double-tap the stylus on the appropriate icon.

4.1.2 Navigating Using The Keyboard

If your 7535 G2 has a standard screen (rather than a touchscreen), choosing icons and navigating dialog boxes, displaying the desktop, and so on requires keyed input. If your unit has already been fully configured and your application is launched at startup, you’ll have little need for keyboard navigation, but you can refer to Table 4.1 on page 64 for a description of the navigation keys.

Operation	Key or Key Combination
Switch between active applications	[ALT] [TAB]
Open task manager	[ALT] [ESC]
Move the cursor	Arrow keys
Open file, folder or icon	[ENTER]
Exit & Save	[ENTER]
Close/Exit & Do Not Save	[ESC]
Navigate Dialog Boxes	[TAB] To move cursor up [SHIFT] [TAB] To display the contents of the next 'tab' in a dialog box [CTRL] [TAB]
Select Radio Button/Press Button	[SPACE]
Go to Start Menu	[BLUE][0]

Table 4.1 Keyboard Navigation

Keep in mind that unlike a desktop computer, the 7535 G2 does not support key chording (pressing two keys at the same time). You must press one key followed by the next in sequence. Refer to “Working With Files, Folders And Programs” for additional details about keyboard navigation.

4.2 Working With Files, Folders And Programs

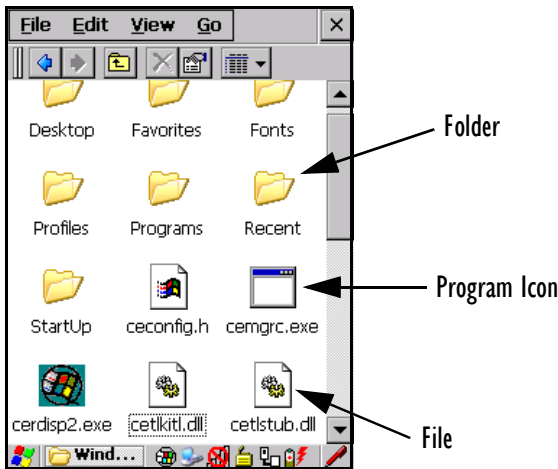


Figure 4.1 Working With Windows Icons

- Double-tap on the appropriate icon—either a folder icon, a program icon or a file icon—to open or launch your selection.

If you're using the keyboard:

- Use the arrow keys to highlight the icon you want to open or launch.
- Press [ENTER].

4.3 The Startup Desktop

When the 7535 G2 boots up, the startup desktop (shell) is displayed. Any applications stored in the Startup folder start up immediately.



Note: *The startup folder is located in \Windows\StartUp and \Flash Disk\StartUp.*

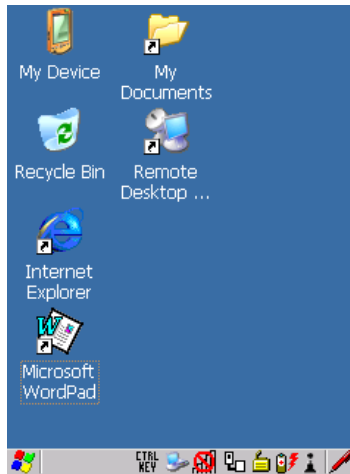


Figure 4.2 The 7535 G2 Startup Desktop

To access desktop icons:

- Double-tap on the icon to open a window or, in the case of an application icon, launch an application.

The Desktop Icons

On the keyboard:

- Use the arrow keys to highlight the icon, and press [ENTER] to launch the highlighted icon.



Note: *If the arrow keys do not highlight the desktop icons, the desktop may not be selected. Press [BLUE] 0 (zero) to display the Start Menu, and select Desktop. Now the desktop will be “in focus” and the arrow keys will highlight the icons.*

4.3.1 The Desktop Icons

The icons displayed in the startup desktop operate in much the same way as those displayed on any standard PC desktop that is running Windows.

My Device

Choosing this icon displays the contents of your 7535 G2 computer. If you're not sure how to work with the files, folders and programs displayed, refer to “Working With Files, Folders And Programs” on page 64.

Recycle Bin

This option temporarily stores items that were deleted, allowing you to either permanently delete or restore these items.

Internet Explorer

Choosing this icon launches Internet Explorer—a standard Windows CE version. Keep in mind that your supervisor will need to set up access using the *Internet Options* and the *Network and Dial-up Connections* icons in the *Control Panel*.

Remote Desktop Connection

This option allows your 7535 G2 to communicate with a remote desktop PC. “Remote Connect” on page 83 provides a website with step-by-step instructions.

4.3.2 The Taskbar

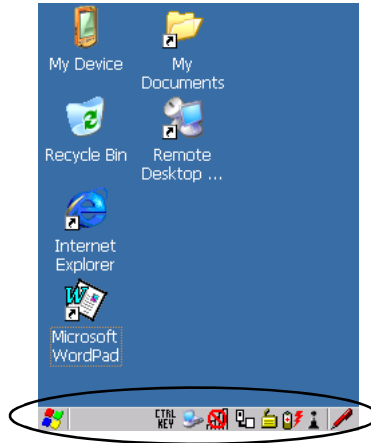


Figure 4.3 The Taskbar

The 7535 G2 is equipped with a taskbar at the bottom of the screen. It displays icons through which you can view the battery capacity and radio signal quality of your unit. If the hand-held is attached to a charger, cradle, docking station or PDM, an associated icon is displayed. In addition, the taskbar displays the application(s) currently running on your unit and the security level assigned to your 7535 G2.

The taskbar also displays active modifier keys: [SHIFT], [ALT], [CTRL], [BLUE] and [ORANGE]. Keys that have been locked “on” are displayed in *uppercase* letters. For example, if you have set the [CTRL] key Lock to “on” in the Keyboard menu and you press the key, it is displayed as CTRL KEY in the taskbar. (For detailed information on modifier keys and keyboard options, see “The Keyboard” on page 35).

4.3.2.1 Using The Taskbar

A *tooltip* is displayed as each taskbar icon is highlighted. The tooltip provides the status of each icon.

If you’re using the touchscreen:

- Tap and hold the stylus on an icon to display the icon's tooltip. Double-tap the icon to open the *Control Panel* dialog box associated with the icon. For example, double-tap the battery icon to display a dialog box listing the current battery capacity information.

Customizing The Taskbar

On the keyboard:

- Press [BLUE] [0] to display the *Start Menu*.
- Choose **Shortcuts** from the *Start Menu*, and then press the [RIGHT] arrow key to display the sub-menu.
- Choose **System Tray** in the sub-menu.
- Use the arrow keys to highlight the icon in the taskbar about which you'd like more information.
- Press [ENTER] to display the appropriate dialog box.

4.3.2.2 Customizing The Taskbar

To customize the taskbar so that it displays only those icons you require:

- In the *Start Menu*, choose **Settings**, and then **Taskbar**.

If you're using the keyboard:

- Press [BLUE] [0] (zero) to display the *Start Menu*.
- Highlight the **Settings** option, highlight **Taskbar** in the sub-menu, and press [ENTER].

The *Taskbar and Start Menu* dialog box is displayed.

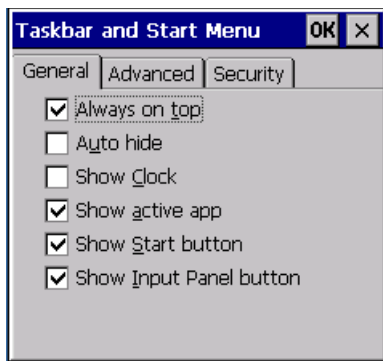


Figure 4.4 Taskbar And Start Menu Settings

- Tap the stylus on the items you want to activate or deactivate. The check mark indicates active items.

If you're using the keyboard:

- Highlight the options you want to activate, and press the [SPACE] key to select them. A check mark indicates active items.

4.4 The Start Menu



Note: Some of the Start Menu items may be disabled based on the current 7535 G2 security settings.

The *Start Menu* lists the operations you can access and work with. It is available from the startup desktop or from within any application.

To display the menu:

- Press [BLUE] [0] (zero).



Note: Tap on the item in the menu with which you want to work.

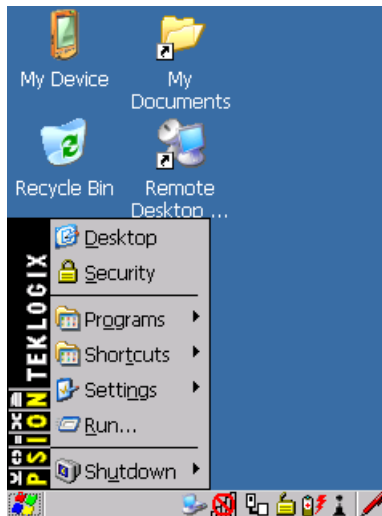


Figure 4.5 Start Menu

If you're using the keyboard:

- Use the arrow keys to highlight a menu item, and press [ENTER], **or**

If the menu item has an underlined character:

- Type the underlined alpha character. For example, to display the Security dialog box, type the letter 's'.

4.4.1 The Desktop

Choosing the *Desktop* option from the *Start Menu* displays the 7535 G2 desktop.

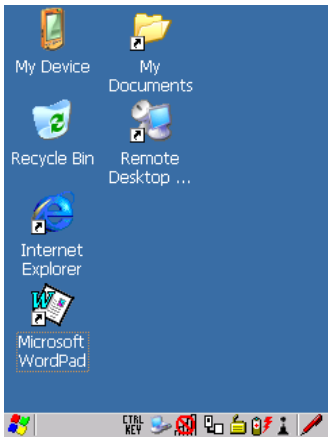


Figure 4.6 7535 G2 Desktop

4.4.2 Security Settings

Choosing the *Security* option from the *Start Menu* displays a dialog box in which you can define the access level for the 7535 G2: Supervisor or User.

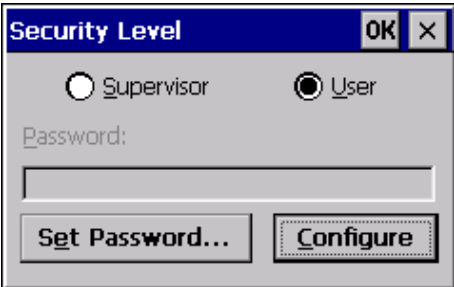


Figure 4.7 Security Levels

Assigning The Supervisor Security Level

The security level is represented by an icon in the shape of a lock in the taskbar. The security levels define the options accessible to the operator in the *Start Menu* and the *taskbar*. By default, the security level is set to *User*, restricting access to only the most basic *Start Menu* items.

To allow access to all the *Start Menu* and *taskbar* options:

- In the *Security Level* dialog box, select the radio button next to Supervisor.
- In the *Password* field, type the Supervisor level password. The default password is 123456.
- Select **OK**. You can now access all menu items in the *Start Menu* along with the icons in the taskbar.

Changing A Password



Note: *Keep in mind that this is the same password as that assigned through the Password control panel applet. Refer to “Control Panel Icons” on page 85.*

To assign a password:

- Choose a **security level**, and enter the **existing password** in the *Password* field
- Select the Set Password button.

A dialog box labelled *Password Properties* is displayed.

- Type the new password in the *Password:* text box (all keyboard characters are valid).
- In the *Confirm Password:* text box, retype the new password.

Configuring Security

Choosing the *Configure* button displays the *Configure Security* dialog box.

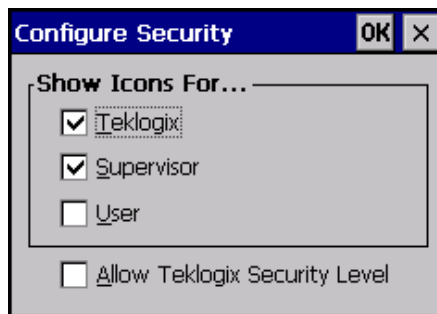


Figure 4.8 Configuring Security

This dialog box allows you to determine which security levels will have an associated icon displayed in the taskbar. By default, a security icon is not displayed for user-level security.

4.4.3 Programs

- Choose **Programs** to display a sub-menu of options.

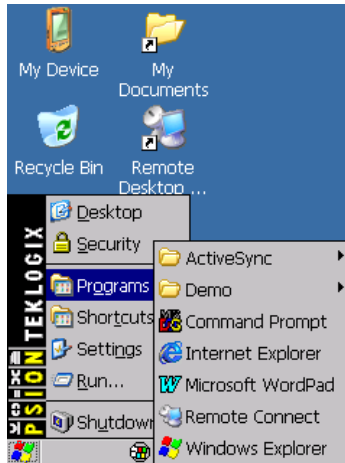


Figure 4.9 Program Sub-Menu

This sub-menu allows you to choose *ActiveSync* and *Command Prompt*, and you can access the *Internet Explorer*, installed applications (e.g., *Microsoft WordPad*), *Remote Connect* or *Windows Explorer*.

ActiveSync®

This option allows you to connect to another device using ActiveSync.

Demo

This folder contains the *Demo Imager*, *Demo Scanner*, and *Demo Signature* applications. *Demo Imager* is used for simple image-capturing purposes and for displaying bar code data and bar code statistics on the same screen with image data and information. *Demo Scanner* can be used to test how the hand-held reads and writes RFID tags. *Demo Signature* allows you to capture a signature written on the screen with your stylus and save it to a file.

Command Prompt

Command Prompt is used to access the DOS command prompt. At the prompt, you can type DOS commands such as *dir* to display all the directories in the drive.

Internet Explorer

The 7535 G2 is equipped with Microsoft Internet Explorer for Windows CE. You can access the *Internet Options* icon through the *Start Menu* under *Settings*, *Control Panel* or by double-tapping on the desktop icon *My Device* and then, double-tapping on the *Control Panel* icon.

Remote Connect

Remote Connect is a 7535 G2 application used to connect to a Windows Terminal Server so that you can run a “session” on the Server machine using the 7535 G2 (Windows CE device). “Remote Connect” on page 83 provides a website with details about this option.

Windows Explorer

The Windows Explorer installed on your 7535 G2 is consistent with all Windows CE devices. You can access this option from the *Start Menu* under *Programs*, *Windows Explorer*.

4.4.4 Shortcuts

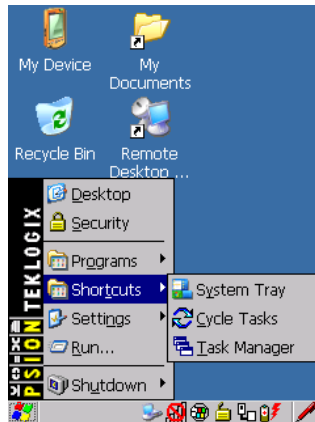


Figure 4.10 Shortcuts Sub-Menu

System Tray

If your touchscreen is not enabled, you can use the *System Tray* option to access the icons in the taskbar at the bottom of the screen. The taskbar displays indicators such as a radio signal icon and the security level. These indicators are attached to dialog boxes that provide additional information.

- Choose **Shortcuts, System Tray**.

When *System Tray* is chosen, the taskbar icons become accessible. To display the dialog box attached to an icon:

- Use the arrow keys to highlight an icon, for example, the security icon.
- Press [ENTER] to display the security level dialog box.

Cycle Tasks

When *Cycle Tasks* is selected (and the Task Manager is not open), you can cycle through active applications.

To cycle through your active applications:

- Choose **Shortcuts, Cycle Tasks, or**
Press [ALT] [TAB].

Task Manager

The *Task Manager* allows you to switch to another task or to end an active task. To display the task manager window:

- Tap on **Shortcuts, Task Manager, or**
Press [ALT] [ESC].



Figure 4.11 Task Manager

4.4.5 Settings

The **Settings** sub-menu includes the following settings: *Control Panel*, *Network and Dial-up Connections* and *Taskbar and Start Menu*.

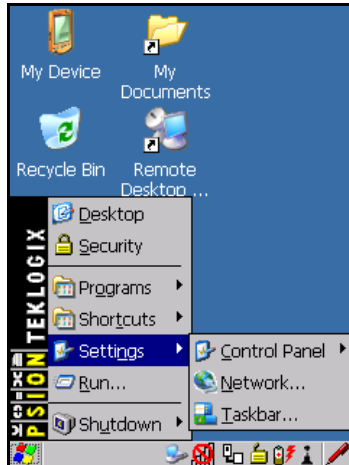


Figure 4.12 Settings Sub-Menu

Control Panel

The *Control Panel* contains applets used to configure hardware, the operating system and the shell. If your 7535 G2 is running with the Psion Teklogix TekTerm application or another application, additional configuration applets may appear in the *Control Panel*.

Network And Dial-Up Connections

The *Network and Dial-up Connections* window allows you to configure the 7535 G2 radio or execute an existing configuration. Refer to “Configuring An IEEE 802.11 Radio In The Unit” on page 18 for radio setup details.

Taskbar And Start Menu

The *Taskbar and Start Menu* option displays a dialog box in which you can customize the taskbar, choosing which options will be displayed. Refer to “Customizing The Taskbar” on page 68 for additional details about this option.

4.4.6 Run

Choosing the *Run* option from the *Start Menu* displays a dialog box in which you can enter the name of the program, folder or document you want to open or launch.

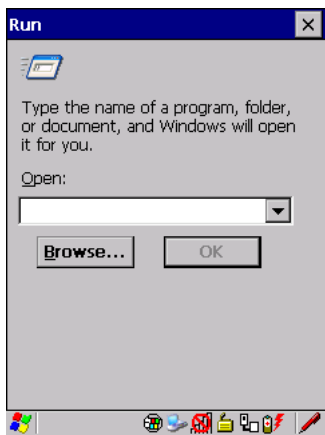


Figure 4.13 Run Dialog Box

4.4.7 Shutdown

The *Shutdown* menu includes these options: *Suspend*, *Warm Reset* and *Cold Reset*.

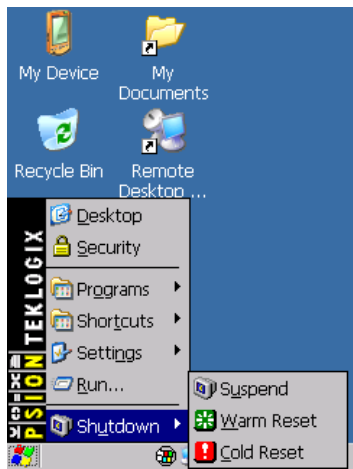


Figure 4.14 Shutdown Sub-Menu



Note: This menu varies slightly depending on the security level chosen. When the 7535 G2 is set to **User level**, the Shutdown option is replaced by **Suspend**. A sub-menu is not available.

Suspend

The *Suspend* option suspends the 7535 G2 immediately. This is equivalent to turning the hand-held off.

Warm Reset

The *Warm Reset* option resets the 7535 G2, leaving all saved files and (registry) settings intact. Any unsaved data is lost.

Cold Reset

The *Cold Reset* option resets the 7535 G2 (see page 28). Any files not stored in permanent memory are lost; however, the registry settings are saved.

4.5 Using A Dialog Box

A dialog box (like the samples in Figure 4.15 on page 77) appears when you need to make selections and enter further information. You can move between dialog items by tapping on them with your stylus, or by pressing the arrow keys and the [TAB] key ([SHIFT] [TAB] moves the cursor backwards).

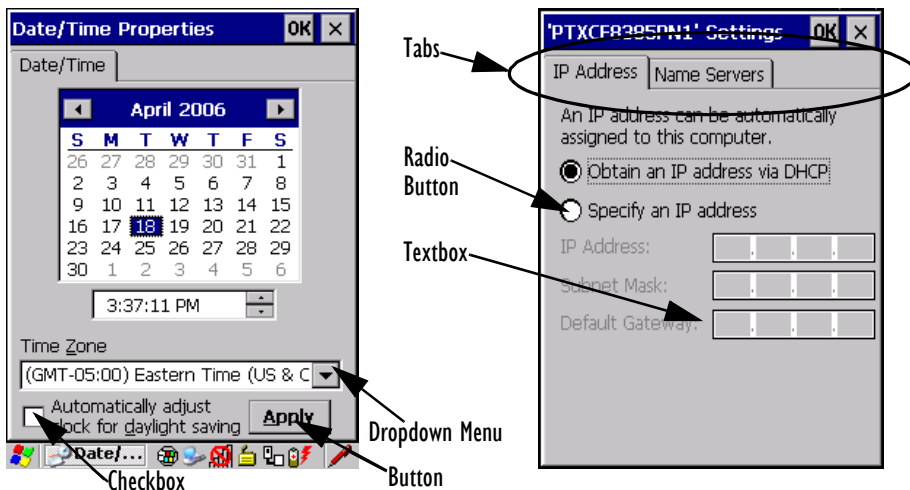


Figure 4.15 Dialog Boxes



Note: You can use the stylus to tap on an element in a dialog box to select or deselect it, display dropdown menu items, save your selections, and so on.

Dialog boxes contain one or more of the following elements:

Tab: A tab separates different elements of a dialog box. Press the [TAB] key until a tab in the dialog box is highlighted. To display adjoining tabs, press the [RIGHT] or [LEFT] arrow key. To display the information in the next tab from anywhere in the window, press [CTRL] [TAB].

Textbox: A textbox requires that you type information. Press the [TAB] key to highlight the textbox and then type the appropriate information.

Dropdown: This type of menu is identified by up and down arrows next to the dropdown menu to indicate that additional options are available. Press the [TAB] key to highlight the menu, and use the arrow keys on your keyboard to cycle through the options.

Checkbox: This box allows you to select or deselect an option. To select or deselect a checkbox, press the [TAB] key to highlight the checkbox, and press the [SPACE] key to select or deselect it.

Radio buttons: These buttons allow you to choose from a number of options. For example, in the sample screen in Figure 4.15 on page 77 you can choose to *Obtain an IP address via DHCP* or *Specify an IP address*. Press the [TAB] key to highlight a radio button option, and then select a radio button by pressing the arrow keys to highlight the appropriate option.

Buttons: This type of button allows you to *Save*, *Delete* and so on the options you've chosen in a dialog box. Use the [TAB] key to highlight the button you want to use. Press the [ENTER] key to activate it.

Saving Your Choices: Once you've made all your changes, press the [ENTER] key to save your changes and exit the window.



Note: *A dialog box item that is displayed in grey text indicates that it is not currently available.*

CONFIGURATION

5

5.1 Remote Connect	83
5.2 The TekTerm Application	83
5.3 Pocket PC Compatibility	83
5.4 The Control Panel	83
5.5 Control Panel Icons	85
5.6 Basic Setup	89
5.6.1 Display Properties	89
5.6.1.1 Display Contrast	90
5.6.1.2 Display Backlight	90
5.6.1.3 Display Appearance	92
5.6.2 Keyboard Properties	93
5.6.2.1 Key Repeat	93
5.6.2.2 Keyboard Backlight	94
5.6.2.3 Keyboard One Shot Modes	95
5.6.2.4 Keyboard Macro Keys	96
5.6.2.5 Unicode Mapping	98
5.6.2.6 Scancode Remapping	100
5.6.3 Volume And Sound Properties	102
5.6.3.1 Volume Adjustments	103
5.6.3.2 Sound Tab	103
5.6.4 Power Management Properties	104
5.6.4.1 Battery Capacity	104
5.6.4.2 Power Saving Schemes	105
5.6.4.3 Suspend Threshold	106
5.6.4.4 Calibrate	107
5.6.4.5 Advanced	107
5.6.4.6 Devices	108
5.6.5 Stylus Properties	109
5.6.5.1 Double-Tap	109
5.6.5.2 Calibration	110
5.6.5.3 Touch	110
5.6.6 Manage Triggers	110
5.6.7 Certificate Assignment	115

5.7 Bluetooth Setup	116
5.7.1 The Devices Tab	117
5.7.2 The Servers Tab	120
5.7.3 Outgoing Tab	121
5.7.4 Active Conn. Tab	122
5.7.5 The Properties Tab	123
5.7.6 The Bluetooth GPRS WAN Connection	123
5.8 Total Recall	130
5.8.1 Creating A Backup Profile	131
5.8.2 Restoring A Profile	136
5.9 The Storage Manager	136
5.9.1 Formatting A Memory Card	136
5.9.2 Creating Partitions	137
5.9.3 Partition Management	138
5.10 IPv6 Support	141
5.11 Scanner Settings	142
5.11.1 Bar Codes	143
5.11.2 Non-Decoded Scanners	144
5.11.2.1 Options	145
5.11.2.2 Code 39	146
5.11.2.3 Code 128	147
5.11.2.4 EAN 13	148
5.11.2.5 EAN 8	150
5.11.2.6 UPC A	150
5.11.2.7 UPC E	151
5.11.2.8 Codabar	152
5.11.2.9 Code 93	152
5.11.2.10 Code 11	152
5.11.2.11 Interleaved 2 of 5	153
5.11.2.12 MSI Plessey	153
5.11.2.13 Discrete 2 of 5	154
5.11.2.14 IATA 2 of 5	154
5.11.3 Decoded (Internal) Scanners	155
5.11.3.1 Options	155
5.11.3.2 Advanced Options	156
5.11.3.3 2D Scanning Options	158
5.11.3.4 Data Options	158
5.11.3.5 Code 39	159
5.11.3.6 Code 128	161
5.11.3.7 EAN 13	162

5.11.3.8	EAN 8	162
5.11.3.9	UPC A	163
5.11.3.10	UPC E	163
5.11.3.11	UPC/EAN Shared Settings	164
5.11.3.12	Codabar	165
5.11.3.13	Code 93	166
5.11.3.14	Interleaved 2 of 5	167
5.11.3.15	MSI Plessey	167
5.11.3.16	Discrete 2 of 5	168
5.11.3.17	2D PDF-417	169
5.11.3.18	2D Micro PDF-417	169
5.11.3.19	RSS Code (Reduced Space Symbology)	170
5.11.3.20	Composite	170
5.11.4	Decoded (Intermec ISCP)	171
5.11.4.1	Options	171
5.11.4.2	Advanced Options	172
5.11.4.3	Code 39	172
5.11.4.4	Code 128	174
5.11.4.5	EAN 13	175
5.11.4.6	EAN 8	176
5.11.4.7	UPC A	176
5.11.4.8	UPC E	177
5.11.4.9	UPC/EAN Shared Settings	177
5.11.4.10	Codabar	178
5.11.4.11	Code 93	179
5.11.4.12	Code 11	180
5.11.4.13	Interleaved 2 of 5	180
5.11.4.14	Matrix 2 of 5	181
5.11.4.15	MSI Plessey	181
5.11.4.16	Discrete 2 of 5	182
5.11.5	Imager	186
5.11.5.1	Options	186
5.11.5.2	Advanced Options	187
5.11.5.3	Code 39	190
5.11.5.4	Code 128	190
5.11.5.5	UPC/EAN	190
5.11.5.6	Codabar	191
5.11.5.7	Code 93	191
5.11.5.8	Interleaved 2 of 5	191
5.11.5.9	RSS Code	191

5.11.5.10	Postal: Australian	191
5.11.5.11	Postal: Japanese	192
5.11.5.12	Postal: Korean	192
5.11.5.13	Postal: PlaNET	192
5.11.5.14	Postal: PostNET	192
5.11.5.15	Postal: Royal.	192
5.11.5.16	2D Data Matrix	193
5.11.5.17	2D Maxicode	193
5.11.5.18	2D PDF-417	193
5.11.5.19	2D Micro PDF-417	193
5.11.5.20	2D QR Code	193
5.11.5.21	Aztec.	194
5.11.5.22	Composite	194
5.11.6	Options.	194
5.11.7	Translations	197
5.11.8	Ports	198
5.11.8.1	Tether Port (COM1).	199
5.11.8.2	Console Port (COM3).	200
5.11.8.3	Port Replicator Tether (COM6).	201
5.11.8.4	Port Replicator 9-pin (COM5)	202
5.12	SNMP (Simple Network Management Protocol) Setup	203
5.12.1	Contact Tab	204
5.12.2	Communities Tab	205
5.12.2.1	Adding A Community	205
5.12.2.2	Modifying A Community Setting.	206
5.12.2.3	Removing An Existing Community	206
5.12.3	Trap Destination Tab.	207
5.12.3.1	Enabling Authentication TRAPS	207
5.12.3.2	Adding A Destination.	207
5.12.3.3	Changing A Destination	208
5.12.3.4	Removing A Trap Destination	208
5.12.4	Permitted Hosts Tab	209
5.12.4.1	Adding A Host	209
5.12.4.2	Changing A Host	210

5.1 Remote Connect

Remote Connect is a 7535 G2 application used to connect to a Windows Terminal Server so that you can run a “session” on the Server machine, using the 7535 G2 (Windows CE device).

Refer to the following website for step-by-step information about setting up this connection:

<http://www.microsoft.com/WindowsXP/pro/using/howto/gomobile/remotedesktop/default.asp>,

or contact Psion Teklogix support services (see Appendix A: “Support Services And Worldwide Offices”).

5.2 The TekTerm Application

TekTerm is a powerful emulation application ideally suited for real time data transaction applications associated with mainframes and servers. The 7535 G2 includes unique features that support TekTerm—a Psion Teklogix application that has the ability to maintain multiple simultaneous sessions with a variety of host computers. For detailed information, please refer to the *TekTerm Software User Manual*, P/N 8000073.

5.3 Pocket PC Compatibility

The 7535 G2 supports the AYGShell API set that allows Pocket PC-compatible applications to run on the hand-held. Windows CE includes application programming interface (API) compatibility support for the Microsoft Windows Powered Pocket PC 2002 shell in units running Windows CE.

The website listed below describes the APIs exposed through AYGShell and the application compatibility between Windows Powered Pocket PC 2002-based applications and Windows CE-based devices:

http://msdn.microsoft.com/library/default.asp?url=/library/en-us/dncenet/html/WINCENET_CEPPC_App.asp

5.4 The Control Panel

The Windows CE *Control Panel* provides a group of icons through which you can set a variety of system-wide properties, such as mouse sensitivity, network configuration and the desktop color scheme.



Note: *If you are uncertain how to move around a dialog box and make selections, review “Using A Dialog Box” on page 77.*

When the 7535 G2 boots up, the startup desktop (shell) is displayed, and any applications stored in the Startup folder start up immediately.

To access the *Control Panel*:

- Press [BLUE] [0] to display the *Start Menu*.
- Use the stylus to tap on **Settings>Control Panel**.

If you're using the keyboard:

- Press [BLUE] [0] to display the *Start Menu*.
- Highlight **Settings** in *Start Menu*, and press the [RIGHT] arrow key to highlight the **Control Panel**.
- Press the [ENTER] key.

The *Control Panel* folder contains icons used in the setup of your 7535 G2.

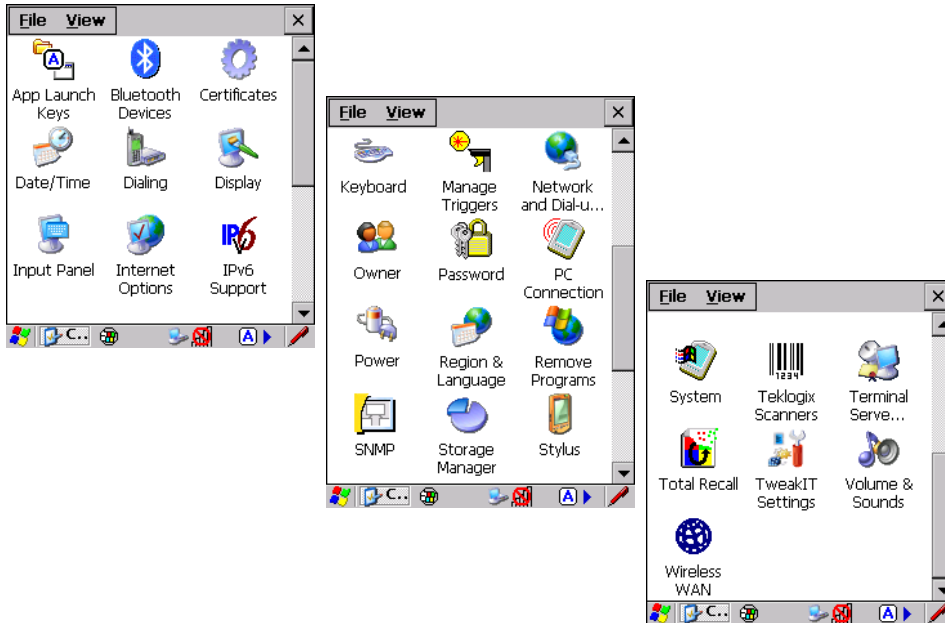


Figure 5.1 Control Panel

5.5 Control Panel Icons

The *Control Panel* provides a group of icons that allow you to customize and adjust settings on your 7535 G2.



App Launch Keys

By mapping keys to applications using this program, you can then launch those applications from a single key-press.



Bluetooth Devices

Provides options for Bluetooth radio setup. It also provides the capability to use a Bluetooth-enabled cellular phone as a data modem to exchange information with other Bluetooth devices and provide network access.



Certificates

A public key is transmitted as part of a certificate. The certificate assigned through this icon is used to ensure that the submitted public key is, in fact, the public key that belongs to the submitter. The client checks that the certificate has been digitally signed by a certification authority that the client explicitly trusts. “Certificate Assignment” on page 115 directs you to the appropriate setup information.



Date/Time

Allows you to set the current Month, Date, Time and Time Zone on your unit.



Dialing

Specifies dialing settings, including area code, country code, dial type and the code to disable call waiting. You can store multiple patterns—for example, ‘Work’, ‘Home’, and so on using this dialog box.



Display

Changes the appearance (window colour scheme) on the unit desktop.



Input Panel

Provides the framework for a Soft Input Panel (SIP) should you need to design your own SIP, or change some soft keyboard options.



Internet
Options

Internet Options

Provides options to configure your Internet browser. You can determine items such as the default and search page that the browser applies when connecting to the Internet, the cache size, the Internet connection options, and the security level that is applied when browsing.



IPv6
Support

IPv6 Support

Refers to a new Internet Protocol specification (version 6) that has been published to use 128-bit IP addresses (replacing version 4).



Keyboard

Keyboard

Toggles character repeat on and off and specifies delay and rate for repeated characters. It also allows you to adjust the keyboard backlight threshold and intensity.



Manage
Triggers

Manage Triggers

Allows multiple-scanner trigger management, including the ability to configure each of the trigger buttons. You can configure the trigger ID for each trigger button for both single- and double-click, and the double-click time.



Network
and Dial-u...

Network And Dial-up Connections

Displays a network window from which the 7535 G2 802.11g radio can be configured and an existing configuration can be executed. Refer to “Configuring An IEEE 802.11 Radio In The Unit” on page 18 for details.



Owner

Owner

Provides fields in which you can specify owner information. A *Notes* tab allows additional information to be entered and displayed when the unit is powered up. *Network ID* tab information is used to access network resources. (This information should be provided by your System Administrator.)



Password

Password

Allows you to assign a password to restrict access to elements of the unit. Once assigned, password access cannot be circumvented so it is important that you write down your password and keep it in a safe place. Refer to “Security Settings” on page 70 for details.



PC Connection

Enables direct connections to a desktop computer. Selecting the **Change Connection** button allows you to change the type of direct connect to your PC.



Power

Displays battery pack power status. (Alternately, battery status can be accessed through the taskbar.) Additional tabs allow you to determine suspend states, specify a suspend threshold and, when seated in either the Combo Dock or Quad Dock, determine whether or not a battery that requires it can be recalibrated. This dialog box also allows you to activate card slots. (Refer to “Devices” on page 108 for details.)



Region & Language

Allows you to specify the local language that is to be displayed on the hand-held screen along with the format of numbers, currency, time and date for your region.



Remove Programs

Lists the programs that can be removed from your unit. To remove a program, select it and then click on the **Remove** button.



SNMP

SNMP (Simple Network Management Protocol) is the protocol used to monitor and manage devices attached to a TCP/IP network.



Storage Manager

Allows the user to view information about the storage devices that are present, such as SD-MMC flash cards. For details, see page 136.



Stylus

Adjusts how Windows CE recognizes your double-tap (as slow or rapid successive taps). In the *Calibration* tab, you can recalibrate your touch-screen by tapping on the **Recalibrate** button and following the directions on the screen.

Control Panel Icons



System

System

Displays system and memory properties. In the *Memory* tab, you can allocate memory between storage memory and program memory.



Teklogix
Scanners

Teklogix Scanners

Provides scanner parameters and the bar code symbologies that the 7535 G2 scanner will successfully read.



Terminal
Serve...

Terminal Server Client Licenses

The Terminal Services Client Access License (TS CAL) application displays TS CAL ‘tokens’ for devices that connect to a Terminal Server.

The Terminal Services license server stores all TS CAL license tokens that have been installed for a group of terminal servers, and tracks licenses issued. When a client device first connects to the Terminal Server, the server uses a discovery process to locate the license servers. There can be multiple license servers for one Terminal Server. The Terminal Server stores information about the license servers it discovered in the registry.

The license server responds with a temporary token for the device. A grace period begins that allows the device to connect to the server without a permanent license. This grace period allows the administrator to purchase the license. The next time the client tries to connect to the server, the license server issues a permanent CAL if one is available. If one is not available, the client continues to use the temporary CAL.



Total Recall

Total Recall

Provides access to a backup and restore utility to maintain applications and settings over cold reboots.



TweakIT
Settings

TweakIT Settings

Allows you to change Advanced System Settings (interface, network, and servers), User System Settings (display font size), and provides the Registry Editor.



Volume &
Sounds

Volume & Sounds

Allows you to adjust the volume of the sound emitted to indicate events like warnings, key clicks and screen taps.



Wireless
WAN

Wireless WAN

Provides access to technology like GSM/GPRS, which allows wide area networking capability such as internet browsing via GSM/GPRS. For detailed information, see *Appendix E: Wireless Wide Area Network (WWAN)*.

5.6 Basic Setup

5.6.1 Display Properties

- In the *Control Panel*, choose the **Display** icon.

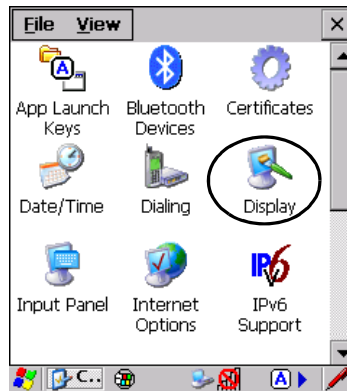


Figure 5.2 Choosing The Display Icon

5.6.1.1 Display Contrast

The *Contrast* tab allows you to adjust the display contrast to suit the environment in which you are using the 7535 G2. The contrast control can also be used to reduce display flickering that can occur with colour displays in certain lighting conditions.

- In the *Display Properties* dialog box, open the **Contrast** tab.

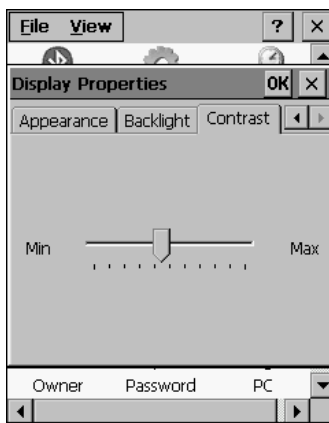


Figure 5.3 Display Contrast Properties

- Slide the bar in the *Contrast* tab to the *left* to decrease or darken the display contrast.
- Slide the bar to the *right* to increase or *lighten* the display contrast.

5.6.1.2 Display Backlight

The backlight is activated for a configurable amount of time if the ambient light is below a specified threshold and if the 7535 G2 is in use (key press, scanner trigger). The **Display Properties** dialog box in the *Control Panel* allows you to specify the intensity of the backlight along with how the backlight behaves in low-light conditions and when the unit is not in use.



Note: Keep in mind that this option may be restricted to supervisory use only.

- In the *Display Properties* dialog box, open the **Backlight** tab.

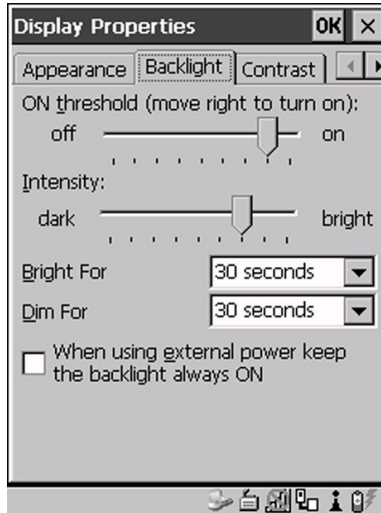


Figure 5.4 Display Backlight Properties



Notes: *Backlight changes take effect immediately. You do not need to reset the unit. To maximize battery run time, keep the display backlight brightness and active durations as low as possible.*

ON Threshold

The 7535 G2 is equipped with an ambient light sensor. This sliding bar allows you to determine how dark the ambient light needs to be before the backlight turns on.

Intensity

This parameter is used to adjust the light intensity of the 7535 G2 backlight. Sliding the bar to the left lowers the light intensity, and sliding it to the right raises the intensity.

Bright For

The value chosen from this dropdown menu determines the duration of time that the backlight stays on at the configured intensity after the last user action (keypress, scan trigger).

Dim For

The value chosen from this dropdown menu determines the duration of time that the backlight stays on at half the configured intensity (dimmed backlight) after

expiration of the *Bright For* delay and as long as no user action takes place (such as a keypress or scan trigger). At the expiration of the *Dim For* duration, the display backlight shuts off.

External Power Checkbox

When you select the checkbox next to **When using external power keep the backlight always ON**, the backlight remains **ON** at the configured intensity when the 7535 G2 is operating with external power (not battery power). If the 7535 G2 is drawing power from its battery, this option is ignored and the other parameters defined in *Display Properties* dialog box take affect.

5.6.1.3 Display Appearance

- In the *Display Properties* dialog box, open the **Appearance** tab.



Figure 5.5 Display Appearance Properties

This dialog box allows you to customize the display colour scheme.

5.6.2 Keyboard Properties

This icon displays the *Keyboard Properties* dialog box in which you can adjust the repeat rate of the keys, the intensity of the keyboard backlight and the behaviour of the [BLUE] and [ORANGE] modifier keys. This dialog box also allows you to define macro keys and Unicode characters.

- In the *Control Panel*, choose the **Keyboard** icon.

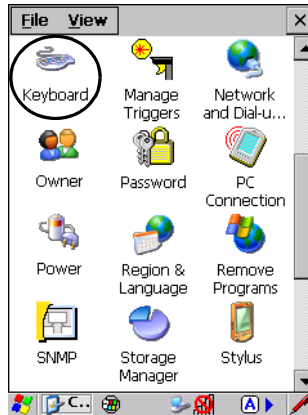


Figure 5.6 Choosing The Keyboard Icon

5.6.2.1 Key Repeat



Note: These settings apply when a key is held down continuously.

- In the *Keyboard Properties* dialog box, open the **Repeat** tab.

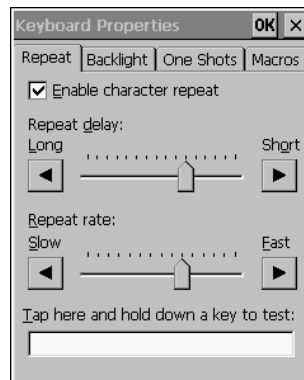


Figure 5.7 Key Repeat Properties

Repeat Delay

The value assigned for this parameter determines the delay in milliseconds between repeat characters. Sliding the *Repeat Delay* bar to the left increases the delay between key repeats, and sliding the bar to the right shortens the repeat delay time.

Repeat Rate

The value assigned for the *Repeat Rate* parameter determines how quickly the key you press repeats and is measured in characters per second (cps). Sliding the bar to the left slows the repeat rate, and sliding the bar to the right increases the repeat rate.



Note: Use the field at the bottom of this dialog box to test the repeat delay and rate settings you've chosen.

5.6.2.2 Keyboard Backlight

- In the *Keyboard Properties* dialog box, open the **Backlight** tab.

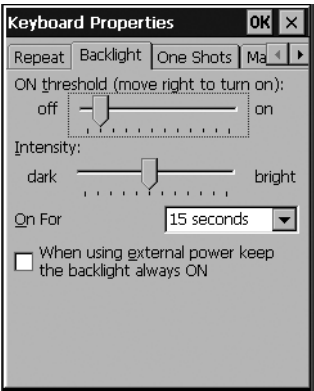


Figure 5.8 Keyboard Backlight Properties

ON Threshold

The *ON Threshold* sliding bar allows you to determine how dark the ambient light needs to be before the keyboard backlight turns on.

Intensity

This parameter is used to adjust the light intensity of the 7535 G2 keyboard backlight. Sliding the bar to the left darkens the keyboard backlight intensity, and sliding it to the right lightens the intensity.



Note: The keypad backlight maximum brightness will decrease over time as it ages. Use mid-range intensity settings when possible to extend the back-

light lifespan. When the backlight starts to dim, use this parameter to make it brighter.

ON Time

The value chosen from this dropdown menu determines the duration of time that the keyboard backlight stays on after the last user action (keypress or scan trigger).

5.6.2.3 Keyboard One Shot Modes

- In the *Keyboard Properties* dialog box, open the **One Shots** tab.

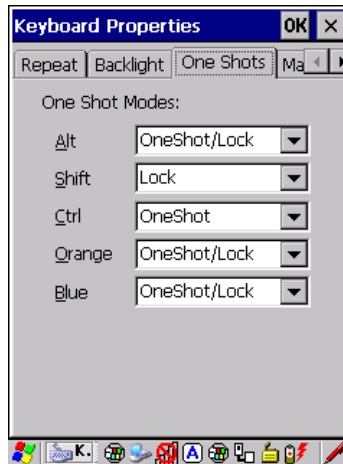


Figure 5.9 Keyboard One Shot Properties

The options in this tab allow you to determine how modifier keys on your 7535 G2 behave. For each modifier key—[ALT], [SHIFT], [CTRL], [ORANGE] and [BLUE]—you have the following options in the drop-down menu: Lock, OneShot, and OneShot/Lock.



Note: *Keep in mind that checking the taskbar lets you know whether or not these keys are locked on. For example, if the [ORANGE] key is locked 'on', the taskbar at the bottom of the screen displays it in **uppercase** characters, **ORANGE KEY**. If this key is displayed in **lowercase** characters in the taskbar, you'll know that the orange key is **not** locked. It will become inactive following a key press.*



Important: *Once you've assigned a One Shot mode to a modifier key, you need to tap on the OK button at the top of the tab to activate your selection.*

Lock

If you choose *Lock* from the drop-down menu, pressing a modifier key **once** locks it ‘on’ until you press the modifier key a second time to unlock or turn it off.

OneShot

If you choose *OneShot*, the modifier key remains active only until the next key is pressed.

OneShot/Lock

OneShot/Lock allows you to combine these functions. When you choose this option and you *press the modifier key once*, it remains active only until the next key is pressed.

If you *press the modifier key twice*, it is locked ‘on’, remaining active until the modifier key is pressed a third time to turn it ‘off’.

5.6.2.4 Keyboard Macro Keys

- In the *Keyboard Properties* dialog box, open the **Macros** tab.

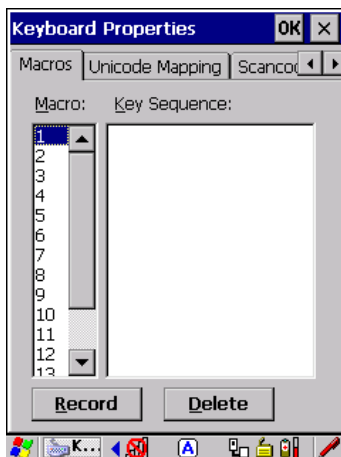


Figure 5.10 Macro Dialog Box

A macro has 200 programmable characters (or “positions”). The macro keys can be programmed to replace frequently used keystrokes, along with the function of executable keys including [ENTER], [BKSP] and [DEL] ([BLUE]-[BKSP]), function keys and arrow keys.

Recording And Saving A Macro

You can program up to 12 macro keys on a 58-key 7535 G2. On a 36-key 7535 G2, you can program a maximum of 6 macro keys.

- In the *Macro* menu highlight a macro key number, for example macro 1, to assign a macro to macro key [M1]. Choose the **Record** button.

A message screen is displayed instructing you to *Enter Key Strokes to Record*



Figure 5.11 Recording A Macro

- Type the macro sequence you want to assign to the Macro key. You can type text and numbers, and you can program the function of special keys into a macro.
- When you've finished recording your macro sequence, press the key sequence: [CTRL] [ALT] [ENTER], or choose the **Stop Recording** button.

A new screen called 'Verify Macro' displays the macro sequence you created. The *Save* button is highlighted.

- Press [ENTER] to save your macro, or highlight **CANCEL** and press [ENTER] to discard it.

Executing A Macro

To execute a macro:

- Press the macro key to which you’ve assigned the macro. For example, if you created a macro for *macro key 1*, press [M1] to execute the macro.

Deleting A Macro

To delete a macro:

- In the *Macros* tab, highlight the **macro number** you want to delete.
- Choose the **Delete** button.

5.6.2.5 Unicode Mapping

- In the *Keyboard Properties* dialog box, open the **Unicode Mapping** tab.

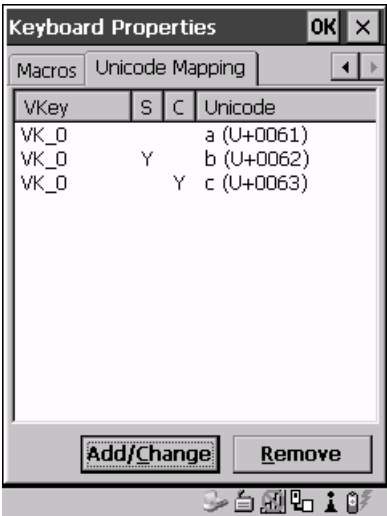


Figure 5.12 Unicode Mapping

The *Unicode Mapping* tab is used to map combinations of virtual key values and [CTRL] and [SHIFT] states to Unicode™ values. This tab shows the configured Unicode character along with the Unicode value. For example, the sample screen above shows “a (U+0061)” indicating that the character “a” is represented by the Unicode value “0061”, and so on. Keep in mind that Unicode configurations are represented as hexadecimal rather than decimal values.

All user-defined Unicode mappings are listed in the *Unicode Mapping* tab in order of virtual key value, and then by order of the shift state. If a Unicode mapping is not listed, the Unicode mapping is mapped to the default Unicode value.

Adding And Changing Unicode Values



Important: *Changes to Unicode mappings are not saved until you exit the Keyboard Properties dialog box.*

- Choose the **Add/Change** button.

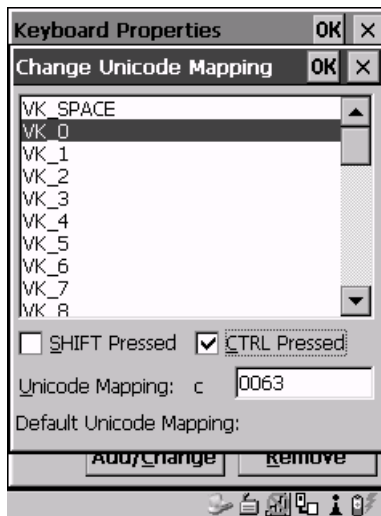


Figure 5.13 Adding And Change Unicode Values

- Highlight a value in the Unicode mapping list. In the sample screen above, a value will be assigned to virtual key 0 (VK 0).
- Position the cursor in the *Unicode Mapping* field, and type a **Unicode value** for the highlighted key.



Note: *To add a shifted state, [SHIFT] and/or [CTRL], press [TAB] to position the cursor in the checkbox next to 'SHIFT Pressed' and/or 'CTRL Pressed'. Press [SPACE] to select the shift state you want to assign.*

Removing Unicode Values

- In the *Unicode Mapping* tab, highlight the item you want to delete, and choose the **Remove** button.

5.6.2.6 Scancode Remapping

A scancode is a number that is associated with a physical key on a keyboard. Every key has a unique scancode that is mapped to a virtual key, a function or a macro. *Scancode Remapping* allows you to change the functionality of any key on the keyboard. A key can be remapped to send a virtual key (e.g. VK_F represents the ‘F’ key; VK_RETURN represents the [ENTER/ON] key, etc.), perform a function (e.g. turn the scanner on, change volume/contrast, etc.) or run a macro.

There are three different tables of scancode mappings: the *Normal* table, the *Blue* table and the *Orange* table. The *Normal* table defines unmodified key presses; the *Blue* table defines key presses that occur when the [BLUE] modifier is on; the *Orange* table defines key presses that occur when the [ORANGE] modifier is on. The default mappings of these scancodes can be overwritten for each of these three tables using the *Scancode Remapping* tab accessed from the *Keyboard Properties* dialog box.

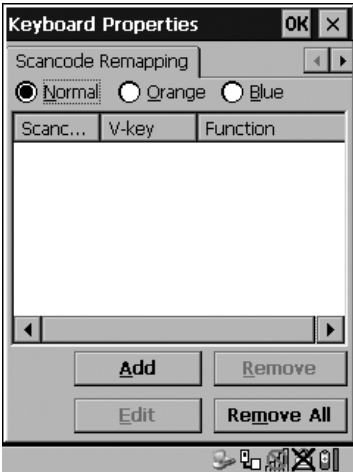


Figure 5.14 Scancode Remapping

The first column in the *Scancode Remapping* tab displays the scancodes in hexadecimal. If the scancode is remapped to a virtual key, that virtual key is displayed in the next column labelled ‘V-Key’. A virtual key that is ‘Shifted’ or ‘Unshifted’ is displayed in the third column labelled ‘Function’.

If the scancode is remapped to a function or a macro, the first and second columns remain blank while the third column contains the function name or macro key number (e.g., Macro 2).

Adding A Remap

To add a new remapping:

- Choose the **Add** button at the bottom of the dialog box.

The *Remap Scancode* dialog box is displayed.

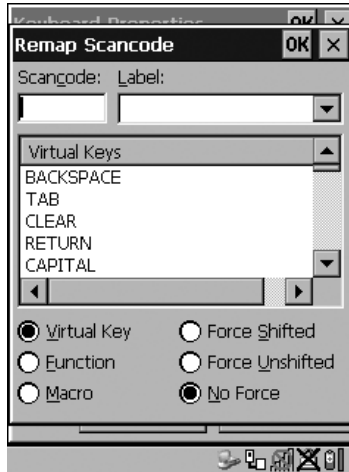


Figure 5.15 Remapping A Key

- Type the scan code in hexadecimal in the field labelled *Scancode*



Note: The *Label* field displays the default function of the scancode you are remapping.

Virtual Key, Function And Macro

The radio buttons at the bottom of the dialog box allow you to define to what the scan code will be remapped: Virtual Key, Function or Macro.

When *Virtual Key* is selected, you can choose to force [SHIFT] to be *on* or *off* when the virtual key is sent. If *No Force* is selected, the shift state is dependent on whether the shift state is on or off at the time the virtual key is sent.

When *Function* is selected, a list of valid functions appears in the dialog box.

When *Macro* is selected, the macro keys available on your unit are listed in the dialog box.

- Choose **Virtual Key**, **Function** or **Macro**.
- Choose a function from the *Function* list in the dialog box, and tap on **OK**.

Editing A Scancode Remap

To edit a scancode:

- In the *Scancode Remapping* tab, tap the stylus on the remap you want to edit.
- Tap on the **Edit** button, and make the appropriate changes.
- Tap on **OK** to save your changes.

Removing A Remap

To delete a remap:

- In the *Scancode Remapping* tab, highlight the scancode you want to delete, and tap on the **Remove** button.
- Tap on **OK**.

5.6.3 Volume And Sound Properties

- In the *Control Panel*, choose the **Volume & Sounds** icon.

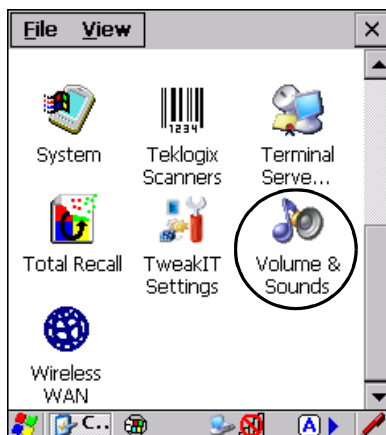


Figure 5.16 Choosing The Volume Icon

5.6.3.1 Volume Adjustments

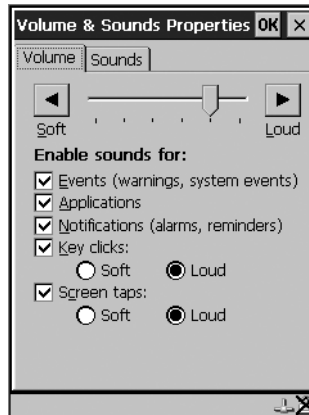


Figure 5.17 Volume Settings

- Slide the volume button to the left to lower the beeper volume or to the right to increase the beeper volume.
- Under the heading *Enable sounds for*, enable the conditions under which you want the 7535 G2 to emit a beep.

5.6.3.2 Sound Tab

The 7535 G2 computer is equipped with a beeper rather than a sound port. The options under this tab are not available for this hand-held.

5.6.4 Power Management Properties

This icon displays a *Power Properties* dialog box that indicates the unit’s battery capacity and allows you to manage battery use.

- In the *Control Panel*, choose the **Power** icon.

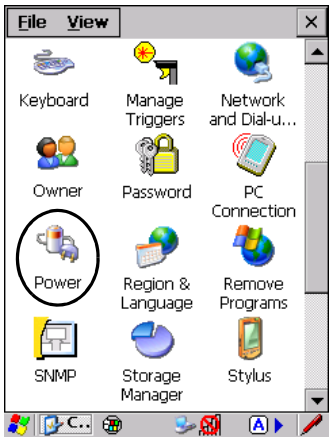


Figure 5.18 Choosing The Power Icon

5.6.4.1 Battery Capacity

- In the *Power Properties* dialog box, open the **Battery** tab to view battery details.

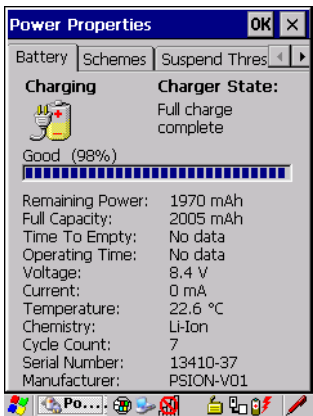


Figure 5.19 Power Battery Properties

5.6.4.2 Power Saving Schemes

- In the *Power Properties* dialog box, open the **Schemes** tab.

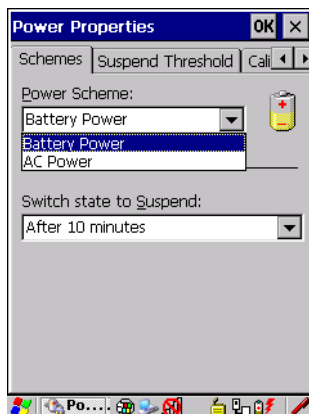


Figure 5.20 Power Scheme Properties — AC Power And Battery Power

Power Scheme

This dropdown menu allows you to specify whether the unit is using *AC Power* or *Battery Power*.

Switch State To Suspend



Important: *Psion Teklogix recommends setting the Suspend value to 10 minutes. Setting ‘Switch State To Suspend’ to ‘Never’ will adversely affect the battery run time.*

To further reduce power consumption, carefully consider the duration of time that the display backlight is ‘on’ (see “Display Backlight” on page 90).

When the 7535 G2 is idle—not receiving any user input (a key touch, a scan, and so on) or system activity (serial data, an activity initiated by an application, and so on)—the hand-held uses the value assigned in the *Switch State To Suspend* field to determine when the unit will go to sleep (appear to be off).

When the time in the *Suspend* field elapses without any activity, the unit enters *suspend* state. In suspend state, the 7535 G2 CPU enters a *sleep* state, and the radio is shut off. The state of the device (RAM contents) is preserved. Pressing [ENTER] wakes the system from suspend state. When the 7535 G2 is in suspend state, the network connection will not be broken immediately. If the connection is dropped, you must re-establish the network connection.

5.6.4.3 Suspend Threshold

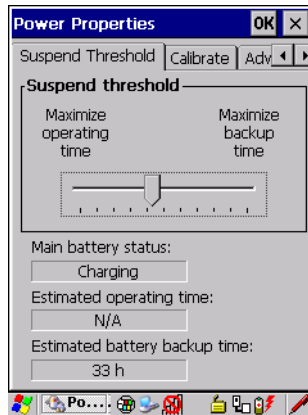


Figure 5.21 Suspend Threshold Tab

The *Suspend Threshold* adjustment tells the system when to shut down when the battery drains. If you choose *Maximum Operating Time*, the unit will run until the battery is completely empty; the RAM is only backed up for a short period of time. If you choose *Maximum Backup Time*, the hand-held shuts off with more energy left in the battery so RAM can be backed up for a longer period of time.



Important: *Selecting Maximum backup time will reserve approximately 20% of the battery capacity for memory backup. Once the battery is drained, the system RAM memory is lost and the unit must cold boot.*

In most real-time transaction environments this is not a problem (it only takes a few seconds to cold boot). Batch transaction environments, where data is not saved to a non-volatile memory (such as an SD FLASH card), may need to pay particular attention to this parameter. Psion Teklogix does not recommend the storage of any valuable data in system RAM.

The 7535 G2 normal Windows CE environment does not store any critical data in RAM (such as the registry or file system).

If the user's application does not save data to RAM, Psion Teklogix recommends keeping the Suspend Threshold setting as low as possible to maximize battery run time.

5.6.4.4 Calibrate

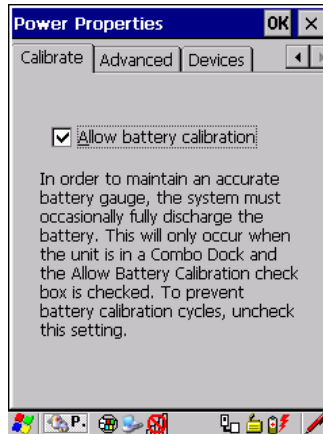


Figure 5.22 Charger Tab

Tapping in the checkbox next to *Allow Battery Calibration* allows the battery to be recalibrated only when necessary if the unit is inserted in a Combo Docking station.

5.6.4.5 Advanced

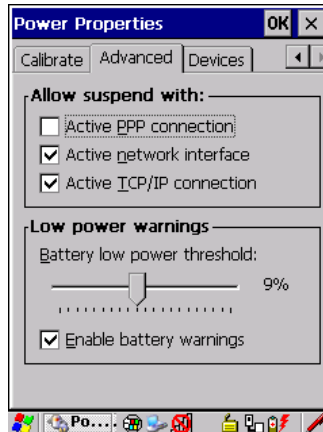


Figure 5.23 Card Slot Activation

Allow Suspend With:

This tab allows you to specify whether or not your unit will enter *Suspend* state while it is operating with an active PPP connection, network interface, or active TCP/IP connection.

Low Power Warnings

The sliding scale at the bottom of this tab allows you to specify the remaining battery capacity at which a warning message is displayed on the 7535 G2 screen, from 0% to 20%.

5.6.4.6 Devices

This tab controls power to individual CF and SDIO slots, and built-in devices. Enable or disable the checkboxes as needed, then tap on **OK** to save your changes.

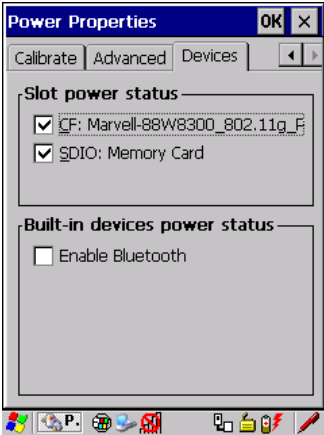


Figure 5.24 Card Slot Activation

5.6.5 Stylus Properties



Note: *Touchscreen calibration may not be enabled on your unit. If your screen appears to require recalibration, contact your supervisor.*

- In the *Control Panel*, choose the **Stylus** icon.

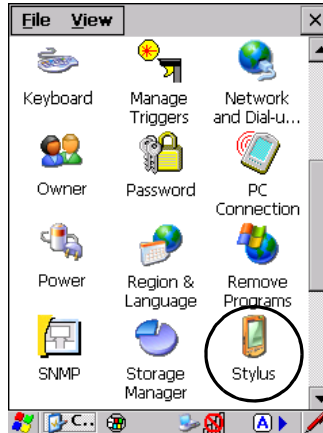


Figure 5.25 Stylus Icon

5.6.5.1 Double-Tap

- In the *Double-Tap* tab, follow the directions to tailor the sensitivity of the stylus when you tap on the touchscreen.



Figure 5.26 Setting Stylus Sensitivity

5.6.5.2 Calibration

Touchscreens rarely require recalibration. However, if your touchscreen has never been calibrated or if you find that the stylus pointer is not accurate when you tap on an item, follow the directions below.

- Choose the *Calibration* tab, and then tap on the **Recalibrate** button.



Figure 5.27 Calibrating The Touchscreen

- Follow the directions in the *Calibration* tab to recalibrate the screen.

5.6.5.3 Touch

This tab allows you to disable the touchscreen.

- Choose the **Touch** tab. Select the checkbox next to *Disable the touch panel*.

5.6.6 Manage Triggers

Allows users to configure how bar code scanners and other devices such as RFID readers are triggered. You can configure the trigger ID for each trigger button for both single- and double-click, and the double-click time.

- In the *Control Panel*, choose the **Manage Triggers** icon (see Figure 5.28 on page 111).

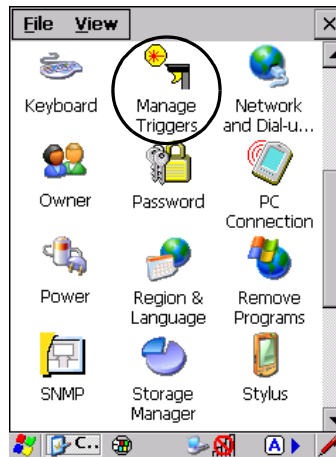


Figure 5.28 Manage Triggers Icon

- In the *Manage Triggers* screen you'll see a list of trigger mappings.

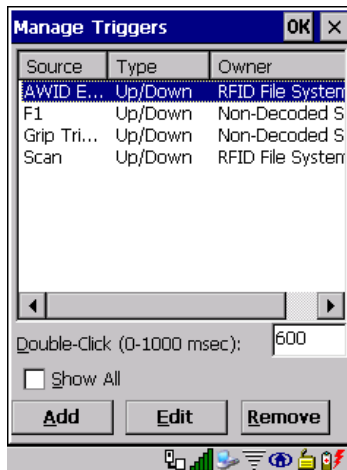


Figure 5.29 Manage Triggers Main Screen

5.6.6.1 Trigger Mappings

A trigger mapping is an association between a particular key on the keyboard and a driver or application, the “owner(s)” of the trigger source. When the specified key is pressed, the owner (for example, a decoded scanner) is sent a message.



Important: *It is not possible to have two or more identical mappings—for example [F1] cannot be mapped to the Non-Decoded Scanner twice—even if the trigger type is different.*

A keyboard key that is used as a trigger source will no longer generate key data, or perform its normal function. For example, if the space button is used as a trigger source, it will not be able to send space characters to applications.

Double-Click

When a key is pressed and released, then pressed again within the configured time (between **0** to **1000** milliseconds), a double-click occurs. See also “Trigger Type” on page 114.

Show All

By default, the trigger mapping list only shows active mappings. Mappings for drivers or applications that are not currently active are not normally displayed. By checking this checkbox, all mappings, both active and inactive, are displayed.

Add

Tapping this button brings up the *Add* mapping dialog (see page 113), so that you can add new trigger mappings.

Edit

Tapping this button brings up the *Edit* mapping dialog (see page 113), so that you can edit existing trigger mappings.

Remove

Tapping this button removes an existing mapping.

OK

The *OK* button in the top right of the *Manage Triggers* screen saves all changes made. If the cancel button **X** is tapped instead, or the **[ESC]** key is pressed, all changes made will be discarded.

5.6.6.2 Add And Edit Trigger Mapping

These dialogs allow the user to add and edit trigger mappings.

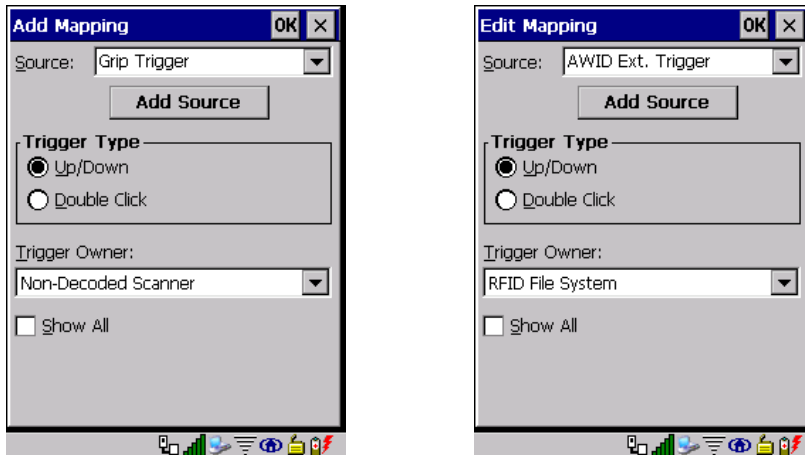


Figure 5.30 Add And Edit Trigger Mapping Menus

Source

This dropdown list allows you to specify the source of the trigger events, such as a keyboard key [F1], the grip trigger, etc., for the *Trigger Owner* selected.



Notes: *It is possible to map the same source to different owners—for example, [F1] can be mapped to both the Imager and Non-Decoded Scanner. If so, both devices/operations will occur simultaneously. This is not recommended in most cases, especially with devices such as Imager or RFID Readers.*

It is also possible to map different sources to the same owner—for example, [F2] and [F3] can both be mapped to the RFID File System.

Add Source

Only existing trigger sources are shown in the *Source* combo-box. To add a new source to this list, tap on the **Add Source** button. A dialog will pop up and allow you to select the keyboard key to use as a trigger source.

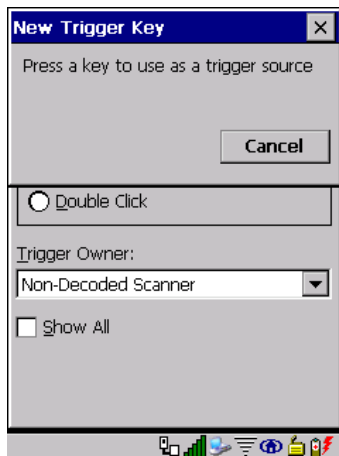


Figure 5.31 Add Source Dialog

Trigger Type

You can enable either an **Up/Down** or **Double Click** response to a trigger press. Normally, when a trigger (keyboard key, etc.) is pressed and released, a “trigger down” event is sent to the “owner”—that is, the application receiving the trigger press information—followed by a “trigger up”. If *Double Click* is chosen in this menu, when the trigger is pressed, released, and then pressed again, a “double-click” event will have occurred. If a mapping with the type *Up/down* has also been configured for the same source, it will only receive the first set of trigger events.

Trigger Owner

This identifies the driver or application receiving the trigger presses.

Show All

By default, inactive owners are not shown. By checking this checkbox, all owners, both active and inactive, are displayed.

5.6.7 Certificate Assignment

- In the *Control Panel*, choose the **Certificate** icon.

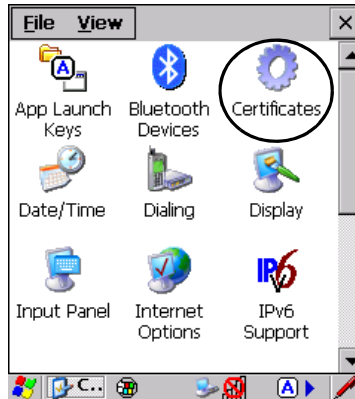


Figure 5.32 Certificates Icon

This option is used in conjunction with 802.1x authentication to enhance 7535 G2 security.

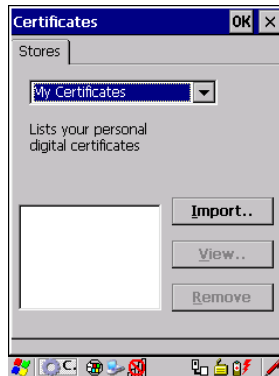


Figure 5.33 Certificates Dialog Box

For a detailed description about *Certificate* setup for both the server and client-side devices (7535 G2s), refer to the following website:

<http://www.microsoft.com/windowsserver2003/techinfo/overview/security.msp>



Note: When importing certificates, the 7535 G2 only recognizes .cer files.

5.7 Bluetooth Setup

Bluetooth is a global standard for wireless connectivity for digital devices and is intended for Personal Area Networks (PAN). The technology is based on a short-range radio link that operates in the ISM band at 2.4 GHz. When two Bluetooth-equipped devices come within a 5 meter range of each other, they can establish a connection. Because Bluetooth utilizes a radio-based link, it does not require a line-of-sight connection in order to communicate.



Note: *The Bluetooth radio uses an internal antenna.*

- In the *Control Panel*, choose the **Bluetooth Device Properties** icon to display the *Bluetooth Control* screen.

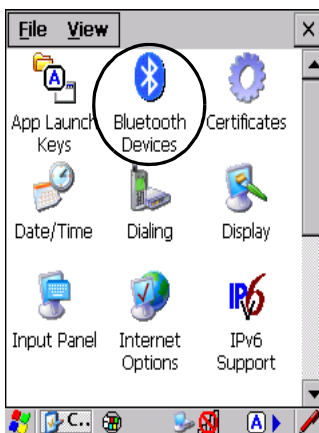


Figure 5.34 Bluetooth Icon

The *Bluetooth Control* dialog box is used to display the other Bluetooth devices with which you can communicate.

5.7.1 The Devices Tab



Figure 5.35 The Bluetooth Device Tab

If you intend to configure Bluetooth communication with specific devices (a scanner or printer for example), power on and bring the devices within 5 m (16.4 ft.) of the hand-held before proceeding with the discovery process described below.

Scan

- Click on the **Scan** button to list available devices.

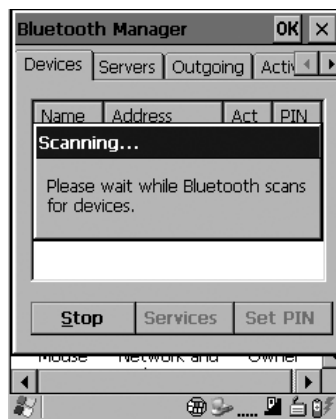


Figure 5.36 Available Bluetooth Devices

Wait for the 7535 G2 to complete its scan (approximately 20 seconds). When scanning starts, the *Scan* button will change to *Stop*—if necessary, you can tap on this button to stop the process. Once scanning is complete, all discovered devices will be displayed in the list box, with *Name*, *Address*, *Active* status, and *PIN* information.



Note: *During the scanning process, addresses are located first, followed by names. Only the names of devices that are within the Bluetooth radio coverage range will be retrieved.*

The *Active* column indicates whether any service is activated for that device. When a service is activated, the device is displayed in the list even when it is not detected during the scan.

The *PIN* column indicates whether you have a PIN (password) set for the device.

At this point you can either query for services or set the PIN for each device. Once you highlight a device in the list box, both the *Services* and *Set PIN* buttons become available.

Services

A discovered device may display several service profiles that it can use to communicate, and you will want to activate the type you need. Supported profiles that can be activated include: DUN (Dial-Up Networking service), Printer (serial service), and LANPPP (LANAccessUsingPPP service). ASync (ActiveSync) is another available profile.

- To start the service scan, highlight a device in the *Devices* tab list, and then click on the **Services** button or double-click on the device entry.



Note: *If the remote device is out of reach or turned off, it can take a considerable amount of time for the Services dialog box to appear—it may appear to be frozen.*

Once the device's service profiles are displayed in the Services list box:

- Highlight the service to be activated.
- Press [SPACE] or right-click to display the Activation menu.

The Activation menu contains four options: Activate, Authenticate, Outgoing and Encrypt.

Once the service is successfully activated, the assigned port (if applicable) will appear in the *Port* column of the *Services* list box. You can choose to use *BSP* or *COM* as the port name. BSP is the latest Microsoft Bluetooth stack standard, but older applications assume serial ports are COM. When using *COM* as the port name, the Bluetooth manager will try to find and use a free port between COM7 and COM9. When using *BSP* as the port name, BSP2 to BSP9 are available for use. The port is available as soon as it is activated.



Note: *The CH column shows the RFCOMM channel of the service if the service is RFCOMM-based. This information is not generally needed except for debugging purposes.*

To add a service to the *Outgoing* port, an active service must first be deactivated. Then you can choose the ‘Outgoing’ option from the Activation menu (highlight a service, right-click or press the [SPACE] bar to display the Activation menu).

The *Authentication* and *Encryption* options can be changed only before activation. To change these after activation, deactivate the service first, then change the options.

Once a service is activated, all the information regarding the service, including the RFCOMM channel number, is saved in the registry. (Some remote devices may change their RFCOMM channel numbers when they reboot, so your saved setting may not work when the remote device is rebooted. In that case, you must deactivate the service and reactivate it to detect the current RFCOMM channel.)

Set PIN

PINs can be set for each device by pressing the **Set PIN** button in the *Devices* tab, or you can skip this step and try to connect to the device first.



Important: *The remote device must have authentication enabled, otherwise the PIN authentication will fail.*

- Highlight a device, click on the **Set Pin** button, and type the **PIN**.

You will receive a message, either that the PIN has been successfully validated or that it has been rejected.

If the PIN has been validated, an asterisk (*) appears in the PIN column in the *Devices* list box, indicating that this device has a PIN set. Once a PIN is entered, it is saved in the registry.

To remove the PIN:

- Choose **Set PIN**, and press [ENTER].

The Servers Tab

If the 7535 G2 attempts to connect to a remote device that has Authentication enabled and does not have a required PIN set, an *Authentication Request* dialog box appears.

- Enter the **PIN**, and tap on **OK** to connect the devices.

5.7.2 The Servers Tab



Figure 5.37 The Server Tab

The Bluetooth connection is initiated from your 7535 G2 to the remote device. Therefore the 7535 G2 is called the ‘client’ and the remote is called the ‘server’. The *Servers* tab displays the server profiles that can be activated in your 7535 G2. There is currently one server profile available: Serial.

- Tap on the checkbox to activate the server, and it will display the associated port name beside the server name.

Once you activate a server profile, it is recommended that the 7535 G2 be rebooted before you try to bond from a server.



Note: *You do not need to reboot if you are deactivating a server.*

5.7.3 Outgoing Tab



Figure 5.38 The Outgoing Tab

Outgoing Port acts as a serial port that can be used to connect to a list of Bluetooth devices (one at a time), but you have the freedom to *switch on-the-fly*.

The *Outgoing Port* checkbox allows you to create the Outgoing port. When the port is created, the *Outgoing* tab lists the port name.

The Outgoing list dialog box displays a list of services marked as ‘Outgoing’. The * column indicates the currently selected service. You can tap on *Unselect* to reset the current selection, or you can tap on *Select* to make a selection. The *Remove* button deletes the service from the outgoing list.

The Prompt menu determines the behaviour of the pop-up Selection menu.

Choosing **Everytime** causes the Selection menu to be displayed each time an outgoing port is created. If you choose **Once**, the menu is displayed only when a partner service is not selected.

To display the *Selection* menu at any time:

- Press [CTRL] [ALT] [F1], and switch the partner Bluetooth device.

If a connection to a partner device already exists, the connection is dropped and another connection to the newly selected device is created instantly without disrupting the application that has opened the outgoing port.



Note: To add a service to the **Outgoing** port, an active service must first be deactivated. Then you can choose the ‘Outgoing’ option from the Activation menu (highlight a service, right-click or press the [SPACE] bar to display the Activation menu).

5.7.4 Active Conn. Tab



Figure 5.39 The Active Conn. Tab

The *Active Conn.* tab lists the *Name*, *Address*, and *Type* of the currently active connections. The table is periodically updated, but it can take a few seconds before it reflects the actual list of connections. The *Type* column of the table shows ‘ACL’ or ‘SCO’. The Connection list table shows the connections for scanning as well as the service connections.



Note: You can change the device-name and description of your radio by clicking on the System icon in Control Panel, which will open the System Properties dialog box. Click on the Device Name tab to access the menu and change your settings. Then click on OK.

Although the name will have changed in the Properties menu in Bluetooth Controls, the radio only reads it on boot-up. For the changes to take effect, you must cold reset the 7535 G2 (for cold reset instructions, see “Resetting The Hand-Held” on page 28).

5.7.5 The Properties Tab



Figure 5.40 The Properties Tab

The *Properties* tab displays information about your 7535 G2, and provides some port options.

The *Device Name* field shows the device name of your 7535 G2. This name can be changed (see the *Note* on the previous page for details).

Device Class shows the Class of Device (e.g. desktop, hand-held), which is always set to **Handheld**.

Local Bluetooth Address shows the address of your 7535 G2 radio.

Port Prefix is used to set the port name to either *BSP* or *COM*. When the name is set to *BSP*, BSP2 to BSP9 are available for activated services (including the server). When *COM* is chosen, COM7 to COM9 are available.

NQuery Retry (Name Query Retry) governs the number of times the hand-held will attempt to query the names of other Bluetooth devices if the first attempt fails. (When the 7535 G2 scans for other devices, it sometimes fails to scan names.)



Note: *Keep in mind that setting this parameter to a higher value will lengthen the scan time.*

5.7.6 The Bluetooth GPRS WAN Connection

The following steps describe how to set up an internet data connection using a GSM cellular telephone with Bluetooth. The 7535 G2 communicates via Bluetooth to the cell phone, which then accesses a WAN (Wide Area Network) and transfers data using GPRS.

1. To set up the internet parameters, choose the **Network And Dial-up Connections** icon from the *Control Panel*.



Figure 5.41 Network And Dial-up Connection Icon

2. Choose the **Make New Connection** icon.

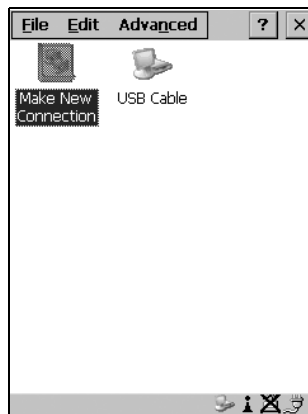


Figure 5.42 Creating A GPRS Connection

3. In the *Make New Connection* dialog box, choose **Dial-Up Connection**. Enter a name for your GPRS network connection.

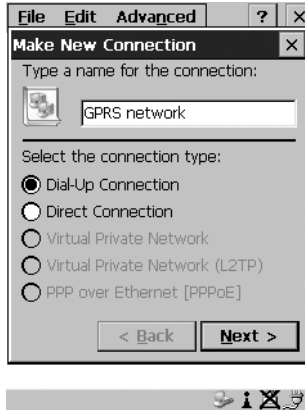


Figure 5.43 Setting Up The Connection

4. Choose the **Next** button to display the *Modem* dialog box.



Figure 5.44 Setting Up The Modem

5. In the dropdown menu labelled *Select a modem*, choose the name of the modem with which you want to connect, and then choose the **Configure** button to display the *Device Properties* dialog box.

The 7535 G2 communicates via Bluetooth to your Bluetooth-equipped cellular telephone and retrieves the parameters for the *Device Properties* dialog box. The 7535 G2 then disconnects.

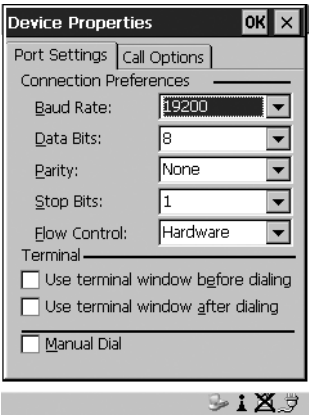


Figure 5.45 Port Settings

- 6. Under the *Call Options* tab, turn off **Cancel the call if not connected within**, and press [ENTER] to save your changes.

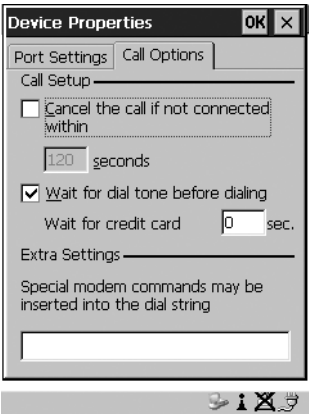


Figure 5.46 Call Options

7. In the *Modem* dialog box, choose the **Next** button to display the *Phone Number* dialog box.



Figure 5.47 Setting The Phone Number

The phone number you enter is network carrier dependent. Once you've specified all the necessary information, choose the **Finish** button.

8. In the *Control Panel*, choose the **Dialing** icon.

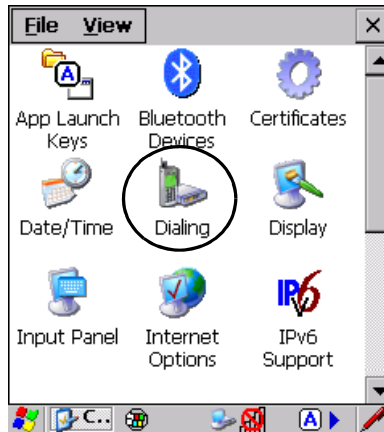


Figure 5.48 Dialing Icon

9. The values in the *Dialing Properties* dialog box need to be edited according to your network carrier specifications.



Figure 5.49 Setting Up Dialing Properties

Once you’ve edited this dialog box to reflect your network carrier requirements, press [ENTER] to save your changes.

10. At this point, you’ll need to return to the *Control Panel*, and choose the **Network and Dial-up Connections** icon.
11. In the network connection window, the new network configuration, in this case *GPRS Network* is displayed. Choose the **new** icon.

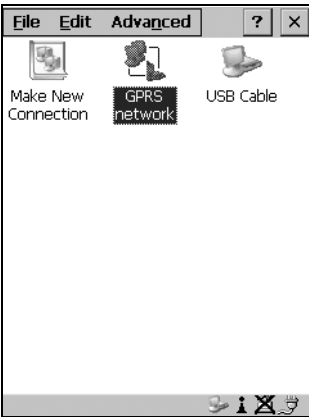


Figure 5.50 GPRS Network Connection

This onscreen message indicates the status of your connection: connected, disconnected, error messages, and so on.



Figure 5.51 Successful Connection

- Select the **Hide** button to move this message to the background.

You can now access the internet.



Figure 5.52 Accessing The Internet

5.8 Total Recall

Total Recall is a Psion Teklogix utility developed to maintain applications and device settings. It allows the setup of one hand-held unit to be quickly duplicated on another, as when first configuring a multi-unit site.

It also allows the complete recovery of a unit where the system Flash memory has been corrupted, or when a unit is being repaired and its internal circuit boards need to be replaced. This utility is based on a backup and restore concept.

- In the *Control Panel*, choose the **Total Recall** icon

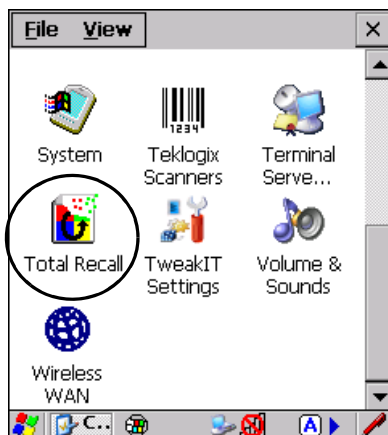


Figure 5.53 Total Recall Icon

5.8.1 Creating A Backup Profile

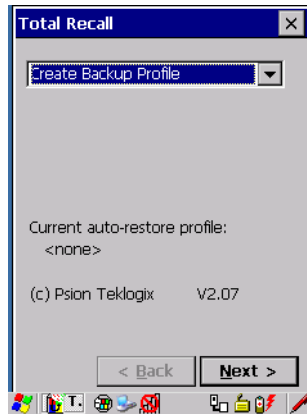


Figure 5.54 Backup Profile

In the dropdown menu, you can choose from four options: Create Backup Profile, View Selected Profile, Restore Selected Profile and Delete Selected Profile. Keep in mind however that until a profile is created, the only available option is *Create Backup Profile*.

- Choose the **Next** button to begin the process.




Figure 5.55 Profile Details

Profile Information

This dialog box lists the possible storage destinations for the profile file.

- To begin, type a name for the profile in the field labelled *Profile Name*.

The image type, *OS Version* and *Registry Type*, for the 7535 G2 is also listed here.

- Tap on this icon  to expand your settings for *Profile Type* and *Profile Location*.

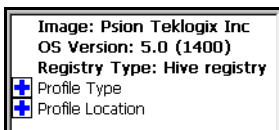


Figure 5.56 Profile Options

- *For this device only* – creates a backup that is manually restored by the operator.
- *AutoRestore for this device only* – creates a profile that automatically restores itself following a cold boot.
- *AutoRestore for this and other devices* – creates a profile that automatically restores after resuming from a cold boot, but it will not contain the touchscreen calibration coordinates or the Wireless radio settings.
- *Profile Location* – allows the operator to specify where the profile is to be saved. The location for the profile is either *Flash Disk* or *SD-MMC Card*.
- Tap on the **Next** button to display the next dialog box, *Add Files*.

Add Files



Figure 5.57 Adding Files

By default, *All Files* is selected so that all installed or copied files, database entries, and the Registry will be saved. You can, however, limit the backup to databases, and/or the registry only. By tapping the checkbox next to these items, you can add or remove a check mark to enable or disable the option.

The *Select Files* option allows you to select predefined file types.

- Remove the check mark next to *All Files*. You'll notice the checkbox next to *Select Files* changes ☐ to ☐+, indicating that additional options are available.
- Choose this icon ☐+ next to *Select Files* to view your options.

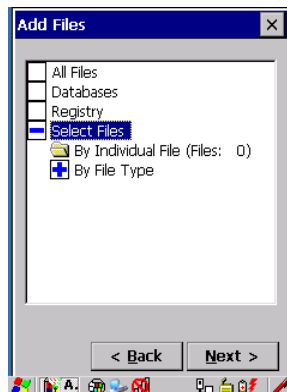


Figure 5.58 By File Type

Choosing **By Individual File** displays a pop-up menu where you can tailor the list of files you want to back up.

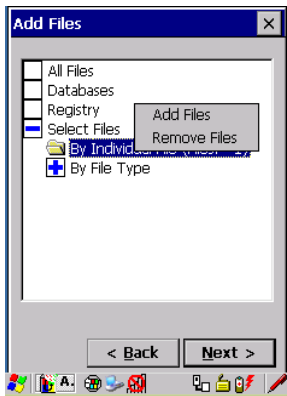


Figure 5.59 Add Files

To *add a file* to your backup list:

- Choose **Add Files**. Browse to and choose the files you want to add to your list.

To *remove a file* from your backup list:

- Choose **Remove Files**—a dialog box is displayed listing the files that will be backed up.
- Highlight the item you want to remove from the list, and tap on the **Remove** button.

Choosing **By File Type** allows you to select the file types that you want backed up.

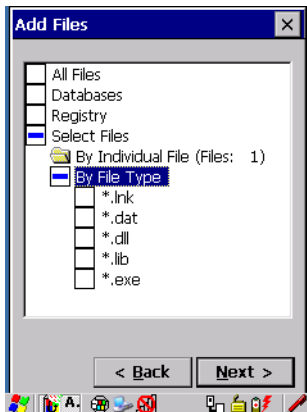


Figure 5.60 Adding Files By File Type

View Selections

Depending on what you have selected for inclusion in your profile, you can view a list of the selected files, databases and/or registry.

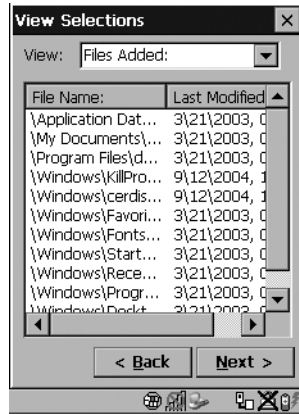


Figure 5.61 Viewing Selections

- Choose the **Next** button to perform the operation.

Perform The Operation

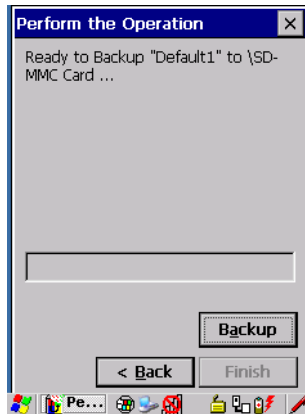


Figure 5.62 Performing The Backup

- Choose the **Backup** button to start the process, and create a profile.

5.8.2 Restoring A Profile

To manually restore a profile:

- Choose **Restore Selected Profile** from the dropdown menu, and choose the **Profile Name** displayed in the drop down box.



Note: *You can also manually restore an auto restore profile located in flash or a storage device.*

5.9 The Storage Manager


The Storage Manager allows the user to view information about the storage devices that are present in the 7535 G2, such as SD-MMC flash cards and Compact Flash cards.

5.9.1 Formatting A Memory Card

Formatting a memory card bulk-erases it. Once a card is erased, partitions may be created in it, similarly to those on a hard drive. Memory-card devices are normally ‘mounted’ (made available to the system) automatically when they are inserted. They must be dismounted before they can be formatted.

To format an entire memory card:

1. Select *Start> Settings>Control Panel*.
2. In *Control Panel*, double-click on the **Storage Manager** icon.
The Storage Manager menu opens:

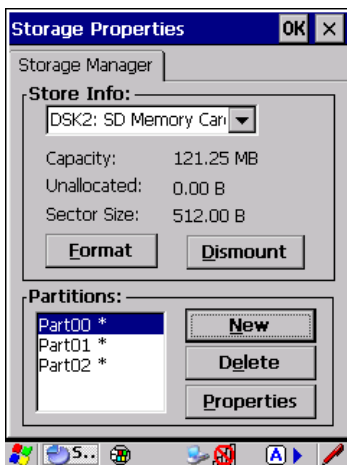

3. Select the memory card from the drop-down list.
4. Press the **Dismount** button to dismount the memory card. All partitions on the card will be dismounted.
5. Press the **Format** button to format the memory card.




Warning: *All partitions and information on the card will be erased during the formatting process.*

5.9.2 Creating Partitions

Once the card is formatted, new partitions can be created in it. The default is to create one partition that occupies the whole card, but a card can be divided into more than one partition if desired. Each partition appears as a separate folder in Windows Explorer.

To create new partitions:

1. Press the **New** button next to the Partitions listbox. The New Partition dialog appears:

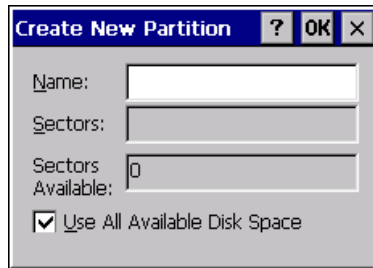

2. Enter a name for the partition.
3. If more than one partition is desired, uncheck the *Use All Available Diskspace* checkbox, then specify the desired number of sectors to be used by the partition:



Note: *The sector size of the card is given on the left-hand side of the Storage Properties dialog.*

4. Press **OK**. The new partition appears in the Partitions list:



The new partition is automatically mounted. This is indicated by an asterisk (*) next to its name in the partition list. Any unallocated space on the card is indicated at the left, and additional partitions can be created in it.

5.9.3 Partition Management

Partitions can be individually dismounted, mounted, deleted, or formatted as well. These and additional tasks are available from the Partition Properties dialog:



To dismount a partition:


1. Select the desired partition.
2. Press the **Properties** button. The Partition Properties dialog appears.
3. Press the **Dismount** button. The partition is dismounted. The asterisk disappears next to its name in the partitions list.

To delete a partition:

1. Select the desired partition.
2. Press the **Delete** button. A warning dialog appears.
3. Press the **OK** button. The partition is deleted.

To format a partition:

1. Select the desired partition.
2. Press the **Properties** button. The Partition Properties dialog appears.
3. Press the **Dismount** button. The partition is dismounted. The asterisk disappears next to its name in the partitions list.
4. Press the **Format** button. The Format dialog appears:

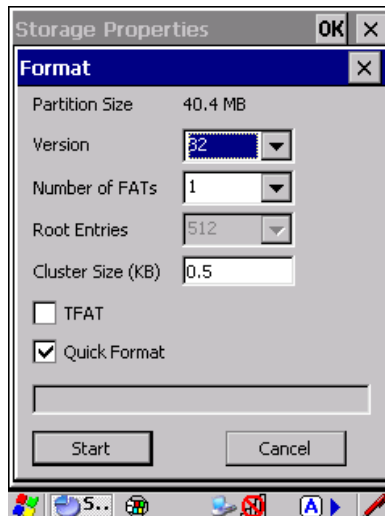

Partition Management

5. Choose your format options. These options include:
 - Version of file system (FAT-16, for devices holding up to 4 GB; or FAT-32, for devices containing up to 32 GB).
 - Number of FATs (File-Allocation Tables).
 - Number of entries allowed in the root directory.
 - Cluster size (.5 KB to 64 KB).

There are also two checkboxes, which govern:

- Whether to use the transaction-safe FAT file system (TFAT). This file system keeps multiple copies of the file-allocation table, changing one while maintaining another as a backup.
 - Whether to perform a quick format. Quick formatting removes all reference to data in the partition without erasing the actual partition. The partition will be treated as empty, and new data will overwrite it.
6. Press **Start**. The partition is formatted.

To mount a partition:

1. Select the desired partition.
2. Press the **Properties** button. The Partition Properties dialog appears.
3. Press the **Mount** button. The partition is mounted. The asterisk appears next to its name in the partitions list.

The Partition Properties dialog has buttons for additional functions. Partitions can be defragmented, and their file structure can be scanned.

5.10 IPv6 Support

The *IPv6 Support* icon in the *Control Panel* allows you to activate IPv6 network support on your unit if your network setup requires this. This internet protocol specification (version 6) supports 128-bit IP addresses, replacing version 4.



Figure 5.63 IPv6 Support Icon

- Choose the **IPv6 Support** icon to display the associated dialog box.

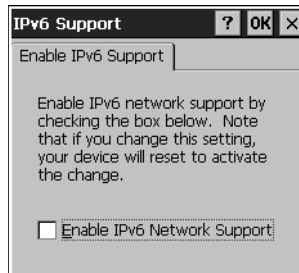


Figure 5.64 IPv6 Support Tab

- Choose the checkbox next to **Enable IPv6 Network Support** to enable this internet protocol.

5.11 Scanner Settings

The *Teklogix Scanners* icon in the *Control Panel* provides dialog boxes in which you can tailor bar code options and choose the bar codes your scanner will recognize. The parameters are preset with the default settings of the decoded scanner installed in the unit.

If you wish to recover the factory defaults after making changes, the defaults can be applied to a selected parameter, sub-tree of parameters, or all scanner parameters. Using the stylus, holding on a symbology will pop up a menu to default the sub-tree, or all settings. Holding on an individual setting will pop up a menu to default that setting, or all settings. This option cannot be accessed without a touchscreen.



Figure 5.65 Teklogix Scanners Icon

5.11.1 Bar Codes

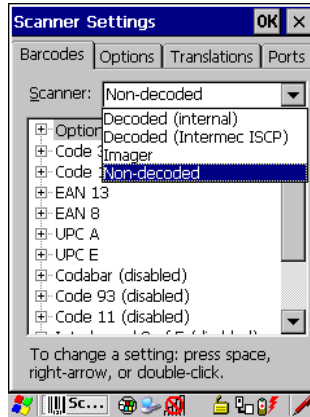


Figure 5.66 Scanner Properties

5.11.1.1 Scanner

The dropdown menu to the right of the *Scanner* option allows you to choose configurations for one of the following scanner types, depending on what is installed in/on your hand-held: **Non-decoded**, **Decoded (internal)**, **Decoded (Intermec ISCP)**, **Imager** and **Decoded (external)**.

The symbologies listed in the *Barcodes* tab change to reflect the scanner you choose and the bar codes it supports. Always defer to your bar code scanner's programming manual when in doubt about the availability or settings for any parameter.



Note: *Your 7535 G2 comes preconfigured from the factory for internal scanner types. The type of scanner installed can be determined from the System icon in the Control Panel, under the System Properties tab.*



Important: *To improve the decode speed and performance, enable (set to 'on') only those codes that are required by the application.*

Keep in mind that some bar code types are only available when an internal imaging scanner is installed. All internal scanners can be configured using these dialog boxes. External, *non-decoded* scanners are also configured through the *Scanner Properties* dialog box.

However, external *decoded* scanners must be configured by scanning special configuration bar codes. In these cases, the scanner manufacturer provides programming manuals for configuration purposes.

- For the Symbol LS3408 decoded scanner, refer to the programming guide supplied with your scanner.
- For PowerScan[®] (PSC) decoded scanners, refer to the PowerScan Programming Guide.

5.11.2 Non-Decoded Scanners

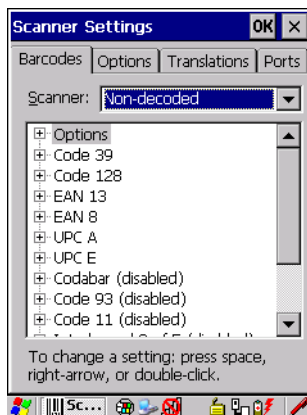


Figure 5.67 Non-Decoded Scanner Options

- Tap on the *Scanner* dropdown menu, and choose **Non-decoded**.

All the available bar code symbologies for this type of scanner can be selected in this tab.

A ‘plus’ sign (+) to the left of the menu item indicates that a sub-menu of parameters is attached.

- Tap the stylus on the + sign to display the sub-menu.
- To change a parameter value, double-tap on the parameter. If you need to type a value, a dialog box is displayed in which you can type a new value. If you need to change a *yes* or *no* value, double-tapping on the parameter toggles between *yes* and *no*.

If you're using the keyboard:

- Highlight the bar code you want to work with, and press the [RIGHT] arrow key to display the sub-menu.
- Use the [UP] and [DOWN] arrow keys to highlight a parameter.
- To change a parameter value, press [SPACE] *or* the [RIGHT] arrow key. If a field requires text entry, a text box is displayed in which you can enter the appropriate value.

5.11.2.1 Options

- Tap the stylus on the + sign next to *Options* to display these parameters.

Dot Time (msec)

The value selected for “Dot Time (msec)” determines (in milliseconds) how long the targeting dot remains on before the scanner switches to a normal scan sweep. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value from 0 to 3000. A value of **0** (zero) disables the target dot.

Short Code

When enabled, this parameter allows scanning of short 1 2 of 5 bar codes (2 characters). When disabled, these short bar codes are rejected.

Enabling “Short Code” may reduce the robustness of the decoding since the hand-held must decode more potential bar codes; it is therefore not recommended for general-purpose bar codes with 4 or more characters.

Verify

The value entered for this parameter determines the number of correct additional decodes required *after* the initial decode, prior to a bar code being accepted. Higher values significantly increase the time it takes to decode a bar code but also improve the reliability of the decoded bar code.

Security

This parameter controls the tolerance for decoding edge-to-edge bar codes (Code 93, Code 128, UPC/EAN). Lower values have a lower tolerance for misreads, but they also increase the time it takes to decode the bar code. The default value of **30** is generally a good compromise setting.

5.11.2.2 Code 39

Enabled

Set this parameter to **ON** to enable “Code 39” or **OFF** to disable it.

Full ASCII

If this parameter is enabled, the characters +, %, and / are used as escape characters. The combination of an escape character and the next character is converted to an equivalent ASCII character.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

AIAG Strip

If this parameter is enabled, the AIAG data identifier is removed from each decoded Code 39 label. The data identifier occurs in the first position next to the Code 39 start character. It can be a single alphabetic character or a series of numeric digits followed by an alphabetic character. This identifier defines the general category or specific use of the data contained in the rest of the bar code.



Note: *If your unit is operating with the Psion Teklogix TESS application, this parameter should **not** be used in conjunction with the TESS AIAG feature. This is because the hand-held performs the strip function before it processes the data through the AIAG feature; if the prefix is stripped, the data is not identified as AIAG.*

Error Accept

If the “Err Accept” and “AIAG Strip” parameters are enabled, all label data without an AIAG identifier character is accepted. If the “Err Accept” parameter is disabled and the “AIAG Strip” parameter is enabled, the label data is not accepted.

MOD Checks

This parameter allows you to choose the check digit calculated: MOD 43 Check, MOD 10 Check or None.

- Double-tap on **MOD Checks** to display your options.
- Tap on a check digit to highlight it, and tap on **OK**.

If you choose **None**, a check is not executed.

Field Size/Chars

Field Size

The field size is the length of the field after the first character is stripped and the prefix and suffix characters are added. If the field size is non-zero, only bar codes of that length are passed through.

Prefix Char

This character, if non-zero, is added before a successfully decoded bar code. Press the key you want to insert in the dialog box attached to this parameter. The ASCII/Unicode key value of the keypress is displayed.

Pressing the [ESC] key in this dialog box resets the data to zero.

Suffix Char



Note: *The appended character is treated as any other keyboard character. For example, if [BKSP] is pressed, the usual action for that key is performed. If your unit is operating with the Psion Teklogix ANSI emulation application, the hand-held transmits the escape sequence associated with the function immediately after the bar code data.*

This character, if non-zero, is added after a successfully decoded bar code. Press the key you want to insert in the dialog box attached to this parameter. The ASCII/Unicode key value of the keypress is displayed.

Pressing the [ESC] key in this dialog box resets the data to zero.

Strip Leading

This parameter determines the number of characters that will be removed from the beginning of the bar code before the prefix character is added.



Note: *For Code 39 bar codes, the “AIAG Strip” is performed before the “Strip Leading”.*

Strip Trailing

The value entered in this parameter determines the number of characters that will be removed from the end of the bar code before the suffix character is added.

5.11.2.3 Code 128

Enabled

Set this parameter to **ON** to enable “Code 128” or **OFF** to disable it.

Include Sym

Setting “Include Sym” to **ON** causes the group separator(s) and start code contained in this type of bar code to be displayed on the screen.



Note: *This option is available only when ‘EAN/UCC 128’ is selected.*

Variations

When using Code 128, you can choose the bar code variation the scanner will recognize. The options available are Standard, UCC 128 and EAN/UCC 128.

- Double-tap on **Variations** to display a dialog box listing your options.
- Tap on a variation to highlight it, and then tap on **OK**.

If you choose **None**, a check is not executed.

Standard

Enable **Standard** if “Code 128” is desired.

UCC 128

UCC 128 is a variation of “Code 128”.

EAN/UCC 128

To successfully scan this type of bar code, “EAN/UCC 128” must be enabled. “EAN/UCC” bar codes include group separators and start codes.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.2.4 EAN 13

Enabled

Set this parameter to **ON** to enable “EAN 13” or **OFF** to disable it.

Enable Bookland EAN

Setting this parameter to **ON** allows your scanner to recognize Bookland EAN bar codes.

Include Country

If this parameter is enabled, the country code is included with the decoded bar code data.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Addendum



Important: *Before “Addendum” can take effect, the “Short Code” parameter (see page 145) must be enabled.*

An addendum is a separate bar code, supplementary to the main bar code. This parameter provides three options: **Disabled**, **Optional** and **Required**. Depending on the value chosen for this parameter, an addendum is recognized or ignored.

- Double-tap on **Addendum** to display a dialog box listing your options.
- Highlight an item, and tap on **OK**.

When “Addendum” is set to **Disabled**, the scanner does not recognize an addendum. If this parameter is set to **Optional**, the scanner searches for an addendum and if one exists, appends it to the main bar code. When the parameter is set to **Required**, the scanner does not accept the main bar code without an addendum.



Note: *Setting Addendum to **Optional** will reduce performance. This value should only be used if some bar codes actually have addendums.*

Prefix/Suffix

Prefix Char

This character, if non-zero, is added before a successfully decoded bar code. Press the key you want to insert in the dialog box attached to this parameter. The ASCII/Unicode key value of the keypress is displayed.

Pressing the [ESC] key in this dialog box resets the data to zero.

Suffix Char

This character, if non-zero, is added after a successfully decoded bar code. Press the key you want to insert in the dialog box attached to this parameter. The ASCII/Unicode key value of the keypress is displayed.

Pressing the [ESC] key in this dialog box resets the data to zero.

Strip Leading

This parameter determines the number of characters that will be removed from the beginning of the bar code before the prefix character is added.



Note: *The appended character is treated as any other keyboard character. For example, if [BKSP] is pressed, the usual action for that key is performed. If your hand-held is operating with the Psion Teklogix ANSI emulation application, the hand-held transmits the escape sequence associated with the function immediately after the bar code data.*

Strip Trailing

The value entered in this parameter determines the number of characters that will be removed from the end of the bar code before the suffix character is added.

5.11.2.5 EAN 8

Enabled

Set this parameter to **ON** to enable “EAN 8” or **OFF** to disable it.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Addendum



Important: *Before “Addendum” can take effect, the “Short Code” parameter (see page 145) must be enabled.*

See “Addendum” on page 149.

Prefix/Suffix

See “Prefix/Suffix” beginning on page 149.

5.11.2.6 UPC A

Enabled

Set this parameter to **ON** to enable “UPC A”.

Include Number Sys

If this parameter is enabled, the number system digit is included with the decoded bar code data.

Include Check

If this parameter is enabled, the check digit will be included with the decoded bar code data.

Addendum



Important: *Before “Addendum” can take effect, the “Short Code” parameter (see page 145) must be enabled.*

Refer to “Addendum” on page 149.

Prefix/Suffix

Refer to page 149 for details.

5.11.2.7 UPC E

Enabled

Set this parameter to **ON** to enable “UPC E”.

Convert to UPC-A

Setting this parameter to **ON** results in a non-standard decoding that returns 12 digits from the 6 digit UPC E bar code.

Include Number Sys

If this parameter is enabled, the number system digit is included with the decoded bar code data.

Include Check

When enabled, the check digit is included with the decoded bar code data.

Addendum



Important: *Before “Addendum” can take effect, the “Short Code” parameter (see page 145) must be enabled.*

Refer to “Addendum” on page 149.

Prefix/Suffix

Refer to page 149 for details.

5.11.2.8 Codabar

Enabled

Set this parameter to **ON** to enable “Codabar” or **OFF** to disable it.

Strip Start/Stop Chars

Codabar uses the characters A, B, C, and D as start and stop characters. Thus, the first and last digits of a Codabar message must be A, B, C, or D, and the body of the message should not contain these characters. Setting this parameter to **ON** strips the start and stop characters from this bar code.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.2.9 Code 93

Enabled

Set this parameter to **ON** to enable “Code 93”.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.2.10 Code 11

Enabled

Set this parameter to **ON** to enable “Code 11”.

Include Check

If “Include Check” is enabled, the check digit is included with the decoded bar code data.

Check Digits

This parameter can be set to None, One Check Digit or Two Check Digits.

- Double-tap on this parameter to display a dialog box listing your options.
- Highlight the check digit you want to use, and tap on **OK**.

If this parameter set to **One Check Digit**, it is assumed that the last digit is a check digit.

If this parameter is set to **Two Check Digits**, it is assumed that the last two digits are check digits.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.2.11 Interleaved 2 of 5

Enabled

Set this parameter to **ON** to enable “Interleaved 2 of 5”.

MOD 10 Check

If this parameter is enabled, the “MOD 10” check digit is calculated. This calculation is the same as the Code 39 MOD 10 check digit.

ITF Check

If this parameter is enabled, the ITF-14/16 MOD 10 check digit is calculated.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.2.12 MSI Plessey

Enabled

Set this parameter to **ON** to enable “MSI Plessey”.

One Check Digit

If this parameter is enabled, it is assumed that the last digit is a check digit.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.2.13 Discrete 2 of 5

Enabled

Set this parameter to **ON** to enable “Discrete 2 of 5”.

MOD 10 Check

If this parameter is enabled, the MOD 10 check digit is calculated. This calculation is the same as the Code 39 MOD 10 check digit.

ITF Check

If this parameter is enabled, the ITF-14/16 MOD 10 check digit is calculated.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.2.14 IATA 2 of 5

Enabled

Set this parameter to **ON** to enable “IATA 2 of 5”.

MOD 10 Check

If this parameter is enabled, the MOD 10 check digit is calculated.

ITF Check

If this parameter is enabled, the ITF-14/16 MOD 10 check digit is calculated.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Field Size/Chars

Refer to the description beginning on page 147 for details.

5.11.3 Decoded (Internal) Scanners

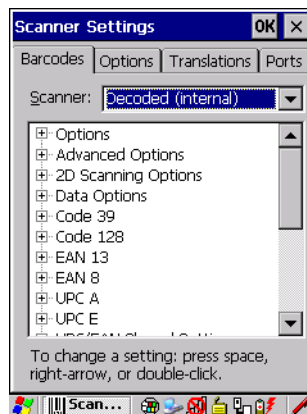


Figure 5.68 Decoded (Internal) Scanner

- Tap on the **Scanner** dropdown menu, and choose **Decoded (internal)**.

5.11.3.1 Options

Dot Time (msec)

The value selected for *Dot Time (msec)* determines (in milliseconds) how long the targeting dot remains on before the scanner switches to a normal scan sweep. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value of 0 msec, 200 msec or 400 msec. A value of 0 (zero) disables the target dot.

Aim Duration

This parameter determines the total time the aiming-dot appears before the scanner laser begins sweeping. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value from 0 to 30 (0 to 3 sec.). A value of 0 (zero) disables the aiming-dot.

Laser On Time

The value assigned to this parameter determines how long the laser will remain on when the scan button or trigger is pressed.

Double-tapping on this parameter displays a dialog box in which you can enter a value between 5 and 99, each number representing 0.1 seconds.

5.11.3.2 Advanced Options

Continuous Scan Mode

Setting this parameter to 'on' keeps the laser on and continuously decoding as long as the scanner button is pressed and held down.

Minimum Cancel Time

The value assigned to this parameter determines the time delay before the scanner is turned off, once the scanner trigger or button is released. This gives the scanner a minimum amount of time to complete its current decode before the scan is cancelled when the user quickly triggers on/off.

Low Power Timeout

To extend laser life, you can select the time the scanner remains active following a successful decode. The scanner wakes from low power mode when a bar code is scanned—a successful decode restores normal blinking.

This is only used if the unit's Trigger Mode has been changed to Continuous On. If the unit is used in a fixed mount this parameter might be used, but not if the unit is used as a hand-held.

When you double-tap on this parameter, a dialog box is displayed in which you can choose a value of 30 sec., 1 min., 2 min. or 3 min.

Parameter Scanning

Setting this parameter to **ON** enables decoding of parameter bar codes.

Linear Security Level

This parameter allows you to select the security level appropriate for your bar code quality. There are four levels of decode security for linear code types (e.g., Code 39, Interleaved 2 of 5). Higher security levels should be selected for decreasing levels of bar code quality. As security levels increase, the scanner's decode speed decreases.

Double-tapping on this parameter displays a dialog box in which you can enter a value from 1 to 4.

Linear security level 1 specifies that the following code types must be successfully read twice before being decoded:

Code Type	Length
Codabar	All
MSI Plessey	4 or less
D 5 of 5	8 or less
I 2 of 5	8 or less

“Linear security level 2” specifies that all types of codes must be successfully read twice before being decoded.

“Linear security level 3” specifies that code types other than the following must be successfully read twice before being decoded. The following codes must be read three times:

Code Type	Length
MSI Plessey	4 or less
D 2 of 5	8 or less
I 2 of 5	8 or less

“Linear security level 4” requires that all code types be successfully read three times before being decoded.

Bi-Direction Redundancy



Note: *This parameter is only valid if a “Linear Security Level” is enabled.*

When this parameter is enabled, a bar code must be successfully scanned in both directions (forward and reverse) before being decoded.

5.11.3.3 2D Scanning Options

Scanning Mode

When you double-tap on this parameter, a dialog box is displayed in which you can choose one of the following scanning modes: *Smart Raster*, *Always Raster*, *Programmable Raster*, *Slab Pattern*, *Cyclone Pattern* or *Semi-Omni Pattern*.

Raster Height And Raster Expand Rate

These parameters determine the laser pattern's height and rate of expansion.



Note: *These parameters are only used when either Programmable Raster or Always Raster is assigned to the 2D Scanning Mode parameter. "Raster Height" and "Raster Expand Rate" are intended for very specific applications and are usually not required for normal scanning purposes.*

Double-tapping on these parameters displays dialog boxes in which you can enter a value from **1** to **15**.

5.11.3.4 Data Options

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

When you double-tap on this parameter, a dialog box is displayed in which you can choose a transmit code: None, AIM or Symbol.

Scan Data Format

This parameter allows you to change the scan data transmission format.

Double-tapping on "Scan Data Format" displays the following options from which you can choose a data format: data (as-is), data [S1], data [S2], data [S1][S2], [P] data, [P] data [S1], [P] data [S2] and [P] data [S1][S2].

Prefix [P], Suffix [S1] And Suffix [S2]

A prefix and/or one or two suffixes may be appended to scan data for use in data editing. When you double-tap on these parameters, dialog boxes are displayed in which you can enter a value from **0** to **255**.

Delete Char Set ECIs

Setting this parameter to **ON** enables the scanner to delete any escape sequences representing Character Set ECIs (Extended Channel Interpretations [also known as GLIs]) from its buffer before transmission.

When this parameter is enabled, the scanner transmits data from PDF417 and MicroPDF417 bar codes containing Character Set ECIs, even when the ECI Protocol is disabled.

ECI Decoder

Setting this parameter to **ON** enables the scanner to interpret any Extended Channel Interpretations (ECIs) supported by the scanner. This parameter has no effect on symbols that were not encoded using ECIs.

If this parameter is set to **OFF** and a symbol that was encoded using an ECI escape is scanned, the scanner transmits the ECI escape followed by the uninterpreted data.

5.11.3.5 Code 39

Enabled

Setting this parameter to **ON** enables “Code 39”.

Enable Trioptic Code 39



Note: “Trioptic Code 39” and “Full ASCII” should **not** be enabled simultaneously. The scanner does not automatically discriminate between these two symbologies.

Trioptic Code 39 symbols always contain six characters. Setting this parameter to **ON** allows this type of symbology to be recognized.

Convert To Code 32



Note: “Code 39” must be enabled in order for this parameter to function.

Setting this parameter to **ON** allows the scanner to convert the bar code from “Code 39” to “Code 32”.

Code 32 Prefix



Note: “Convert to Code 32” must be enabled in order for this parameter to function.

When this parameter is enabled, the prefix character “A” is added to all “Code 32” bar codes.

Set Length L1 And Set Length L2

Lengths for “Code 39” can be set for **Any length**, **Length within a range**, **One discrete length** or **Two discrete lengths**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes labelled *Set Code Lengths* where you can define the code length that will be decoded by your scanner.

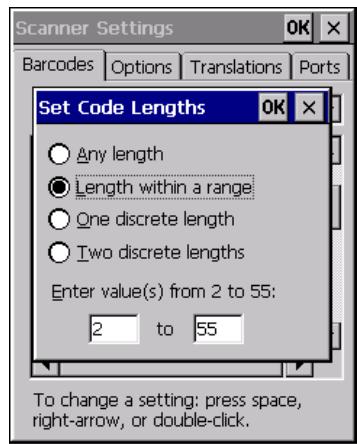


Figure 5.69 Setting Code Lengths

Choosing **One discrete length** allows you to decode only those codes containing a selected length. Choosing **Two discrete lengths** allows you to decode only those codes containing two selected lengths. **Length within a range** allows you to decode a code type within a specified range from **2** to **55**.

Check Digit Verification

When this parameter is enabled, the integrity of a “Code 39” symbol is checked to ensure that it complies with specified algorithms.



Note: *Only those “Code 39” symbols that include a MOD 43 check digit are decoded when this parameter is enabled.*

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Full ASCII

If this parameter is enabled, the characters +, %, and / are used as escape characters. The combination of an escape character and the next character is converted to an equivalent ASCII character.

Decode Performance

If this parameter is enabled, one of three decode levels can be chosen in the “Decode Performance Level” parameter.

Decode Perf. Level

This parameter provides three levels of decode performance or “aggressiveness” for Code 39 symbols. Increasing the performance level reduces the amount of required bar code orientation—this is useful when scanning very long and/or truncated bar codes. Keep in mind that increased levels reduce decode security.

When you double-tap on this parameter, a dialog box is displayed in which you can enter a decode performance level of between **1** and **3**.

Field Size/Chars

Refer to page 147 for details.

5.11.3.6 Code 128

Enabled

Set this parameter to **ON** to enable “Code 128”.

Enable UCC/EAN-128

EAN/UCC bar codes include group separators and start codes. To successfully scan this type of bar code, “EAN/UCC 128” must be enabled.

Enable ISBT 128

To successfully scan this type of bar code, this option must be set to **ON**.

Decode Performance

If this parameter is set to **ON**, one of three decode levels assigned to the “Decode Performance Level” parameter can be selected.

Decode Perf. Level

This parameter provides three levels of decode performance or “aggressiveness” for Code 128 symbols. Increasing the performance level reduces the amount of required bar code orientation, allowing you to scan at an angle horizontal to the bar code. This is useful when scanning very long and/or truncated bar codes. Keep in mind that increased levels reduce decode security. There is a limitation that it can only be used with one fixed length.

When you double-tap on this parameter, a dialog box is displayed in which you can enter a decode performance level of between **1** and **3**.

Field Size/Chars

Refer to page 147 for details.

5.11.3.7 EAN 13

Enabled

Set this parameter to **ON** to enable “EAN 13”.

Prefix/Suffix

See “Prefix/Suffix” beginning on page 149.

5.11.3.8 EAN 8

Enabled

Set this parameter to **ON** to enable “EAN 8”.

EAN-8 Zero Extend

When this parameter is enabled, five leading zeros are added to decoded EAN-8 symbols, making them compatible in format to EAN-13 symbols. Disabling this parameter returns EAN-8 symbols to their normal format.

Prefix/Suffix

See “Prefix/Suffix” beginning on page 149.

5.11.3.9 UPC A

Enabled

Set this parameter to **ON** to enable “UPC A”.

UPC-A, Check Digit

If you enable this parameter, the check digit is included with the decoded bar code data.

UPC-A, Preamble

When you double-tap on this parameter, a dialog box is displayed where you can choose one of three options for lead-in characters for UPC-A symbols transmitted to the host device:

System Char – system character transmitted with the data,

Country code and System Char – both the country code (“0” for USA) and system character are transmitted with the data, or

None – no preamble is transmitted. The lead-in characters are considered part of the symbol.

Prefix/Suffix

See “Prefix/Suffix” beginning on page 149.

5.11.3.10 UPC E

Enabled UPC-E

Set this parameter to **ON** to allow “UPC E” bar code scans.

Enabled UPC-EI

Set this parameter to **ON** to allow “UPC-EI” (zero suppressed) bar code scans.

UPC-E And UPC-EI Check Digit

If you enable one or both of these parameters, a check digit is included with the decoded bar code data.

UPC-E And UPC-EI Preamble

When you double-tap on one of these parameters, a dialog box is displayed where you can choose one of three options for lead-in characters for UPC-E and UPC-EI symbols transmitted to the host device:

System Char – system character transmitted with the data,

Country code and System Char – both the country code (“0” for USA) and system character are transmitted with the data, or

None – no preamble is transmitted. The lead-in characters are considered part of the symbol.

Conv. UPC-E To UPC-A

This parameter converts UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Conv. UPC-EI To UPC-A

This parameter converts UPC-EI (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Prefix/Suffix

See “Prefix/Suffix” beginning on page 149.

5.11.3.11 UPC/EAN Shared Settings

The parameters you set here are a shared across all available UPC and EAN bar codes.

Enable Bookland EAN

Setting this parameter to ON allows your scanner to recognize Bookland EAN bar codes.

Supplementals

‘Supplementals’ are additionally appended characters (2 or 5).

Double-tapping this parameter displays a list of options. If **Ignore** is chosen, UPC/EAN is decoded and the supplemental characters are ignored. If **Decode** is

chosen, UPC/EAN symbols are decoded **with** supplementals. **Autodiscriminate** works in conjunction with the Supp. Redundancy parameter.

Supp. Redundancy

With “Autodiscriminate” selected in the “Supplementals” parameter, “Supp. Redundancy” adjusts the number of times a symbol without supplementals is decoded before transmission.

When you double-tap on this parameter, a dialog is displayed in which you can enter a value between 2 and 20. A value of 5 or above is recommended when **Autodiscriminate** is selected and you are decoding a mix of UPC/EAN symbols with and without supplementals.

Security Level

This parameter controls the tolerance for decoding edge-to-edge UPC/EAN bar codes. Double-tapping on this parameter displays a dialog box in which you can choose a level from 0 to 3. Lower values have a lower tolerance for misreads, but they also increase the time it takes to decode the bar code.

Linear Decode

“Linear Decode” applies to code types containing two adjacent blocks (e.g., UPC-A, EAN-8, EAN-13). When enabled (set to **ON**), a bar code is transmitted only when both the left and right blocks are successfully decoded within one laser scan. This option should be enabled when bar codes are in proximity to each other.

2D UPC Half Block Stitching

Setting this parameter to **ON** enables “UPC Half Block Stitching” for the SE 3223 omnidirectional engine only.

5.11.3.12 Codabar

Enabled

Set this parameter to **ON** to enable “Codabar”.

Set Length L1 And Set Length L2

Lengths for “Codabar” can be set for **Any length**, **Length within a range**, **One discrete length** or **Two discrete lengths**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled *Set Code Lengths* where you can define the code length that will be recognized by your scanner.

Choosing **One discrete length** allows you to decode only those codes containing a selected length. Choosing **Two discrete lengths** allows you to decode only those codes containing two selected lengths. **Length within a range** allows you to decode a code type within a specified range from 5 to 55.

CLSI Editing

When enabled, this parameter strips the start and stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar symbol.



***Note:** Symbol length does not include start and stop characters.*

NOTIS Editing

When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.

Field Size/Chars

Refer to page 147 for details.

5.11.3.13 Code 93

Enabled

Set this parameter to **ON** to enable “Code 93”.

Set Length L1 And Set Length L2

Lengths for “Code 93” can be set for **Any length**, **Length within a range**, **One discrete length** or **Two discrete lengths**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled **Set Code Lengths** where you can define the code length that will be recognized by your scanner.

Choosing **One discrete length** allows you to decode only those codes containing a selected length. Choosing **Two discrete lengths** allows you to decode only those codes containing two selected lengths. **Length within a range** allows you to decode a code type within a specified range from 4 to 55.

Field Size/Chars

Refer to page 147 for details.

5.11.3.14 Interleaved 2 of 5

Enabled

Set this parameter to **ON** to enable “Interleaved 2 of 5”.

Set Length L1 And Set Length L2

Lengths for “Interleaved 2 of 5” can be set for **Any length**, **Length within a range**, **One discrete length** or **Two discrete lengths**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled **Set Code Lengths** where you can define the code length that will be recognized by your scanner.

Choosing **One discrete length** allows you to decode only those codes containing a selected length.

Choosing **Two discrete lengths** allows you to decode only those codes containing two selected lengths.

Length within a range allows you to decode a code type within a specified range from 4 to 14.

Check Digit Verification

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies with a specified algorithm: either USS (Uniform Symbology Specification) or OPCC (Optical Product Code Council).

Transmit Check Digit

If this parameter is enabled, the check digit is included with the bar code data.

Convert To EAN 13

If this parameter is enabled, an I 2 of 5 bar code is converted to EAN 13.

Field Size/Chars

Refer to page 147 for details.

5.11.3.15 MSI Plessey

Enabled

Set this parameter to **ON** to enable “MSI Plessey”.

Set Length L1 And Set Length L2

Lengths for “MSI Plessey” can be set for **Any length**, **Length within a range**, **One discrete length** or **Two discrete lengths**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled **Set Code Lengths** where you can define the code length that will be recognized by your scanner.

Choosing **One discrete length** allows you to decode only those codes containing a selected length. Choosing **Two discrete lengths** allows you to decode only those codes containing two selected lengths. **Length within a range** allows you to decode a code type within a specified range from 6 to 55.

Check Digits

Double-tapping on this parameter displays a dialog box in which you can choose One or Two check digit(s).

If this parameter is set to **One**, it is assumed that the last digit is a check digit. If “Check Digits” is set to **Two**, it is assumed that the last two digits are check digits.



Note: *If **Two** check digits is selected, an MSI Plessey “Check Digit Algorithm” must also be selected. See page 9-88.*

Transmit Check Digit

If this parameter is enabled, the check digit is included with the bar code data.

Check Digit Algorithm

When the Two MSI Plessey check digits option is selected, an additional verification is required to ensure integrity. Double-tapping on this parameter displays a dialog box in which you can choose the algorithm to be used: MOD 10/MOD 11 or MOD 10/MOD 10.

Field Size/Chars

Refer to page 147 for details.

5.11.3.16 Discrete 2 of 5

Enabled

Set this parameter to **ON** to enable “Discrete 2 of 5”.

Set Length L1 And Set Length L2

Lengths for “Discrete 2 of 5” can be set for **Any length**, **Length within a range**, **One discrete length** or **Two discrete lengths**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled **Set Code Lengths** where you can define the code length that will be recognized by your scanner.

Choosing **One discrete length** allows you to decode only those codes containing a selected length. Choosing **Two discrete lengths** allows you to decode only those codes containing two selected lengths. **Length within a range** allows you to decode a code type within a specified range from 1 to 12.

Field Size/Chars

Refer to page 147 for details.

5.11.3.17 2D PDF-417

Enabled

Setting this parameter to **ON** enables PDF-417 two dimensional (2D) coding.

Field Size/Chars

Refer to page 147 for details.

5.11.3.18 2D Micro PDF-417

Enabled

Setting this parameter to **ON** enables “2D Micro PDF-417” bar code scanning. Micro PDF-417 is a multi-row symbology that is useful for applications requiring greater area efficiency but lower data capacity than PDF-417.

Code 128 Emulation

When this parameter is enabled, the scanner transmits data from certain Micro PDF-417 symbols as if it was encoded in Code 128 symbols.

If Code 128 Emulation is enabled, the following Micro PDF-417 symbols are transmitted with one of the following prefixes:

-]C1 if the first codeword is 903-907, 912, 914, 915
-]C2 if the first codeword is 908 or 909
-]C0 if the first codeword is 910 or 911

Decoded (Internal) Scanners

RSS Code (Reduced Space Symbology)

If Code 128 Emulation is set to OFF, the Micro PDF-417 symbols are transmitted with one of the following prefixes:

JL3 if the first codeword is 903-907, 912, 914, 915

JL4 if the first codeword is 908 or 909

JL5 if the first codeword is 910 or 911

Field Size/Chars

Refer to page 147 for details.

5.11.3.19 RSS Code (Reduced Space Symbology)

Enable RSS-14

RSS-14 code can be either purely linear or split in half with one half stacked on top of the other half. Stacking the code reduces the bar code length, and providing the nominal height of the code is maintained, it can be omni-directionally scanned.

Enable RSS Limited

‘RSS-Limited’ is restricted, in that it can only encode 14 digit GTINs (global trade item numbers) that begin with either 0 or 1. It is not stackable and is not designed to be read omni-directionally.

Enable RSS Expanded

‘RSS Expanded’ uses the same application identifiers as UCC/EAN-128 codes but they can be split into sections and stacked several rows high, reducing the length of the symbol, while increasing the capacity of data that can be stored. ‘RSS Expanded’ code can be omni-directionally scanned.

Field Size/Chars

Refer to page 147 for details.

5.11.3.20 Composite



Important: *To successfully read this type of bar code, the two types of symbologies included in a composite bar code must be enabled. For imagers, “Center Bar Code Only” must also be disabled.*

A composite symbol includes multi-row 2D components making it compatible with linear and area CCD scanners along with linear and rastering laser scanners.

The options available for this parameter represent multi-level components of a composite symbol.

Enable CC-C And Enable CC-AB

To activate these components, set the parameters to **ON**.

Enable TLC-39

This composite component integrates MicroPDF417 with the linear code. Setting this parameter to **ON** enables this parameter.

5.11.4 Decoded (Intermec ISCP)

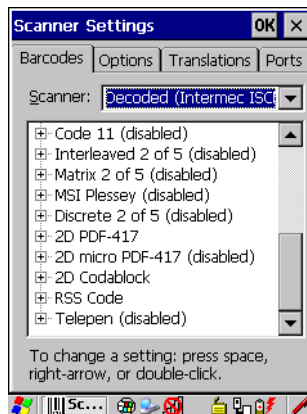


Figure 5.70 Decoded Intermec Scanner

- Tap on the **Scanner** dropdown menu, and choose **Decoded (Intermec ISCP)**.

5.11.4.1 Options

Laser On Time

The value assigned to this parameter determines how long the laser will remain on when the scan button or trigger is pressed.

Double-tapping on this parameter displays a dialog box in which you can enter a value between 1 and 10 seconds.

5.11.4.2 Advanced Options

Continuous Scan Mode

Setting this parameter to **ON** keeps the laser on and continuously decoding as long as the scanner button is pressed and held down.

Minimum Cancel Time

The value assigned to this parameter determines the time delay before the scanner is turned off, once the scanner trigger or button is released. This gives the scanner a minimum amount of time to complete its current decode before the scan is cancelled when the user quickly triggers on/off.

Parameter Scanning

Setting this parameter to **ON** enables decoding of parameter bar codes.

Same Read Validate

The data is only transmitted after repeated reads give the same result. The value assigned at this parameter determines the number of reads required, from 0 to 10 times.

Same Read Timeout

Prevents the same bar code from being read more than once. The value assigned determines after what time period the scanner will timeout, from 0 to 2550 msec.

Diff Read Timeout

Prevents unwanted reading of other bar codes on the same label. The value assigned determines after what time period the scanner will timeout, from 0 to 2550 msec.

5.11.4.3 Code 39

Enabled

Setting this parameter to **ON** enables “Code 39”.

Full ASCII

If this parameter is enabled, the characters +, %, and / are used as escape characters. The combination of an escape character and the next character is converted to an equivalent ASCII character.

Reading Range

Determines the reading distance from which a bar code can be successfully scanned. The default setting **Extended**, allows for increased reading distance.

Start/Stop Transmit

Setting this parameter to **ON** enables the transmission of start and stop characters, which are usually not transmitted. Code 39 can start and end with either a * or a \$ character (see also next parameter *Accepted Start Char*).

Accepted Start Char

This parameter allows the user the option of using one of the two start/stop characters or both (**\$ char**, *** char**, **\$ and * char**).

Check Digit Verification

Uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted. The available options are: **Disabled**, **MOD 43 Check**, **French CIP**, or **Italian CIP**.



Notes: *French CIP (French pharmaceutical) is only used with bar codes containing 7 characters.*

Italian CIP (Italian pharmaceutical) is also known as Code 32. It is transmitted as a standard Code 39 if checksum is not validated.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Minimum Length

Minimum lengths for the bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Field Size/Chars

Refer to page 147 for details.

5.11.4.4 Code 128

Enabled

Setting this parameter to **ON** enables “Code 128”.

EAN 128

To successfully scan this type of bar code, **EAN 128** must be enabled. “EAN” bar codes include group separators and start codes.

EAN 128 Identifier

Setting this parameter to **ON** allows the AIM ID “JC1” for EAN 128 to be transmitted or removed. The default is to transmit if EAN 128 is enabled.

GTIN Compliant

GTIN (global trade item number) processing transmits EAN 128 as the 14-character EAN/UCC GTIN. To use GTIN processing, you must activate the EAN 128 symbology.



Important: *When EAN 128 and GTIN processing are both activated, it is not possible to read normal EAN 128 Codes.*

FNC1 Conversion

This parameter allows the embedded FNC1 character to be converted to another character for applications that cannot use the default <GS> Group Separator or hex (1d).

Enable ISBT 128

To successfully scan this type of bar code (International Society of Blood Transfusion), this option must be set to **ON**. If you enable this type of bar code, Code 128/EAN 128 is deactivated to avoid any confusion.

ISBT Concat Transmit

The codes are not concatenated by default. You need to choose one of the options provided for this parameter to send concatenated code. Choosing **Only Concatenated Codes** transmits only concatenated codes—single codes will not be transmitted. Choosing **Concatenated or Single** transmits single codes or concatenated codes. If only one code of a pair is read, that code will be transmitted as a single code. If both codes in a pair are detected, they will be concatenated provided that **ISBT Concat Any Pair** (see below) is enabled.

ISBT Concat Any Pair

Enabling this parameter causes all code pairs that can be, to be concatenated even if they do not comply with Section 4.1 of the “ISBT 128 Bar Code Symbology and Application Specification for Labeling of Whole Blood and Blood Components” (June 2000, Version 1.2.1).

Reading Range

Determines the reading distance from which a bar code can be successfully scanned. The default setting **Extended**, allows for increased reading distance.

Check Digit Verification

Uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted. The available options are: **Disabled**, or **French CIP**.



Note: *French CIP (French pharmaceutical) is only used with bar codes containing 7 characters.*

Minimum Length

Minimum lengths for the bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Field Size/Chars

Refer to page 147 for details.

5.11.4.5 EAN 13

Enabled

Set this parameter to **ON** to enable “EAN 13”.

ISBN Conversion

When this parameter (International Standard Book Number) is enabled, the first 3 characters (‘978’) are ignored and the checksum (0.9, ‘X’) is calculated on the remaining characters.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Prefix/Suffix

See “Prefix/Suffix” beginning on page 149.

5.11.4.6 EAN 8

Enabled

Set this parameter to **ON** to enable “EAN 8”.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Convert To EAN 13

If this parameter is enabled, an EAN 8 bar code is converted to EAN 13.

Prefix/Suffix

See “Prefix/Suffix” beginning on page 149.

5.11.4.7 UPC A

Enabled

Set this parameter to **ON** to enable “UPC A” bar code scanning recognition.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Transmit Number System

If this parameter is enabled, the number system digit is transmitted with the decoded bar code data.

Convert To EAN 13

If this parameter is enabled, a UPC A bar code is converted to EAN 13.

Prefix/Suffix

Refer to page 149 for details.

5.11.4.8 UPC E

Enabled

Set this parameter to **ON** to enable “UPC E”.

Enable UPC-E1

Set this parameter to **ON** to allow “UPC-E1” (zero suppressed) bar code scans.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Transmit Number System

If this parameter is enabled, the number system digit is transmitted with the decoded bar code data.

Convert To UPC-A

This parameter converts UPC E (zero suppressed) decoded data to UPC A format before transmission. After conversion, data follows UPC A format and is affected by UPC A programming selections (e.g. Check Digit).

Prefix/Suffix

Refer to page 149 for details.

5.11.4.9 UPC/EAN Shared Settings

The setting assigned to the *Addendum* parameter associated with this option is shared across all UPC and EAN bar codes.

Addendum

An addendum is a separate bar code, supplementary to the main bar code.

This parameter provides two options: **Not Required but Transmitted if Read** or **Required and Transmitted**.

- Double-tap on **Addendum** to display a dialog box listing your options.
- Highlight an item, and tap on **OK**.

When *Addendum* is set to **Not Required but Transmitted if Read**, the scanner searches for an addendum and if one exists, appends it to the main bar code. When the parameter is set to **Required and Transmitted**, the scanner does not accept the main bar code without an addendum.

Addendum Add-on 2 And Addendum Add-on 5

Enabling these parameters sets the length of the addendum bar code to either **2** or **5** characters.

Addendum Security

This parameter defines the security level for *Addendum Add-on 2* and *Addendum Add-on 5*. The higher the security level, the lower the decode rate, which can be set from **0** to **100**.

GTIN Compliant

GTIN (global trade item number) processing transmits EAN 128 as the 14-character EAN/UCC GTIN. To use GTIN processing, you must activate the EAN 128 symbology.



Important: *When EAN 128 and GTIN processing are both activated, it is not possible to read normal EAN 128 Codes.*

Reading Range

Determines the reading distance from which a bar code can be successfully scanned. The default setting **Extended**, allows for increased reading distance.

5.11.4.10 Codabar

Enabled

Set this parameter to **ON** to enable “Codabar”.

Start/Stop Transmit

Codabar can use the following sets of characters as start and stop characters:

a, b, c, d

A, B, C, D

a, b, c, d, /, t, n, *, e

DC1, DC2, DC3, DC4

Thus, when a set is chosen, the first and last digits of a Codabar message must be one of those characters and the body of the message should not contain these characters. Setting this parameter to **Not Transmitted** strips the start and stop characters from this bar code.

CLSI Library System

When enabled, spaces are inserted after characters 1, 5, 10 in the 14-character label (used in the USA by libraries using the CLSI system).

Check Digit Verification

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies with a specified algorithm: either USS (Uniform Symbology Specification) or OPCC (Optical Product Code Council).

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Set Length L1, Set Length L2, And Set Length L3

Lengths for “Codabar” can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes where you can define the code length that will be recognized by your scanner.

Length Mode

You can choose to set **L1 as Minimum Length** or **L1,L2,L3 as Fixed Length**.

Field Size/Char

Refer to page 147 for details.

5.11.4.11 Code 93

Enabled

Set this parameter to **ON** to enable “Code 93”.

Minimum Length

Minimum lengths for the bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Field Size/Char

Refer to page 147 for details.

5.11.4.12 Code 11

Enabled

Set this parameter to **ON** to enable “Code 11”.

Check Digit Verification

Uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted. The available options are: **One Check Digit** or **Two Check Digits**.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Minimum Length

Minimum lengths for the bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Field Size/Chars

Refer to page 147 for details.

5.11.4.13 Interleaved 2 of 5

Enabled

Set this parameter to **ON** to enable “Interleaved 2 of 5”.

Reading Range

Determines the reading distance from which a bar code can be successfully scanned. The default setting **Extended**, allows for increased reading distance.

Check Digit Verification

Uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted. The available options are: **Disabled**, **MOD 10 Check**, or **French CIP**.



Note: *French CIP (French pharmaceutical) is only used with bar codes containing 7 characters.*

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Set Length L1, Set Length L2, And Set Length L3

Lengths for “Codabar” can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes where you can define the code length that will be recognized by your scanner.

Length Mode

You can chose to set **L1 as Minimum Length** or **L1,L2,L3 as Fixed Length**.

Field Size/Chars

Refer to page 147 for details.

5.11.4.14 Matrix 2 of 5

Enabled

Set this parameter to **ON** to enable “Interleaved 2 of 5”.

Minimum Length

Minimum lengths for the bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Field Size/Chars

Refer to page 147 for details.

5.11.4.15 MSI Plessey

Enabled

Set this parameter to **ON** to enable “MSI Plessey”.

Enable Plessy

Set this parameter to **ON** to enable the “Plessy” bar code.

Check Digit Verification

Uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted. The available options are: **MOD 10 Check**, or **Double MOD 10 Check**.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Plessy Transmit Check Digit

If the check digit is to be transmitted with the Plessy data, this parameter must be enabled.

Minimum Length

Minimum lengths for the bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Plessy Minimum Length

Minimum lengths for the Plessy bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Field Size/Char

Refer to page 147 for details.

5.11.4.16 Discrete 2 of 5

Enabled

Set this parameter to **ON** to enable "Discrete 2 of 5".

Standard 2 of 5 Format

You can choose as the standard format either **Identicon (6 start/stop bars)** or **Computer Identics (4 start/stop bars)**.

Check Digit Verification

Uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted. The available options are: **Disabled**, or **MOD 10 Check**.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Set Length L1, Set Length L2, And Set Length L3

Lengths for “Codabar” can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes where you can define the code length that will be recognized by your scanner.

Length Mode

You can chose to set **L1 as Minimum Length** or **L1,L2,L3 as Fixed Length**.

Field Size/Chars

Refer to page 147 for details.

5.11.4.17 2D PDF-417

Enabled

Set this parameter to **ON** to enable “2D PDF-417”.

Field Size/Chars

Refer to page 147 for details.

5.11.4.18 2D Micro PDF-417

Enabled

Set this parameter to **ON** to enable “2D Micro PDF-417”.

Code 128 Emulation

When this parameter is enabled, the scanner transmits data from certain Micro PDF-417 symbols as if it was encoded in Code 128 symbols.

2D Codablock

If Code 128 Emulation is enabled, the following Micro PDF-417 symbols are transmitted with one of the following prefixes:

JC1 if the first codeword is 903-907, 912, 914, 915

JC2 if the first codeword is 908 or 909

JC0 if the first codeword is 910 or 911

If Code 128 Emulation is set to **OFF**, the Micro PDF-417 symbols are transmitted with one of the following prefixes:

JL3 if the first codeword is 903-907, 912, 914, 915

JL4 if the first codeword is 908 or 909

JL5 if the first codeword is 910 or 911

Field Size/Chars

Refer to page 147 for details.

5.11.4.19 2D Codablock

Enable Codablock A

Set this parameter to **ON** to enable Codablock type A.

Enable Codablock F

Set this parameter to **ON** to enable Codablock type F.

5.11.4.20 RSS Code (Reduced Space Symbology)

Enable RSS-14

RSS-14 code can be either purely linear or split in half with one half stacked on top of the other half. Stacking the code reduces the bar code length, and providing the nominal height of the code is maintained, it can be omni-directionally scanned.

Enable RSS Limited

‘RSS-Limited’ is restricted, in that it can only encode 14 digit GTINs (global trade item numbers) that begin with either 0 or 1. It is not stackable and is not designed to be read omni-directionally.

Enable RSS Expanded

‘RSS Expanded’ uses the same application identifiers as UCC/EAN-128 codes but they can be split into sections and stacked several rows high, reducing the length of the symbol, while increasing the capacity of data that can be stored. ‘RSS Expanded’ code can be omni-directionally scanned.

Field Size/Chars

Refer to page 147 for details.

5.11.4.21 Telepen

Enabled

Set this parameter to **ON** to enable “Telepen”.

Format

Set the bar code character type to either **ASCII** or **Numeric**.

Minimum Length

Minimum lengths for the bar code can be set from **0** to **255**. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Field Size/Chars

Refer to page 147 for details.

5.11.5 Imager

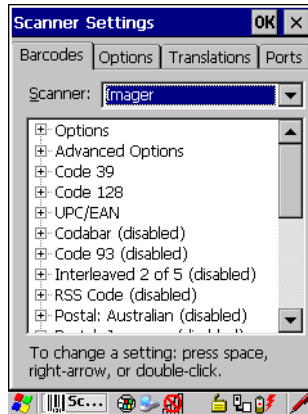


Figure 5.71 Imager

- Tap on the **Scanner** dropdown menu, and choose **Imager**.

5.11.5.1 Options

TekImager Enabled

Setting this option to **ON** enables the imager installed in your hand-held.

Continuous Scan Mode

Setting this parameter to **ON** keeps image capture active and continuously decoding as long as the scanner button is pressed and held down.

Center Barcode Only



Note: This parameter must be disabled when reading Composite bar codes.

When more than one bar code is visible in a single snap shot, this parameter allows you to specify that only the centre image within the imager framing marker be read. When this parameter is set to **ON**, the target dot is pointed at the centre image and only that image is returned.

Max Number Barcodes

Specifies the maximum number of bar codes the imager attempts to decode in an image. A maximum of 6 bar codes can be decoded at one time.

Barcodes Must Decode

Specifies the minimum number of bar codes that the imager must decode in order to report success.



Note: *This number must be less than the number of bar codes assigned to Max Number Barcodes. The driver validates and reassigns the value if necessary.*

Window Width

This parameter determines the width of the captured image in pixels.



Note: *The driver will validate and reassign the value assigned to this parameter, if necessary; the driver will also use the Window Width value to horizontally center the image in the field of view.*

Window Height

This parameter determines the height of the captured image in pixels.



Note: *The driver will validate and reassign the value assigned to this parameter, if necessary; the driver will also use Window Height value to vertically center the image in the field of view.*

Dot Time (msec)

The value selected for *Dot Time (msec)* determines (in milliseconds) how long the targeting dot remains on before the scanner begins capturing images. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value of between 0 and 3000. A value of 0 disables the target dot.

5.11.5.2 Advanced Options



Important: *Do not adjust the advanced options without first consulting Psion Teklogix technical support.*

Default Dev. On Reboot

Specifies if the driver will restore the factory defaults to the imager device on the next reboot—that is, a cold boot or warm boot.



Note: *The driver will default the imager device on a clean-cold-boot, regardless of the value of this parameter.*

Min Scan Duration

This parameter defines the minimum amount of time in seconds that the imager will scan when the trigger is pressed and held down. When the duration expires without a decode, the imager will stop scanning and a bad decode will be signaled.



Note: *The actual scan duration when the trigger is pressed relies on the value assigned to Captures Per HW Trigger, below.*

Captures Per HW Trigger

This parameter determines the number of images captured in each scan attempt. If the *Min Scan Duration* has not yet expired after the configured number of captures, and the scan button is still held down, the same number of images will be captured again. Once the *Min Scan Duration* time expires, and the configured number of images is captured and no bar code is decoded, a bad decode is signaled.



Auto Exposure

Important: *This parameter value should only be changed by qualified Psion Teklogix personnel. It should be left at the default value, ON.*

Setting this parameter to **on** allows the imager to make automatic gain, integration and illumination adjustments based on ambient light before capturing the bar code. If the adjustment is insufficient, further adjustments are made automatically before another image is captured.

Fast Converge



Note: *“Auto Exposure” must be set to ‘on’ in order for this parameter to function.*

Keep in mind that while this parameter can improve imager performance, “Fast Converge” increases battery power consumption.

Setting this parameter to **ON** speeds the “Auto Exposure” process. It allows the imager to rapidly snap a number of bar code capture attempts while finding ideal values for gain, integration and illumination.

Max Gain, Max Integration And Max Illumination



Important: *These parameter values should only be changed by qualified Psion Teklogix personnel.*

These parameters represent internal values used by the 2D imager. The “Auto Exposure” parameter automatically adjusts the “Max Gain”, “Max Integration” and “Max Illumination” parameters to produce the best bar code read. Keep in mind that “Auto Exposure” must be set to **ON** in order for these parameter values to be automatically adjusted.

Double-tapping on any of these parameters displays an associated dialog box in which an allowable range is displayed: Max Gain – 357 to 7920, Max Integration – 0 to 65535, Max Illumination – 0 to 7.

Decoder Timeout

The decoder is a set of algorithms that examine the image and attempt to find the bar codes, and then turn the pixels into data that the computer can use—this process takes time. ‘Decoder Timeout’ limits the amount of time the decoder will spend attempting to decode an image, and forces it to stop and grab a new image, which will probably be easier to decode.



Note: *When decoding multiple bar codes in one image, the value assigned to ‘Decoder Timeout’ should be increased to 200ms/extra bar code after the first.*

Adaptive Windowing

Adaptive Windowing is an advanced technique used to speed up bar code recognition in certain applications. The ‘Adaptive Windowing’ parameter automatically reduces the size of the window to the user-programmed window size when it successfully decodes (which reduces decode time the next time it is used), but increases it to the full size window (1024x1024 for SX5393, 1280x1024 for SX5303) on a failed decode.



Note: *This feature assumes that you have reached an understanding about how the device operates in your application, and that, after a learning period, operators will get used to using the imager in one particular way. It also assumes that a trained operator will usually only have near miss scenarios.*

Constant Illumination

Constant Illumination is used to reduce the intrusiveness of the device's illumination on the observer. Instead of the illumination turning on and off every time the device attempts a decode (2-4 times per second), the illumination stays on from the time the trigger is pulled until a decode is successful. This feature is useful in low light environments, since it will also reduce the distraction that the illumination can have on nearby coworkers.

5.11.5.3 Code 39

Enabled

Set this parameter to **ON** to enable “Code 39”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.4 Code 128

Enabled

Set this parameter to **ON** to enable “Code 128”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.5 UPC/EAN

This parameter allows you to enable the following UPC (Universal Product Code) and EAN (European Article Numbering) bar codes: UPC-A, UPC-E, UPC-E1, UPC-8, EAN-13, Bookland EAN-13 and Bookland EAN.

Enabled

Set this parameter to **ON** to enable “UPC/EAN” bar codes.

Addendum

Refer to “Addendum” on page 149.

Prefix/Suffix

Refer to page 149 for details.

5.11.5.6 Codabar

Enabled

Set this parameter to **ON** to enable “Codabar”.

Field Size/Char

Refer to page 147 for details.

5.11.5.7 Code 93

Enabled

Set this parameter to **ON** to enable “Code 93”.

Field Size/Char

Refer to page 147 for details.

5.11.5.8 Interleaved 2 of 5

Enabled

Set this parameter to **ON** to enable “Interleaved 2 of 5”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.9 RSS Code

Enabled

Set this parameter to **ON** to enable “RSS Code”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.10 Postal: Australian

Enabled

Set this parameter to **ON** to enable “Postal: Australian”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.11 Postal: Japanese

Enabled

Set this parameter to **ON** to enable “Postal: Japanese”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.12 Postal: Korean

Enabled

Set this parameter to **ON** to enable “Postal: Korean”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.13 Postal: PlaNET

Enabled

Set this parameter to **ON** to enable “Postal: PlaNET”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.14 Postal: PostNET

Enabled

Set this parameter to **ON** to enable “Postal: PostNET”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.15 Postal: Royal

Enabled

Set this parameter to **ON** to enable “Postal: Royal”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.16 2D Data Matrix

Enabled

Set this parameter to **ON** to enable “2D Data Matrix”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.17 2D Maxicode

Enabled

Set this parameter to **ON** to enable “2D Maxicode”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.18 2D PDF-417

Enabled

Set this parameter to **ON** to enable “2D PDF-417”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.19 2D Micro PDF-417

Enabled

Set this parameter to **ON** to enable “2D Micro PDF-417”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.20 2D QR Code

Enabled

Set this parameter to **ON** to enable “2D QR Code”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.21 Aztec

Enabled

Set this parameter to **ON** to enable “Aztec”.

Field Size/Chars

Refer to page 147 for details.

5.11.5.22 Composite

A composite symbol includes multi-row 2D components making it compatible with linear and area CCD scanners along with linear and rastering laser scanners.

Enabled

Set this parameter to **ON** to enable “Composite” bar code scanner.



Important: *To successfully read this type of bar code, the two types of symbologies included in the composite must be enabled.
In addition, Center Barcode Only must be disabled (see page 186).*

5.11.6 Options

This tab allows you to tailor the double-click parameters and the display options associated with your scanner.

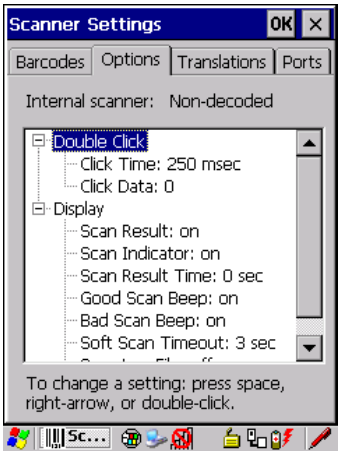


Figure 5.72 Options Tab

5.11.6.1 Double Click

Click Time (msec)

This parameter controls the maximum gap time (in milliseconds) for a double-click. If the time between the first and second clicks of the scanner trigger is within this time, it is considered a double-click. The allowable range is 0 to 1000. A value of zero disables this feature.

A double-click produces different results depending on whether or not a value is assigned in the “Click Data” parameter. When a value is *not* assigned for the “Click Data”, double-clicking the scanner trigger overrides the target dot delay set in the “Dot Time” parameter and initiates a normal scan sweep. If a value *is* assigned for the “Click Data” parameter, double-clicking the scanner trigger inserts the “Click Data” value rather than initiating a scan.

Click Data

For both integrated and external scanners, this parameter determines which character is sent to the application installed in your 7535 G2 following a double-click. A dialog box appears, asking that you press the key you want to insert. The ASCII/Unicode key value of the keypress is displayed.

Pressing the [ESC] key in this dialog box resets the data to zero.

5.11.6.2 Display

Scan Result

When this parameter is enabled, the type of bar code and the result of the scan appear on the screen. Note that this information is only displayed after a successful decode and is visible only while the scanner trigger is pressed. When the trigger is released, this information is cleared from the screen.

Scan Indicator

When this parameter is enabled, the laser warning logo appears on the display whenever the scanner is activated.

Scan Result Time (sec)

The value assigned to the *Scan Result Time* parameter determines how long the scan results of a successful scan are displayed on the screen. Time is measured in seconds, and a value of **0** (zero) disables the parameter. When you choose this option, a dialog box appears where you can enter a value.



Note: *To remove the scan result from the screen before the “Result Time” has expired, point the scanner away from the bar code and press the trigger.*

Options

Good Scan Beep And Bad Scan Beep

These parameters determine whether or not the 7535 G2 emits an audible scanner ‘beep’ when a good (successful) scan or a bad (unsuccessful) scan is performed. Set these parameters to either **ON** to enable the beeper or **OFF** to disable it.

Soft Scan Timeout

This parameter is used by the SDK “Scan” function (soft-scan: starting a scan session via the SDK function, instead of a physical user trigger press). The value assigned to this parameter determines the soft-scan timeout from 1 to 10 sec. (default is 3 sec.).

Scan Log File

If this parameter is enabled, the input bar code and the modified/translated output bar code are logged in the file \Flash Disk\ScanLog.txt. Keep in mind that if *Scan Log File* is enabled, there is a slight performance reduction when performing multiple scans since the log file is written to persistent storage.

5.11.7 Translations

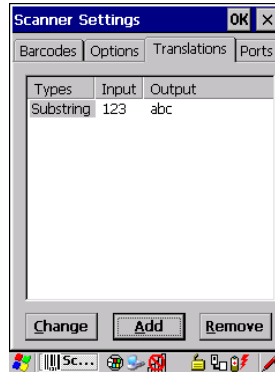


Figure 5.73 Translation Tab

- In the *Translation* tab, choose the **Add** button.

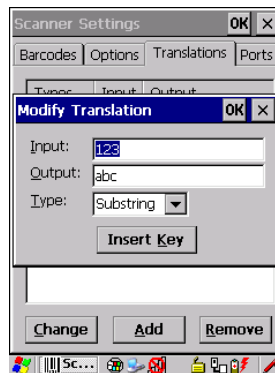


Figure 5.74 Translation Dialog Box

Input

This value is compared with the decoded bar code reading. If there is a match, the *Output* string replaces the data read from the bar code.

Output

If there is a match between the decoded bar code and the corresponding “Input” string, the decoded bar code will be translated into the “Output” string. This string entry parameter can be null, or it may contain any combination of standard and special characters (e.g., function keys, [ENTER], etc.).

Type

The value chosen from this dropdown menu determines what is compared with the decoded bar code reading: the beginning of decoded bar code, the end of decoded bar code, the entire decoded bar code or anywhere within the decoded bar code (default).

5.11.8 Ports

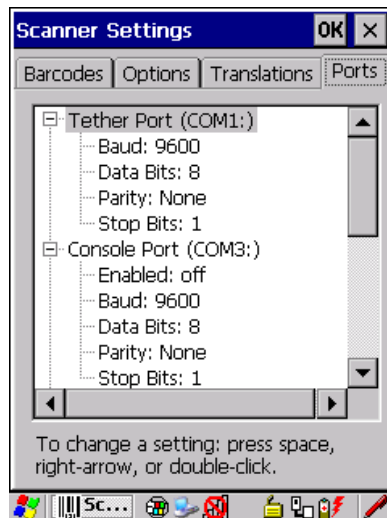


Figure 5.75 Tether, Console, and Port Replicator Port Settings

While you cannot configure the scanner, you can configure *communications* with a serial decoded scanner using the options in this tab.

Use these settings to ensure that the communication ports on the 7535 G2 match the settings of the serial devices to which they are connected. If the settings do not match exactly, the devices may not function. Note that some devices can auto-detect serial port settings (such as baud rate), and in this case the 7535 G2 will dictate the settings. Baud rates often have a direct impact on performance—they should be set as high as possible while still ensuring reliable communication.

5.11.8.1 Tether Port (COM1)



Notes: RS-232 serial communication is one of the modes available on the tether port, located on the side of the 7535 G2.

These parameters refer only to external decoded scanner communications. They have no effect if the generic serial device tether cable is plugged in.

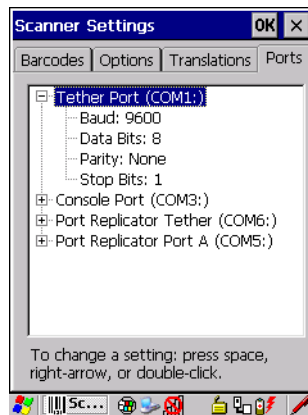


Figure 5.76 Tether Port Settings

Baud

Double-tapping on this parameter displays a pop-up window in which you can choose an appropriate rate of data transfer.

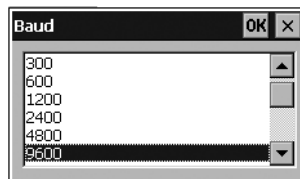


Figure 5.77 Tether Port Baud Rates

Data Bits

This parameter determines the number of data bits included in each asynchronous data byte. Most devices use 8-bit data bytes. Double-tapping on this option displays a pop-up window in which you can choose either 7 or 8 data bits.

Parity

This parameter determines the type of parity checking used on the data going through the tether port. Double-tapping on this option displays a pop-up window in which you can choose the appropriate Parity.



Figure 5.78 Parity Settings

Stop Bits

This parameter specifies the number of stop bits—1, 1.5 or 2—used for asynchronous communication.

5.11.8.2 Console Port (COM3)

The console port is accessed via the docking connector on the bottom of the 7535 G2. Only the Portable Docking Module (PDM) provides access to the console port through a DE-9 interface.

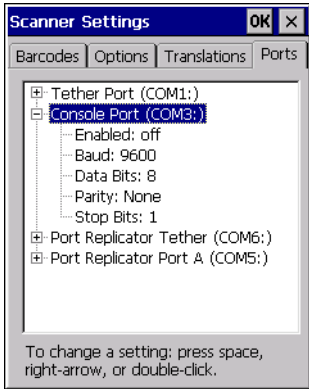


Figure 5.79 Console Port Settings

Enabled

This parameter must be set to **ON** in order for the 7535 G2 to recognize the attached device as a decoded bar code scanner.

Baud

Refer to page 199 for details.

Data Bits

Refer to page 200 for details about this parameter.

Parity

For details, refer to page 200.

Stop Bits

Refer to page 200 for details about “Stop Bits”.

5.11.8.3 Port Replicator Tether (COM6)

The port replicator tether is a duplicate tether port located on the port replicator module of the 7535 G2 cradles.

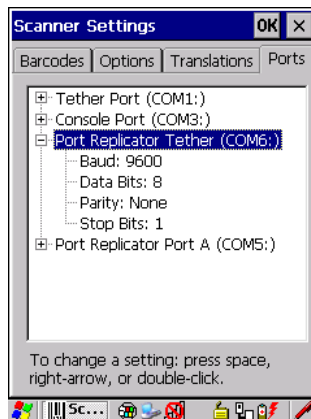


Figure 5.80 Port Replicator Tether Settings

Baud

Refer to page 199 for details.

Data Bits

Refer to page 200 for details about this parameter.

Parity

For details, refer to page 200.

Stop Bits

Refer to page 200 for details about “Stop Bits”.

5.11.8.4 Port Replicator 9-pin (COM5)

Port Replicator 9-pin (COM5) is the standard RS-232 DE-9 DTE port on the 7535 G2 port replicator module, available on certain cradle types.

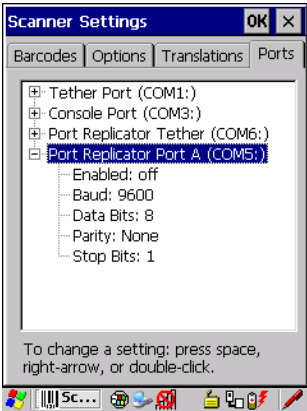


Figure 5.81 Port Replicator 9-Pin Settings

Enabled

This parameter must be set to **ON** in order for the 7535 G2 to recognize the device connected to the Port Replicator 9-pin (COM5).

Baud

Refer to page 199 for details.

Data Bits

Refer to page 200 for details about this parameter.

Parity

For details, refer to page 200.

Stop Bits

Refer to page 200 for details about “Stop Bits”.

5.12 SNMP (Simple Network Management Protocol) Setup

Simple Network Management Protocol (SNMP) is the protocol used to monitor and manage devices attached to a TCP/IP network (providing they support SNMP).

SNMP uses Management Information Bases (MIBs) that define the variables an SNMP Network Management Station can access. Each product has a defined set of MIBs that determine how SNMP operates, the type of access allowed and so on.

All Psion Teklogix products support the TEKLOGIX-GENERIC-MIB—a MIB that defines some common features across Psion Teklogix products.

All devices also support MIB-II, a management information base that defines the common features of TCP/IP networks. The SNMP Agent software embedded in the 7535 G2 product supports SNMPv1 (RFC 1157).

- In the *Control Panel*, choose the **SNMP** icon.

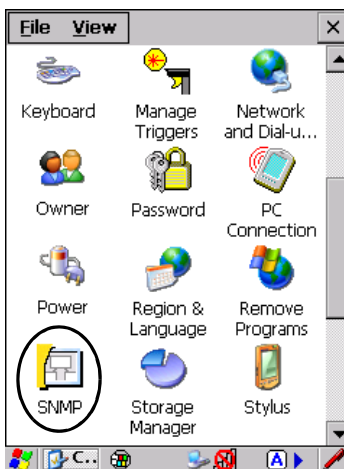


Figure 5.82 SNMP Icon

5.12.1 Contact Tab

The *SNMP* dialog box is displayed.

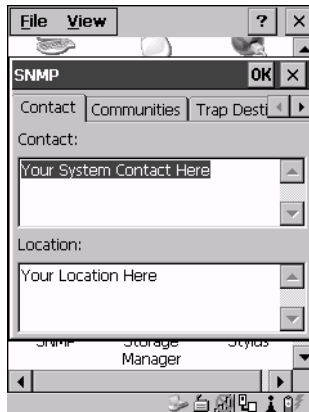


Figure 5.83 Contact Tab

Contact

This field identifies the contact person for this managed node along with information about how to get in touch with this person. The content of this parameter is accessible through MIB-II's sysContact object.

Location

This parameter is used to identify the physical location of this node (e.g., Warehouse A: Pillar 32B). The content of this parameter is accessible through MIB-II's sysLocation object.

5.12.2 Communities Tab

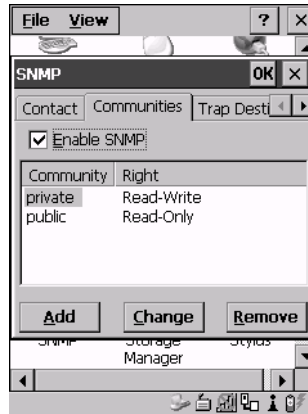


Figure 5.84 Community Settings

The *Communities* tab allows you to limit access to SNMP-managed devices to those SNMP Managers with matching “community names”, as specified by RFC 1157.

Enable SNMP

Enabling **Enable SNMP** allows the device to respond to SNMP queries and to send Traps. After enabling this option and rebooting the device, the SNMP Agent will automatically start up. To disable this feature, remove the check mark from the check box.

5.12.2.1 Adding A Community

- Choose the **Add** button to add a new ‘community’.

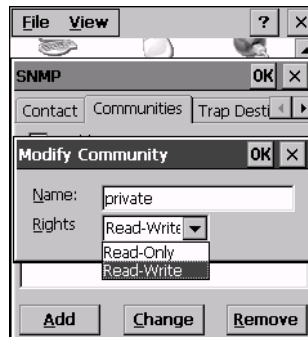


Figure 5.85 Adding A Community

Name

The value assigned here is the name assigned by the network administrator to the set of devices to which this managed node belongs.

Rights

This menu allows you to specify access, that is, ‘Read-Only’ or Read-Write’

5.12.2.2 Modifying A Community Setting

To modify an existing community:

- Highlight the community you want to alter.
- Choose the **Change** button.



Figure 5.86 Changing Or Removing A Community

A *Modify Community* dialog box is displayed, listing the community you highlighted.

- Edit the **Name** and/or **Rights**, and press [ENTER] to save your changes.

5.12.2.3 Removing An Existing Community

To remove an item:

- Highlight the community you want to remove in the *Communities* tab and then choose the **Remove** button.

A *Delete Confirmation* screen is displayed.

- To remove a community, choose the **Yes** button, *or*
If you decide not to remove the community, choose the **No** button.

5.12.3 Trap Destination Tab

A trap is an unsolicited report sent to SNMP Managers by the SNMP Agent running on the managed node. This option allows you to define where the report will be sent.



Figure 5.87 Trap Destination Tab

5.12.3.1 Enabling Authentication TRAPS

Enabling **Enable Authentication TRAPS** allows authorization traps to be sent when a failure is detected (e.g., an SNMP message received with a bad community name).

5.12.3.2 Adding A Destination

To add a new destination:

- Choose the **Add** button.



Figure 5.88 Adding A Trap Destination

- Type a destination in the text box provided, and press [ENTER].

5.12.3.3 Changing A Destination

To change an existing trap destination:

- Highlight the destination you want to alter in the *Trap Destination* tab, and then choose the **Change** button.

A dialog box like the one displayed when you *add* a destination is displayed.



Figure 5.89 Changing A Destination

- Make the changes to the destination, and press [ENTER] to save the changes.

5.12.3.4 Removing A Trap Destination

To remove a trap destination:

- In the *Trap Destination* tab, highlight the destination you want to delete.
- Choose the **Remove** button.

A *Delete Confirmation* screen is displayed.

- To remove a destination, choose the **Yes** button, *or*
If you decide not to remove the destination, choose the **No** button.

5.12.4 Permitted Hosts Tab

For security reasons, the Network Administrator may want to restrict SNMP-node access to a known sub-set of SNMP Managers. This tab lists the IP addresses of all the SNMP Managers which are allowed to monitor and manage this device. If no entries are listed, the device will accept SNMP queries from any host.

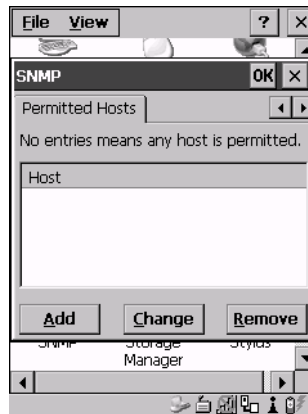


Figure 5.90 Permitted Hosts Tab

5.12.4.1 Adding A Host

To add a new host:

- Highlight the **Add** button, and press [ENTER].

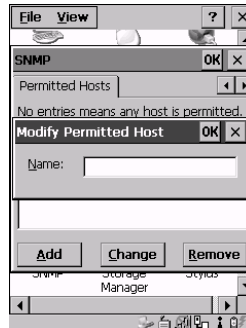


Figure 5.91 Adding A Host

- Type a new host IP address in the text box provided, and press [ENTER].

5.12.4.2 Changing A Host

To change an existing host IP address:

- Highlight the IP address you want to alter in the *Permitted Hosts* tab, and then choose the **Change** button.

A dialog box like the one displayed when you *add* a host is displayed.

- Make the necessary changes, and press [ENTER].

PERIPHERAL DEVICES & ACCESSORIES

6

6.1	External Bar Code Readers	213
6.1.1	PowerScan® Standard, LR and XLR Bar Code Scanners	213
6.1.2	Entering Data With The Bar Code Reader	213
6.2	RD7950 Integrated UHF RFID Reader	213
6.3	Batteries	214
6.4	Battery Charging	214
6.4.1	Battery Gas Gauge Calibration	214
6.5	Gang Charger	215
6.5.1	Installation	215
6.5.2	Operator Controls.	216
6.5.3	Charge Indicators	216
6.5.4	Charging Batteries	217
6.5.5	Troubleshooting.	217
6.5.5.1	Excessive Charge Duration	217
6.5.5.2	Improper Battery Storage	217
6.5.5.3	Indicator Flashing Red.	218
6.5.5.4	Power LED Does Not Light Up	218
6.5.5.5	Indicator Does Not Light When Battery Installed.	218
6.6	Combo Charger	218
6.6.1	Installation	219
6.6.2	Operator Controls.	219
6.6.3	Using the Combo Charger With The 7535 G2	219
6.6.4	Charging The Spare Battery	219
6.6.5	Charge Indicators	220
6.6.6	Troubleshooting.	220
6.7	Combo Dock	221
6.7.1	Installation	221
6.7.2	Using The Combo Dock	221
6.7.3	Network Access.	221
6.7.4	Troubleshooting.	222
6.8	Quad Dock	222
6.8.1	Installation	222

6.8.2	Indicators And Controls	223
6.8.3	Using The Quad Dock	223
6.8.4	Network Access	223
6.8.4.1	Network Addressing	223
6.8.5	Battery Charging	223
6.8.6	Troubleshooting	224
6.8.6.1	Network Link Unsuccessful	224
6.8.6.2	7535 G2 LED Does Not Light When Docked	224
6.9	Portable Docking Module (PDM)	224
6.10	Bluetooth Peripherals	227
6.11	The 7535 G2 Picker Cradle	227
6.11.1	Picker Cradle Mounting Recommendations	228
6.11.1.1	Mounting Template	228
6.11.2	Wiring Guidelines	229
6.11.3	Using The Picker Cradle	229
6.11.4	Maintaining The Picker Cradle	229
6.11.5	Powered Cradle Installation In High Voltage Vehicles	230
6.11.5.1	Extreme Wet Environments	230
6.11.6	Powered Cradle Installation	231
6.11.6.1	Wiring Vehicle Power To The Cradle	232
6.11.7	The Port Replicator	232
6.12	Tether Adaptor Cables	233

6.1 External Bar Code Readers

6.1.1 PowerScan® Standard, LR and XLR Bar Code Scanners



Note: Refer to “PowerScan® Standard Range Scanner Specs” on page 254 and “PowerScan® LR and XLR Industrial Scanner Specs” on page 252 for detailed specifications.

The 7535 G2 supports Psion Teklogix’ PowerScan® industrial bar code scanner with standard, long range and extra long range options.

To connect this scanner to the 7535 G2, attach the device to the tether port at the upper-right side of the 7535 G2. Before using the bar code reader, you may need to change some parameters (see “Non-Decoded Scanners” on page 144). Review your “Power Scan Programing Guide (PSC)” for details.

6.1.2 Entering Data With The Bar Code Reader



Note: For helpful scanning tips, refer to “Scanning Techniques” on page 51.

For external non-decoding scanners, when a label is scanned successfully, the 7535 G2 will beep if configured appropriately and the scan LED will flash. (Most external decoding scanners have their own indicators—some communicate with the unit.) Occasionally, the bar code labels are poorly printed or damaged and cannot be read properly. In this case, use the keyboard to enter data from the label.

6.2 RD7950 Integrated UHF RFID Reader



Note: Refer to Appendix B: RD7950 Integrated UHF RFID Reader for detailed information and specifications.

The RD7950 UHF RFID Reader is an EPC-compliant RFID reader available for Psion Teklogix rugged hand-held computing devices. The RD7950 can be retrofitted to deployed Psion Teklogix products. Multimedia data capture capabilities are delivered by combining RFID with existing technologies such as laser bar code scanning or imaging.

6.3 Batteries



Note: *Battery specifications are detailed beginning on page 256.*

7535 G2s operate with Lithium-Ion batteries—a high capacity 1900 mAh battery pack. For detailed safety instructions, please see “Lithium-Ion Battery Safety Precautions” on page xxiv. For details on battery charging and installation, please see “Powering Up The 7535 G2” on page 13. For battery calibration and power settings, see “Power Management Properties” on page 104.

6.4 Battery Charging



Note: *Initially, new batteries that have been fully charged may indicate slightly less than 100% charge. No special conditioning is required. The full capacity of the battery will reach 100% after 5 charge cycles through the charger.*

It can take from 1.5 to 4 hours to charge a battery. The 7535 G2’s intelligent charging system protects the battery from over-charging by terminating the charge process when the battery is at maximum capacity. See “Approvals And Safety Summary” on page xix, for important safety and operating instructions for battery chargers and AC/DC adaptors.



Important: *To preserve battery integrity, the charger will proceed with a charge only when the battery temperature falls between 5° C and 39° C (41° F to 102° F). If the battery is too hot or cold, the battery status LED flashes yellow and the charge is suspended.*

6.4.1 Battery Gas Gauge Calibration

The gas gauge indicator on the hand-held system tray and in the Power Properties dialog has a typical accuracy of +/- 5% of nominal capacity. In order to keep this accuracy the gas gauge (which is stored in the battery pack) needs to be calibrated occasionally. Whenever the battery is fully discharged and then fully charged, the gas gauge becomes recalibrated. For most users the issue of gas gauge recalibration should be invisible.

If the battery is only partially discharged or partially charged, at least 40 times, the gas gauge will start to drift out of calibration. When this happens the gas gauge accuracy could decline to +/- 15% of nominal. A calibration cycle (full discharge / full charge) is needed to fully recalibrate the gas gauge. Even if the battery is never recalibrated, the gas gauge accuracy will not drop below +/- 20% of nominal.

A feature is built into the HU3006 gang charger and the HU3002/HU4002 Combo Charger/Dock which detects a battery that requires calibration and will fully discharge it and charge it—but only if the remaining capacity is less than 30% of a full charge. On the HU3006, only one of the six slots can perform a calibration cycle at any one time. This calibration cycle extends the overall charge time by up to 4 hours. A charger that is performing the initial discharge portion of a calibration cycle will flash its LED yellow at fast rate (a slow flashing yellow LED indicates the battery is outside of the charge temperature). The HU3002/HU4002 can also perform a calibration cycle on a battery installed on the hand-held, but this function can be disabled in the *Power Properties* dialog (see “Calibrate” on page 107).

It is not necessary to perform an initial calibration cycle on a brand new battery, although the gas gauge may have slightly less than +/- 5% accuracy.

It should be noted that as a battery ages its capacity declines, and this is shown on the gas gauge as an inability to charge the battery to 100%. The 100% setting corresponds to the nominal capacity of a new battery (as stated on the battery cover). A battery that cannot be charged beyond 70% of its nominal capacity is considered to be at its end of life.

6.5 Gang Charger

The HU3006 is designed to charge up to six 7535 G2 Lithium-Ion batteries at one time. Your charger is shipped with the appropriate IEC mains power cord. If the supplied power cord is incorrect for your country, contact Psion Teklogix for assistance (see Appendix A: Support Services And Worldwide Offices).



Important: *The gang charger is shipped with a user manual. It is critical that this manual be reviewed for additional information and updates.*

6.5.1 Installation

The gang charger can be wall mounted using the wall mount kit (HU3106) or it can be operated on a flat surface. Install the charger in an area that is free from excessive dirt, dust and contaminants. The ambient temperature must be in the range 5° C to 39° C (41° F to 102° F). The charger will not charge batteries outside of this temperature range. For maximum performance, it is recommended that the charger be operated at room temperature—a temperature range between 18° C to 25° C (64° F to 77° F).

The charger can consume up to 2A @ 120VAC or 1A @ 240VAC. Check to ensure the mains circuit supplying the charger is adequate for this loading (especially if several chargers are being powered from the same circuit). After unpacking the unit:

- Visually check the charger for damage.
- Install the IEC power cord and apply power.

A green indicator in the lower-right indicates power is present. All charge indicators flash momentarily at powerup to indicate that the charger is ready for operation.

If you choose to wall mount the charger, follow the instructions packaged with the mounting bracket kit. Be sure to locate the charger in an area where there is no risk of injury to persons walking in the vicinity.

6.5.2 Operator Controls

The gang charger does not have operator controls or a power switch.

6.5.3 Charge Indicators

Each battery charge slot is equipped with a tri-coloured LED to indicate the charge status of the battery. When 7535 G2 batteries are inserted in the charger, the colour and behaviour of the LEDs associated with the charge wells in use indicate the status of the charge.







LED Behaviour	Icon	Charge Status
Off		No battery detected in the slot.
Solid green		Battery is fully charged.
Flashing green		Battery is charged to 75% capacity.
Solid yellow		Charge in progress.
Flashing yellow		Battery temperature out of charge range between 5° C to 39° C (41° F to 102° F). This icon indicates that the charger is waiting to charge. Charging is attempted every five minutes until the battery is within the appropriate temperature range.
Solid red		Battery rejected (at insertion) or unable to complete charge on battery
Flashing red		Charging circuit problem. Refer to “Troubleshooting” on page 217.

Table 6.1 Gang Charger Indicators

6.5.4 Charging Batteries

- Install the battery with the battery contacts facing the charger. Slide the battery between the guide rails until it lightly latches in place.

The LED directly below the slot in which a battery is inserted lights up immediately. A solid yellow LED indicates that the battery is being charged. If the battery temperature is outside 5° C to 39° C (41° F to 102° F), the LED flashes yellow until the temperature is acceptable. A fully discharged battery will normally take between 1.5 and 4 hours to charge. When the battery charge reaches 75%, the indicator flashes green. At full capacity, it turns solid green.

When the battery is fully charged, the charger stops applying power; the battery cannot be overcharged if left in the charger slot. The 75% charge indicator is handy if you need a quick recharge—it often occurs after less than an hour.

Storing batteries in the gang charger for extended periods (more than a week or two) is not recommended. Lithium-Ion batteries lose capacity if they are maintained at full charge for long periods of time. See the battery storage recommendations in “Storing Batteries” on page 57.

6.5.5 Troubleshooting

6.5.5.1 Excessive Charge Duration

The charger is equipped with a recalibration function—a function that fully discharges and then fully recharges the battery. This process is necessary to recalibrate the battery capacity gauge internal to the battery. The charger attempts recalibration when:

- the battery capacity is at less than 30%, and
- the battery has undergone more than 40 partial charge cycles since the last full discharge.

A complete battery discharge takes between 1.5 and 4 hours to complete. When in discharge mode, the LED indicator flashes yellow. The recalibration function extends the charge time by up to 2 hours.

6.5.5.2 Improper Battery Storage

Storing batteries in the gang charger for extended periods (more than a week or two) is not recommended. Lithium-Ion batteries lose capacity if they are maintained at full charge for long periods of time. See the battery storage recommendations in “Storing Batteries” on page 57.

Indicator Flashing Red

6.5.5.3 Indicator Flashing Red

If the indicator flashes red:

- Remove all batteries and disconnect the mains power cable.
- Wait at least 20 seconds, and then plug the cable in again.

If any of the charge slot LEDs continue to flash red, the charger is defective and requires service. If all indicators are flashing red, there is a power supply problem and the charger requires service.

6.5.5.4 Power LED Does Not Light Up

- Remove all batteries, and unplug the charger.
- Connect another device to the mains outlet to ensure there is power.
- Remove the IEC mains power cable from the charger, and check it for damage.
- Reconnect the mains cable in the charger and mains outlet.

6.5.5.5 Indicator Does Not Light When Battery Installed

- Remove the battery, and clean the contacts on the battery and the charge slot.
- Reinstall the battery, and check that it is fully seated in the slot.
- Inspect the charge slot contacts for damage (are they bent, flattened, twisted or broken).
- Try inserting a battery that you know to be working in the charger slot.
- Reconnect the mains power cable, and check that the slot indicator flashes at powerup.

6.6 Combo Charger

The 7535 G2 combo charger is a desktop charger designed to charge the 7535 G2 internal battery along with a spare battery pack. The combo charger provides sufficient power to operate and fast charge the 7535 G2 internal battery, while recharging the spare battery pack.



Note: *The combo charger is shipped with a user manual. It is critical that this manual be reviewed for additional information and updates.*

6.6.1 Installation

Keep the combo charger away from excessive dirt, dust and contaminants. The combo charger will not charge batteries outside an ambient temperature range of 5° C to 39° C (41° F to 102° F). It is recommended that this charger be operated at room temperature between 18° C and 25° C (64° F to 77° F) for maximum performance.

After unpacking the unit:


- Visually inspect the charger for possible damage.
- Install the IEC power cord and apply power.

A green LED in the lower-right corner of the front panel lights to indicate that power is present. The charge LED flashes momentarily at powerup. The charger is now ready for operation.

6.6.2 Operator Controls

The combo charger has no operator controls or power switch.

6.6.3 Using the Combo Charger With The 7535 G2

- Gently slide the 7535 G2 into the cradle portion of the combo charger until lightly latched. An icon is displayed indicating that the 7535 G2 is properly installed in the combo charger .

The battery charge LED on the 7535 G2 lights up indicating that the unit has external power and battery charging may begin. It is safe to leave the 7535 G2 in the combo charger cradle while it is not in use—the battery will not be overcharged.

6.6.4 Charging The Spare Battery

- Install the battery with the latch facing towards the rear of the charger—slide it between the guide rails until it lightly latches in place.

The LED for the slot lights up immediately. A solid yellow LED indicates the battery is being charged. A flashing yellow LED indicates that the battery temperature is outside the acceptable charge range between 5° C and 39° C (41° F to 102° F).

A fully discharged battery normally takes between 1.5 and 4 hours to charge. When the battery capacity reaches 75%, the LED flashes green. When the battery is at full capacity, the indicator turns solid green.

Charge Indicators

The combo charger stops applying power to the battery when it is fully charged—there is no risk of overcharge if the battery remains in the charge slot (however, see **Important** note, below). The 75% charge indicator is handy if you need a quick recharge—a quick charge often takes less than one hour.



Important: *The spare battery slot is not intended as a battery storage pocket. Storing batteries in the combo charger for extended periods (more than a week or two) is not recommended. Lithium-Ion batteries permanently lose capacity if they are maintained at full charge for long periods of time. See the battery storage recommendations in “Storing Batteries” on page 57.*

6.6.5 Charge Indicators

The spare battery charge slot has an associated tri-colour LED indicator on the lower-right area of the front panel. The charge indicators are the same as those for the Gang Charger. For a description of the charger indicators, please refer to Table 6.1 on page 216.

The combo charger supplies DC power to enable the 7535 G2 internal fast charger. Charge status is displayed on the 7535 G2 charge LED (the lower-right LED). Refer to “Charge LED” on page 45 for details. All Charge LEDs (whether on the HU3006, HU3002, HU4002, or on the hand-held) function in exactly the same way.

Normally, it takes from 1.5 to 4.0 hours to fully charge the 7535 G2 internal battery.



Note: *Battery charging continues whether the 7535 G2 is switched on or off.*

6.6.6 Troubleshooting

The gang charger troubleshooting section also applies to the combo charger. Refer to “Troubleshooting” on page 217, for helpful tips.

6.7 Combo Dock

The combo dock is identical to the combo charger with one exception: the combo dock is equipped with a 10/100 BaseT Ethernet interface. The charging information in “Combo Charger” beginning on page 1-218 also applies to the combo dock.

6.7.1 Installation


Refer to the “Installation” guidelines for the combo charger beginning on page 1-219.

- Attach a CAT5 RJ45 network patch cable (shipped with the combo dock) between your network and the RJ45 jack on the rear of the dock.

A green LED is illuminated next to the RJ45 connector when a valid network link is established.

A user application needs to be loaded onto each 7535 G2 that utilizes the combo dock for communication. With the network connected and this application loaded, the combo dock is ready for use.

6.7.2 Using The Combo Dock

- Gently slide the 7535 G2 into the cradle portion of the combo dock until lightly latched. The 7535 G2 detects combo dock and displays the appropriate icon .

The battery charge LED (lower-right LED) on the 7535 G2 lights up to show it has external power and may start charging the battery.

Interaction with the 7535 G2 while in the combo dock is a function of the user application software used to communicate with the host network.

6.7.3 Network Access

The combo dock includes a dedicated USB to Ethernet converter. This USB converter appears as a USB slave to the 7535 G2 USB host controller. The 7535 G2 automatically detects insertion into a combo dock and loads the appropriate drivers to communicate with the USB/Ethernet converter.

See “Network Addressing” on page 223 for details about network addressing issues with the combo dock.

6.7.4 Troubleshooting

Troubleshooting issues for the combo dock are identical to those of the quad dock. Refer to “Troubleshooting” on page 224 for helpful tips.

6.8 Quad Dock



Note: *The quad dock is shipped with a user manual. It is critical that this manual be reviewed for additional information and updates.*

The Quad Dock permits each of four docked 7535 G2 hand-helds to communicate with a 10/100 BaseT Ethernet network at greater than 2Mbps. It also provides sufficient power to operate and fast charge the batteries in the 7535 G2s.

6.8.1 Installation

The quad dock should be located away from excessive dirt, dust and contaminants. The ambient temperature must fall between 5° C to 39 °C (41° F to 102° F). The 7535 G2 internal charger will not charge batteries outside of this temperature range. For maximum performance, it is recommended that the quad dock be operated at room temperature from 18° C to 25° C (64° F to 77° F).

The quad dock can consume up to 3A @ 120VAC or 1.5A @ 240VAC. Ensure that the mains circuit supplying the unit is adequate, especially if several docks are being powered from the same circuit.

After unpacking the unit:

- Visually inspect the unit for any damage.
- Install the IEC power cord and apply power.

A green indicator in the lower-right corner of the front panel lights up to indicate that power is present.

- Attach a CAT5 RJ45 network patch cable (supplied) between your network and the RJ45 jack on the rear of the dock.

A green LED is illuminated next to the RJ45 connector when a valid network link is established.


A user application must be loaded onto each 7535 G2 that utilizes the quad dock for communication. When the network is connected and this application is loaded, the quad dock is ready for use.

6.8.2 Indicators And Controls

The quad dock has no user controls. It is equipped with a power indicator LED and RJ45 link and traffic indicator LEDs. When a valid network link is established, a green LED is illuminated next to the RJ45 connector.

6.8.3 Using The Quad Dock

- Gently slide the 7535 G2 into the cradle portion of the quad dock until lightly latched.

The 7535 G2 detects that it is in a quad dock and displays the appropriate icon in the taskbar . The battery charge LED on the 7535 G2 lights up to show it has external power and may start charging the battery.

Interaction with the 7535 G2 while in the quad dock is a function of the user application software used to communicate with the host network.

6.8.4 Network Access

The quad dock includes a four port 10/100 Ethernet hub. Each of the four downstream ports are connected to dedicated USB-to-Ethernet converters. These USB converters appear as USB slaves to the 7535 G2 USB host controller. The 7535 G2 automatically detects insertion into a quad dock and loads the appropriate drivers to communicate with the USB/Ethernet converters.

6.8.4.1 Network Addressing

Although the USB converters have fixed Ethernet MAC addresses, there is generally no correlation between these addresses and a specific 7535 G2 hand-held. The host application uses standard TCP/IP protocol to name, locate and communicate with a specific 7535 G2 on the network.

If a link is established between a hand-held and a host, the application on the host and on the 7535 G2 must have a recovery mechanism in the event that the hand-held is removed from the dock and the link is interrupted.

6.8.5 Battery Charging

The quad dock supplies DC power to enable the 7535 G2 internal fast charger. Charge status is displayed on the hand-held charge LED (see “Charge LED” on page 45). Battery charging continues whether the unit is switched on or off.

Normally, it takes between 1.5 and 4 hours to fully charge the 7535 G2 internal battery.

6.8.6 Troubleshooting

The indicators, applications and drivers required to use and monitor the docking station are installed on the 7535 G2—no indicators or applications are present on the docking station itself.

6.8.6.1 Network Link Unsuccessful

If a network link fails, the 7535 G2 application alerts the operator that the link was unsuccessful.

6.8.6.2 7535 G2 LED Does Not Light When Docked

- Check that the quad dock has power—is the Power LED on the quad dock illuminated?
- Try inserting the 7535 G2 in another slot in the quad dock.
- Check for dirt or contamination on the docking contacts at the bottom of the 7535 G2. Wipe the contacts with a damp cloth if necessary.
- Check the pogo pins inside the dock cradle for dirt. Gently wipe with a damp cloth if they appear to be dirty or discoloured.
- Check that the pogo pins are not bent or damaged.
- Remove and reinsert the 7535 G2 in the cradle—check that the latch is holding the unit in place (the pogo pins must be compressed for proper contact).
- Make certain that the battery installed in the 7535 G2 is not defective.

6.9 Portable Docking Module (PDM)



Warning: *The mains power cord for the AC/DC adaptor shall comply with national safety regulations of the country where the equipment is to be sold.*

The Portable Docking Module (PDM) clips onto the base of the 7535 G2 and is most often used to charge the 7535 G2 battery when a desktop charger is not convenient. The PDM also offers additional communication ports, making it useful for upgrading software in the 7535 G2 from a USB-equipped laptop computer.

Figure 6.2 on page 226 illustrates the connectors on the PDM.

- Align the pins on the PDM with the connectors on the base of the 7535 G2.
- Gently snap the PDM into place on the base of the unit. Figure 6.1 on page 225 provides a visual representation of how to secure the PDM.



Note: *The latching mechanism on the PDM is designed for quick installation and release. It is not meant for heavy duty use. Psion Teklogix recommends using a powered cradle or combo charger in harsh environments.*

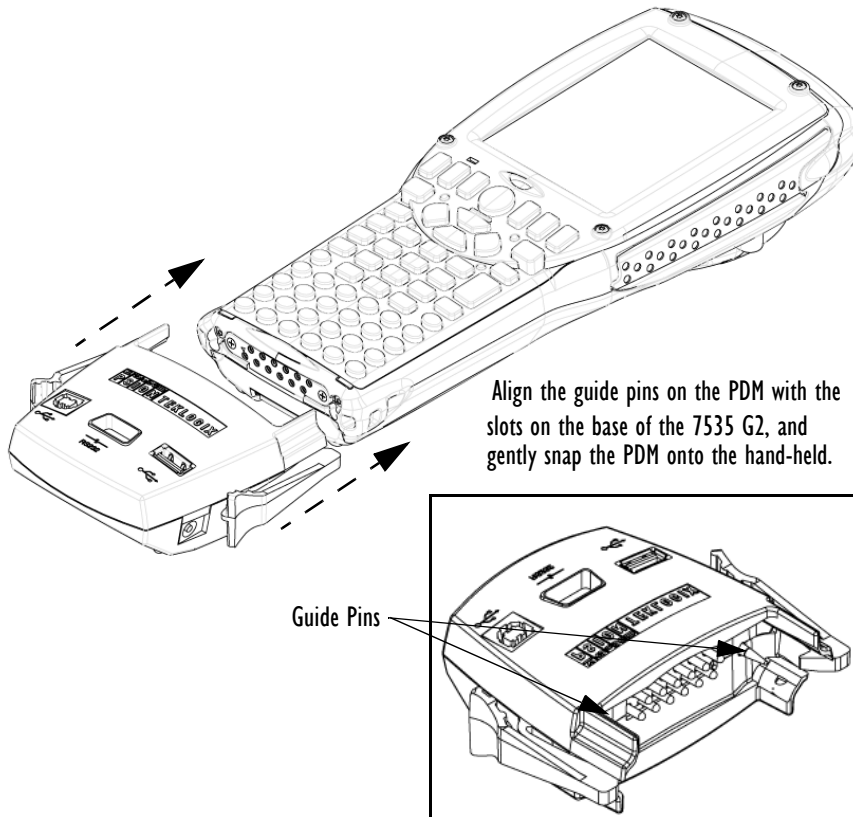


Figure 6.1 Attaching The PDM To The Base Of The 7535 G2

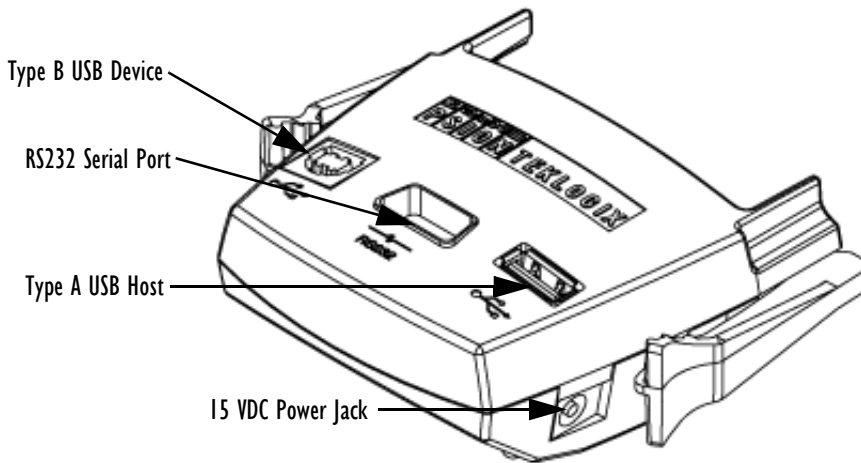


Figure 6.2 PDM Ports And Connectors

The interfaces available on the PDM are as follows:

- AC/DC adaptor jack (15VDC @ 2.5A)
- Type A USB host port (for connection to USB devices such as a mouse, keyboard, printer, etc.)
- Type B USB device port (for connection to a USB host such as a PC)
- RS232D DE9 serial port (for connection to a PC COM port or a serial device such as a printer)

The standard Psion Teklogix PDM kit (PN HU4001) includes the necessary AC/DC adaptor, line cord, USB cables and RS232D 9-pin cable.

The PDM contains reverse polarity and over voltage protection. If the AC/DC adaptor jack is wired backwards or exceeds 20VDC, the PDM shuts down to protect the 7535 G2, the PDM and the power supply from damage. Psion Teklogix does not recommend substituting the AC/DC adaptor provided with your PDM.

The power supplied by the PDM is sufficient to operate the 7535 G2 and fast charge its internal battery at the same time. The 7535 G2 can run from a PDM without a battery installed.



Important: Please see page iii-xxvi for AC/DC adaptor safety instructions.

6.10 Bluetooth Peripherals

It is possible to communicate with a variety of Bluetooth peripherals, including GSM/GPRS handsets, scanners, printers, and so on. The range of the Bluetooth radio in the 7535 G2 is limited to approximately 10 meters (32 ft.). The Bluetooth antenna is located behind the scanner ‘bulge’ on the back of the hand-held.

Psion Teklogix provides built-in support for:

- Bluetooth-equipped cell phone.
- Serial Port Profile (SPP).
- Dial-up Networking Profile (DUN).
- File Transfer Profile (FTP).
- Human Interface Device (HID).
- LAN Access Profile (LAP).
- Object Push Profile (OPP).

Keep in mind that Bluetooth and IEEE 802.11g radios both operate in the 2.4GHz band. Although the 7535 G2 includes features to minimize interference, performance of the system will not be optimal if you use both radios simultaneously. Typically, when both radios operate in the 7535 G2 at the same time, they cannot transmit simultaneously—this has a negative impact on overall system throughput. To minimize the impact on the backbone 802.11 network, Psion Teklogix recommends using Bluetooth peripherals that have low transaction rates (such as printers and scanners).

Bluetooth peripherals are configured by choosing the *Bluetooth* icon in the *Control Panel*. Refer to “Bluetooth Setup” on page 116 for information about setting up your Bluetooth devices for communication. In addition, review the manual shipped with your Bluetooth device to determine the method used to associate with the 7535 G2 host.

6.11 The 7535 G2 Picker Cradle

The 7535 G2 picker cradle is a highly ruggedized, single station dock. Although it provides quick insertion and removal, the cradle holds the 7535 G2 securely even when operated in high vibration environments (such as vehicles not equipped with suspensions). The 7535 G2 base picker cradle can be outfitted with two options: a power module and a port replicator. Psion Teklogix also supplies a range of standard mounts for the hand-held picker cradles, and the 7535 G2 picker cradle is compatible with all of them.

6.11.1 Picker Cradle Mounting Recommendations



Warning: *Before mounting a picker cradle in a vehicle, there are a number of operator safety issues that require careful attention. An improperly mounted cradle may result in one or more of the following: operator injury, operator visibility obstruction, operator distraction and/or poor ease of egress for the operator. Psion Teklogix strongly recommends that you seek professional mounting advice from the vehicle manufacturer.*

Cable routing within a vehicle cab also requires careful consideration, especially for separately tethered scanners and other devices with loose cables. If you are unable to obtain suitable advice, contact Psion Teklogix for assistance (see Appendix A: Support Services And Worldwide Offices). Note also that for better protection, the equipment should be mounted inside the vehicle roll cage.

Pedestal mounts are recommended for all fixed mount locations because they offer optimal operator access. In addition, for safety reasons, only pedestal mounts with fully locking joints should be used in vehicles. Always adjust the pedestal for the optimum viewing angle, and securely tighten the hex and wing screws.

The most effective way to mount the picker cradle is to use the four #8-32 threaded inserts on the rear of the unit. Bolts must not extend more than 10mm (3/8") into the cradle.

To accommodate the service loop of the connector cable, leave a 4" clearance at the bottom of the cradle. Leave a 7" (minimum) clearance at the top of the cradle to allow easy removal of the hand-held. Also remember to leave at least a 3" clearance at the sides of the cradle to allow activation of the release knobs. Refer to the detailed assembly instructions that are packaged with the cradle when selecting a mounting location.

6.11.1.1 Mounting Template

The picker cradle is shipped with detailed mounting instructions including a drill template.

6.11.2 Wiring Guidelines

Before installing the cables between the cradle and other devices, consider the following:

- Ensure that drilling holes will not damage the vehicle or its wiring.
- Protect cable runs from pinching, overheating and physical damage.
- Use grommets to protect cables that pass through metal.
- Use plastic straps and tie-downs to secure cables and connectors in their desired location, away from areas where they may get snagged or pulled.
- Keep cables away from heat sources, grease, battery acid and other potential hazards.
- Keep cables away from control pedals and other moving parts that may damage the cables or interfere with the operation of the vehicle.

6.11.3 Using The Picker Cradle

If your 7535 G2 is equipped with a shoulder strap or cover, these accessories need to be removed before installing the unit in a picker cradle. There is no need to remove handstraps, pistol grips or tethered devices from the unit.

- Slide the 7535 G2 into the cradle, and press firmly downward until it locks into place. On a vehicle, it's a good idea to pull up on the 7535 G2 to be certain that it is secure.
- To remove the 7535 G2, press firmly on one of the knobs on either side of the cradle until it releases. You do not need to press both knobs.

6.11.4 Maintaining The Picker Cradle

Two latches in the cradle hold the 7535 G2 firmly in place. Although these latches are designed for at least 80,000 insertion and removal cycles, they will wear over time and will no longer lock the 7535 G2 securely in the cradle. For replacement parts and instructions contact Psion Teklogix (see Appendix A: Support Services And Worldwide Offices). Partial disassembly is required.

6.11.5 Powered Cradle Installation In High Voltage Vehicles



Warning: *Voltages exceeding 60VDC are considered hazardous. For powered cradle installations on vehicles with batteries above this voltage, ensure the powered cradle power connector is mounted in a dry location on the vehicle, or that the connector is insulated with an appropriate waterproof material after installation. The connector must also be installed out of the vehicle operator's reach. Exposing an accessible power connector to water or other liquids could create a hazardous situation resulting in serious injury or death.*

Installation of powered cradles in vehicles that operate above 60VDC require special consideration.

Due to the hazardous voltages present on these vehicles, it is necessary to ensure that the powered cradle power supply cable connector is not accessible to the vehicle operator, and does not get exposed to water or other liquids. This can be accomplished in one of the following ways:

- Ensure the power connector is installed in a dry location on the vehicle, away from the vehicle operator's reach (perhaps under a vehicle dash or in a sealed housing).
- Cover the power connector with a waterproof heat shrink material (see "Extreme Wet Environments" below for additional details).
- Wrap the connector securely with a waterproof electrical tape in an area out of the vehicle operators reach.

All other installation requirements outlined in this document should also be followed for High Voltage vehicles to insure safe installation and operation of the powered cradle.

6.11.5.1 Extreme Wet Environments

For extreme wet environments, or environments where it is difficult to restrict vehicle operator access to the power connector, Psion Teklogix offers a waterproof heat shrink kit (PN 1030022). The kit contains 3 pieces of waterproof, high shrink ratio heat shrink tubing which can be used to encapsulate the entire connector assembly. If using this kit, please ensure that you order sufficient material to cover installation and service, remembering that heat shrink is one-time use, and must be replaced if it is removed from the connector for any reason.

6.11.6 Powered Cradle Installation

The powered cradle option is designed to allow the 7535 G2 to be powered by a vehicle battery. The battery installed in the 7535 G2 is also recharged by the vehicle battery. This option accepts DC power sources over the range 12V to 80V.

The 7535 G2 picker cradle can be ordered with the powered cradle option installed, or it can be retrofitted later at an authorized Psion Teklogix service depot. Service offices are listed in Appendix A: Support Services And Worldwide Offices.

The 7535 G2 charging LED (see “Charge LED” on page 45) indicates that external power is available, and it also indicates the charging status of the internal battery.



Warnings: *Applying a voltage above 90VDC or reversing polarity may result in permanent damage to the cradle power option and will void the product warranty.*

TO AVOID ELECTRIC SHOCK when the powered cradle option is installed, always ensure that the rear panel ground lug on the picker cradle is connected to the vehicle chassis. Failure to do this could result in serious injury or death.

The metal chassis of the picker cradle must be connected directly to the chassis of the vehicle. A safety ground lug (clearly labelled on the rear of the cradle chassis) is provided for this purpose. The grounding strap must connect from the ground stud on the picker cradle to a solid, reliable contact point on the main portion of the vehicle chassis. It must *not* be connected to battery negative or a terminal block. This grounding strap ensures that if there is a fault in the vehicle wiring or in the picker cradle power module, the picker cradle cannot be at a hazardous voltage with respect to the vehicle chassis.

Connection between the picker cradle ground lug and the vehicle chassis should be done with a 16 gauge ground strap (ground wire). Connect the ground strap to the picker cradle utilizing the ground lug hardware supplied with the picker cradle and a #10 heavy duty wire crimp ring terminal. Torque the ground lug hardware to 23.0 +/- 2.0 in-lbs. Connect the other end of the ground strap to a solid, reliable point on the main portion of the vehicle chassis, ensuring a solid electrical connection.

As with other vehicle cables, the routing of the ground strap should be carefully considered to ensure it does not pose a hazard to the operator or the safe operation of the vehicle. If necessary, secure the ground strap with cable ties or some other mechanical means to prevent loops or loose lengths of wire that could catch on stationary items when the vehicle is in motion.

6.11.6.1 Wiring Vehicle Power To The Cradle

A 1.8 meter (6 foot) extension power cable (PN 13985-302) is supplied with your power cradle. This cable should be wired to a filtered, fused (maximum 10A) accessory supply on the vehicle. The power cradle draws no more than 8A (less if the accessory supply is greater than 12V). Any additional wiring, connectors or disconnects used should be rated for at least 10A.

The red lead of the power cable attaches to the positive vehicle supply. The black lead connects to the negative supply—this should be connected to a proper terminal block and not to the vehicle body. The power cradle is fully isolated and can be used with both negative and positive chassis vehicles.

You may have the option of connecting power before or after the ‘key’ switch. It is preferable to wire the power cradle *after* the key switch—that is, it cannot be turned on without the key on. However, if the operator switches the key off repeatedly for long periods during a shift, it may make more sense to wire the cradle *before* the switch.

Keep in mind that the 7535 G2 will continue to operate with or without vehicle power as long as its battery has sufficient charge.

If an unfused power source must be used, a fuse assembly (PN 19440) must be added to the extension power cable (the fuse and instructions are supplied with the cable). Use only a 10A slow blow UL approved fuse in the fuse assembly.

6.11.7 The Port Replicator

The port replicator is an optional accessory that allows tethered devices (e.g., scanners) as well as mounted peripherals (e.g., bar code printers or weigh scales) to be attached to the picker cradle. The replicator can be used with or without the cradle power option.

The functionality of the 7535 G2 tether port is duplicated on the port replicator. In addition to the tether port, the replicator is equipped with a standard 9 pin RS232D serial interface. This interface is typically used for fixed peripherals such as printers. Your serial device likely includes a suitable cable connector for this port.



Note: *The 7535 G2 picker cradle can be ordered with the port replicator option installed, or it can be retrofitted later by an authorized Psion Teklogix service depot. Service offices are listed in Appendix A: Support Services And Worldwide Offices.*

6.12 Tether Adaptor Cables

The following generic interface tether cables are available in addition to the dedicated cables provided for external scanners as described in “External Bar Code Readers” on page 213:

- CA1010 JB5 to DE9 RS232 Serial Cable: Straight through wiring.
- CA1015 JB5 to DE9 RS232 Serial Cable: Null modem (signal lines are crossed-over).
- CA1020 JB5 to Type B USB: Connects to USB devices with Type B receptacles.

For the pinout diagrams for 7535 G2 cables P/N CA1020 and P/N CA1010, please see Appendix C: “Port Pinouts”, page C-5.

Special intermediate cabling assemblies are available to allow older devices or unique peripherals to be connected to the JB5 tether port. These cabling assemblies permit scanner cables to be re-terminated in an intermediate in-line connector (called LTW), which then interfaces to one of a number of standard adaptor cables with JB5 terminations.

These kits include assembly instructions and the mating connector.

- 1002162 Cable Adaptor LTW - JB5 Scan Decoded.
- 1002163 Cable Adaptor LTW - JB5 Scan Undecoded.
- 1002164 Cable Adaptor LTW - JB5 Scan RS-232.
- 1002165 Cable Adaptor LTW - JB5 Scan RFID.
- 1002166 Cable Adaptor LTW - JB5 Scan USB.

Contact Psion Teklogix support services (see Appendix A: “Support Services And Worldwide Offices”) for assistance in the creation of these cable assemblies if you wish to take advantage of this capability.

SPECIFICATIONS

7

7.1	7535 G2 Hand-Held Computer Specifications	237
7.2	Radio Specifications	239
7.3	Internal Scanner Port	240
7.4	RFID Applications	240
7.5	External Scanners	240
7.6	Internal Scanner Specifications	241
7.6.1	EV15 Scanner Specs	241
7.6.1.1	Decode Zones	242
7.6.2	SE1200 High Performance & Long Range Specs	243
7.6.3	SE1200 Advanced Long Range & SE2223PDF Specs.	244
7.6.3.1	Decode Zones	245
7.6.4	SE1224HP Specs	246
7.6.4.1	Decode Zones	247
7.6.5	SE1524ER – Extended Range Scanner.	248
7.6.5.1	Decode Zones	248
7.6.6	SX5303 Imager Specs	250
7.6.6.1	SX5303 Typical Performance @ 300 Lux.	251
7.7	External Scanner Specifications	252
7.7.1	PowerScan® LR and XLR Industrial Scanner Specs	252
7.7.2	PowerScan® Standard Range Scanner Specs	254
7.8	RD7950 Integrated UHF RFID Reader	255
7.9	HU3000 - 1900 mAh Lithium-Ion Battery Pack	256



Note: *Performance specifications are nominal and subject to change without notice.*

7.1 7535 G2 Hand-Held Computer Specifications

Size

- 102mm (4") width x 62.5mm (2.5") depth x 260mm (10.2") length.
- Keypad area: 75.5mm (3") width x 35mm (1.4") depth.

Weight

With battery	710g (25 oz.)
With pistol grip	add 95g (3.4 oz.)

Operating System

Microsoft® Windows® CE 5.0

Processor And Memory

- 520 MHz XScale PXA270 Processor.
- RAM: 128MB SDRAM standard.
- Flash ROM: 64MB FLASH standard.

Power

- 7.4V @ 1.9Ah Li-ion rechargeable battery.
- Intelligent fast charge.
- 8-hour battery operation (5 scans, transmit & receive/min.).
- Built-in gas gauge & performance monitor.
- Quick swap battery packs.
- Built-in fast charger (2 hour typical recharge).
- Self-guiding & latching battery pack design.
- System backup (more than 10 minutes) during battery swap.
- Adjustable battery allocation between system backup and runtime.
- 1 week real-time clock backup.

Communication

Ports:	Tether port (optional) with: <ul style="list-style-type: none">- one RS232 serial port (decoded scanner, printer) undecoded scanner port USB host port, power out- Docking station port with: one RS232 serial port including diagnostics USB device port, USB host port, power in/out
--------	---

Environmental

Guaranteed Operating:	-10°C to +50°C (14°F to 122°F)
Temperature Range:	Long exposure to temperatures below -40°C (-40°F) may damage the screen and main battery. Prolonged exposure to temperatures above +60°C (+140°F) will damage the main battery and temperatures above +70°C (+158°F) may damage the unit.
Storage Temperature:	-25°C to +60°C (-13°F to 140°F)
Rain And Dust Resistance:	IEC 529, classification IP65.
Humidity:	5% - 95% RH non-condensing
Drop Durability:	Multiple 1.5m (5 ft.) drops to polished concrete. <i>Cradle shock:</i> IEC 60068-2-27: Test Ea, 300 m/s ² , 11ms, half-sine, 3 shocks in each of 6 directions. <i>Cradle vibration:</i> IEC 60068-2-64: Test Fh, Random, 3 axis, 100 min/axis; 5.0 m ² /s ³ ASD, 10 - 200 Hz; 1.0 m ² /s ³ ASD, 200 - 500 Hz.

Approvals

Safety:	UL 1950-1, CSA C22.2 No950, LVD EN60950
EMC:	FCC Part 15 Class B, EMC Directive Class B
Laser:	IEC 60825-1:1993+A1:1997+A2:2001 Class 2 CDRH 21 CFR 1040 Class II

7.2 Radio Specifications

Model RA2040: 802.11g Direct Sequence Spread Spectrum (DSSS) And Orthogonal Frequency Division Multiplexing (OFDM)

Form factor	Compact Flash Type II extended
Antenna port	Single U.FL jack, no diversity
Transmit Power	32mW max (+15dBm), all versions
Frequency Range	2.400 - 2.4835 GHz, all versions
Channels	1 to 11 for USA, Canada 1-13 for EU countries
RX Sensitivity	(8% FER, 1024 bytes packet) = -89dBm @ 1 Mbps, -87dBm @ 11 Mbps, -83dBm @ 6 Mbps, -72dBm @ 54 Mbps
Data Rates	1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48 & 54 Mbps

Bluetooth Radio

Embedded (USB interface)	
Bluetooth Version	1.2 compliant (features Adaptive Frequency Hopping for better co-existence with 802.11 radio)
Chip Antenna	2dBi peak
Transmit Power	-3dBm (0.5mW) minimum, +4dBm (2.5mW) max
Frequency Range	2.400 - 2.4835 GHz
RX Sensitivity (BER≤0.1%)	-80dBm max
Data Rate	732.2 kbps and 57.6 kbps asymmetric, 433.9 kbps symmetric

7.3 Internal Scanner Port

Compatibility

1D Lasers:	SE1200HP non-decoded, standard range SE1200LR non-decoded, long range SE1200ALR non-decoded, advanced long range SE1224HP decoded with fuzzy logic processing SE1524ER decoded with fuzzy logic processing, auto-ranging
1D Imagers:	EV15
2D Lasers:	SE2223 PDF decoded raster
2D Imagers:	SX5303ST SX5303ULR SX5303HD

7.4 RFID Applications

- RD7950 Integrated UHF RFID Reader
 - Psion Teklogix RFID File System
 - Multi-protocol support

7.5 External Scanners

Supported Types	Decoded and Non-Decoded 5V only.
Interface	Via tether port.

7.6 Internal Scanner Specifications

This section lists specifications for the following internal scanners:

- EV15 (see below).
- SE1200 High Performance and Long Range (page 243).
- SE1200 Advanced Long Range and SE2223PDF (page 244).
- SE1224 High Performance (page 246).
- SE1524 Extended Range (page 248).
- SX5303 2D Imager Scanner (page 250).

7.6.1 EV15 Scanner Specs

Parameter	EV15
Type	Imager LED Class 1
Light Source	617nm Highly Visible LED
Scan Rate	Decoded operation = 500 scans/s auto-adaptive Undecoded operation = 200 scans/s
Scan Angle/Field of View	40°
Scan Patterns	Linear
Minimum Print Contrast	Minimum 25%
Min x. Dimension	0.1 mm (4 mils)
Reading Distance	Up to 90cm (35 in)
Symbologies Supported	UPC (E&A), EAN, RSS, Code 39, Code 128, UCC/EAN 128, ISBN, ISBT, Interleaved, Matrix, Industrial and Standard 2 of 5, Codabar, Code 93/93i, Code 11, MSI, Plessey, Telepen, PDF417, Micro PDF417
Interfaces	Decoded mode: RS232 TTL with Intermec Scanner Control Protocol (ISCP)
Ambient Light	Works in any lighting conditions, from 0 to 100,000 lux

7.6.1.1 Decode Zones

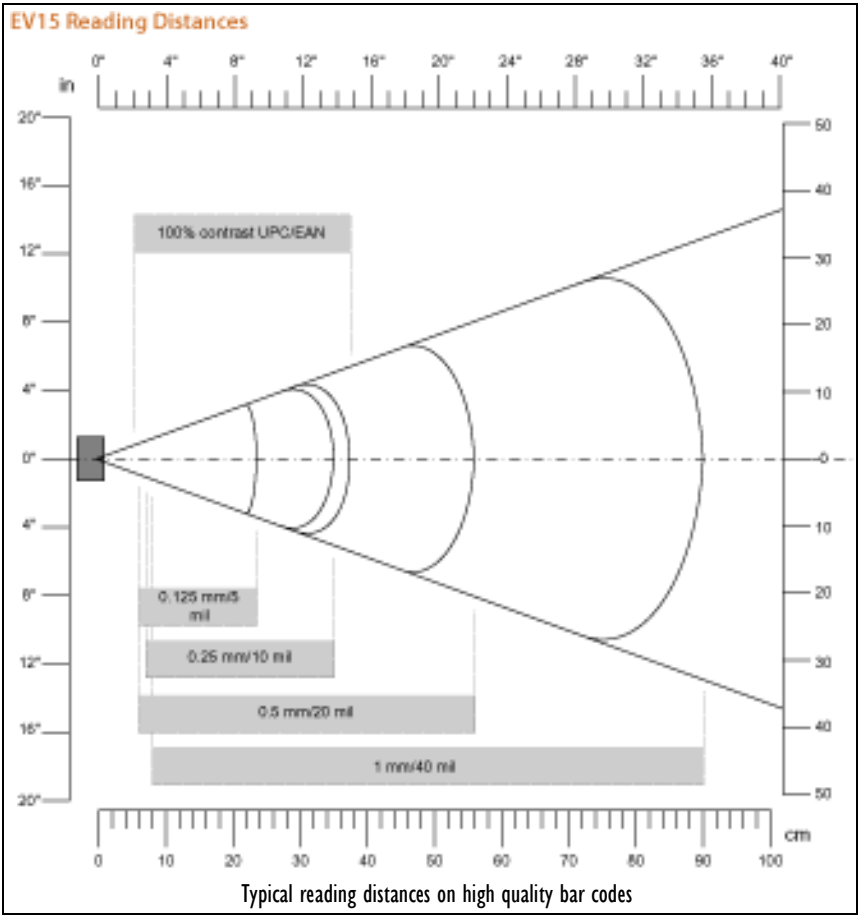


Figure 7.1 EV15 Decode Zones

7.6.2 SEI200 High Performance & Long Range Specs

Parameter	SEI200HP	SEI200LR
Type	Laser Class 2	Laser Class 2
Light Source	Visible Laser Diode 650 nm	Visible Laser Diode 650 nm
Scan Rate	35 (\pm 5) scans/sec (bidirectional)	35 (\pm 5) scans/sec (bidirectional)
Scan Angle/Field of View	42° \pm 2°	23° \pm 2°
Scan Patterns	Linear	Linear
Minimum Print Contrast	Minimum 20% absolute dark/light reflectance mea- sured at 650 nm	Minimum 40% absolute dark/light reflectance mea- sured at 650 nm
Symbologies Supported	UPC/EAN, Code 128, Code 39, Code 93, I 2 of 5, Discrete 2 of 5, Codabar, MSI UCC/EAN 128.	UPC/EAN, Code 128, Code 39, Code 93, I 2 of 5, Dis- crete 2 of 5, Codabar, MSI UCC/EAN 128.
Programmable Parameters	Laser On Time, Aim Duration, Power Mode, Trigger Mode, Bi-directional Redundancy, Symbology types/lengths, Data formatting.	Laser On Time, Aim Dura- tion, Power Mode, Trigger Mode, Bidirectional Redun- dancy, Symbology types/lengths, Data formatting.
Ambient Light:	Artificial: 450 ft. candles (4844 Lux). Sunlight: 10000 ft. candles (107,640 Lux).	Artificial: 450 ft. candles (4844 Lux). Sunlight: 8000 ft. candles (86,112 Lux).
Laser Output Power (peak)	0.83mW	1.33mW

7.6.3 SE1200 Advanced Long Range & SE2223PDF Specs

Parameter	SE1200ALR	SE2223PDF
Type	Laser Class 2	Laser Class 2
Light Source	Visible Laser Diode 650 nm	Visible Laser Diode 650 nm
Scan Rate	35 (\pm 5) scans/sec (bi-directional)	590 scan/sec. 22 frames/sec.
Scan Angle/Field of View	13° \pm 2°	Horizontal: 34°, Vertical: 12.5°
Scan Patterns	Linear	Linear and Smart Raster
Minimum Print Contrast	Minimum 40% absolute dark/light reflectance mea- sured at 650 nm.	Minimum 40% absolute dark/light reflectance mea- sured at 650 nm. 35% absolute dark/light reflectance differential (PDF). 25% absolute dark/light reflectance differential (1-D).
Symbologies Supported	UPC/EAN, Code 128, UCC/EAN 128, RSS, Code 39, Code 93, I 2 of 5, Discrete 2 of 5, Codabar, MSI.	PDF417, Micro PDF, UPC/EAN, Code 39, Inter- leaved 2 of 5, Code 128, Cod- abar, MSI Plessey, RSS and Composite codes.
Programmable Parameters	Laser On Time, Aim Duration, Power Mode, Trigger Mode, Bi-directional Redundancy, Symbology types/lengths, Data formatting.	Laser On Time, Aim Dura- tion, Power Mode, Trigger Mode, Bidirectional Redun- dancy, Symbology types/lengths, Data format- ting, Pattern Controls.
Ambient Light:	Artificial: 450 ft. candles (4844 Lux). Sunlight: 4000 ft. candles (43,056 Lux).	Artificial: 450 ft. candles (4844 Lux). Sunlight: 8000 ft. candles (86112 Lux).
Laser Output Power (peak)	1.35mW	0.86mW

7.6.3.1 Decode Zones

Bar Code (mil)	Read Distance					
	High Performance		Long Range		Advanced Long Range	
	Min (inches)	Max (inches)	Min (inches)	Max (inches)	Min (inches)	Max (inches)
5.0	3.0	4.5				
7.5	3.0	8.5				
10.0	2.5	12.5	13.0	17.5		
15.0	2.5	18.5	8.5	33.5	20.0	50.0
20.0	2.5	20.5	9.5	38.5	30.0	60.0
40.0	3.0	29.5	9.5	79.5	30.0	98.0
55.0	3.5	35.5	9.5	89.5	27.0	115.0

Table 7.1 Decode Zones – HP, LR And ALR

Bar Code (mil)	Raster Laser Scanner Read Distance	
PDF Bar Codes	SE2223	
	Min (inches)	Max (inches)
6.5	2.5	6.5
10.0	2.5	9.5
15.0	2.5	15.5

Table 7.2 Decode Zones – PDF Scanner

7.6.4 SE1224HP Specs

Parameter	SE1224HP
Type	Laser Class 2
Light Source	Visible Laser Diode 650 nm
Scan Rate	35 (\pm 5) scans/sec (bi-directional)
Scan Angle/Field of View	42° (typical), 30° (narrow)
Scan Patterns	Linear
Minimum Print Contrast	Minimum 25% absolute dark/light reflectance measured at 650 nm.
Symbologies Supported	UPC/EAN, Code 128, UCC/EAN 128, RSS, Code 39, Code 93, I 2 of 5, Discrete 2 of 5, Codabar, MSI.
Programmable Parameters	Laser On Time, Aim Duration, Power Mode, Trigger Mode, Bi-directional Redundancy, Symbology types/lengths, Data formatting.
Ambient Light:	Artificial: 450 ft. candles (4844 Lux). Sunlight: 8000 ft. candles (86112 Lux).
Laser Output Power (peak)	1.35mW

7.6.4.1 Decode Zones

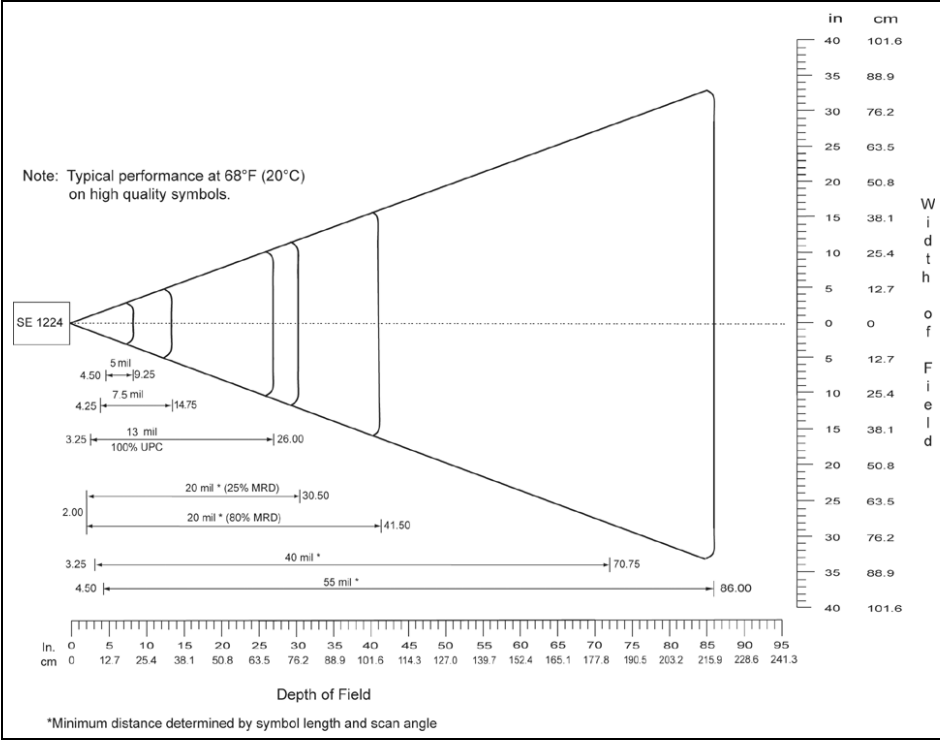


Figure 7.2 SE 1224HP Decode Zones

7.6.5 SE1524ER – Extended Range Scanner

Parameter	SE1524ER
Type	Laser Class 2
Light Source	Visible Laser Diode 650 nm
Scan Rate	35 (±5) scans/sec (bi-directional).
Scan Angle/Field of View	13.5° ±0.7°
Scan Patterns	Linear
Minimum Print Contrast	Minimum 25% absolute dark/light reflectance measured at 650 nm.
Symbologies Supported	UPC/EAN, Code 128, UCC.EAN128, RSS, Code 39, Code 93, I 2 of 5, Discrete 2 of 5, Codabar, MSI.
Programmable Parameters	Laser On Time, Aim Duration, Power Mode, Trigger Mode, Bi-directional Redundancy, Symbology types/lengths, Data formatting.
Ambient Light:	Artificial: 450 ft. candles (4,844 Lux). Sunlight: 4,000 ft. candles (86,112 Lux).
Laser Output Power (peak)	1.26mW

7.6.5.1 Decode Zones

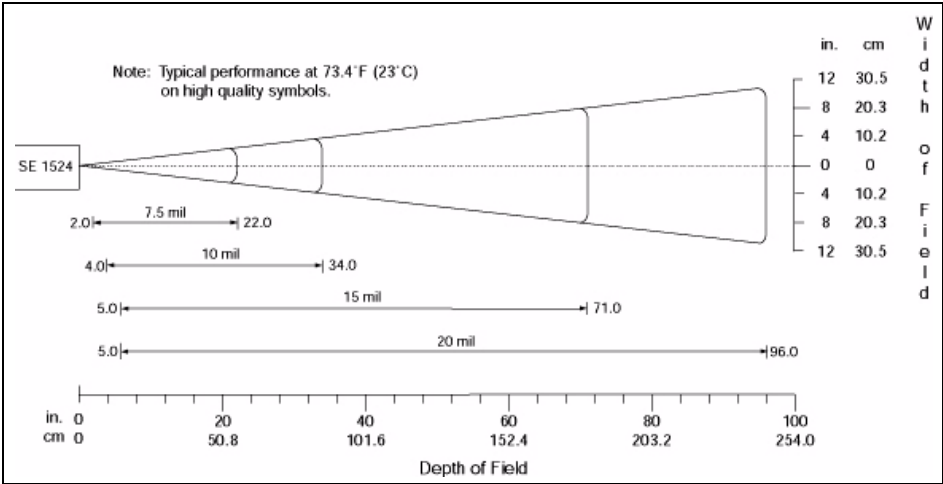


Figure 7.3 SE1524ER Decode Zone A (Short Range, Small Codes)

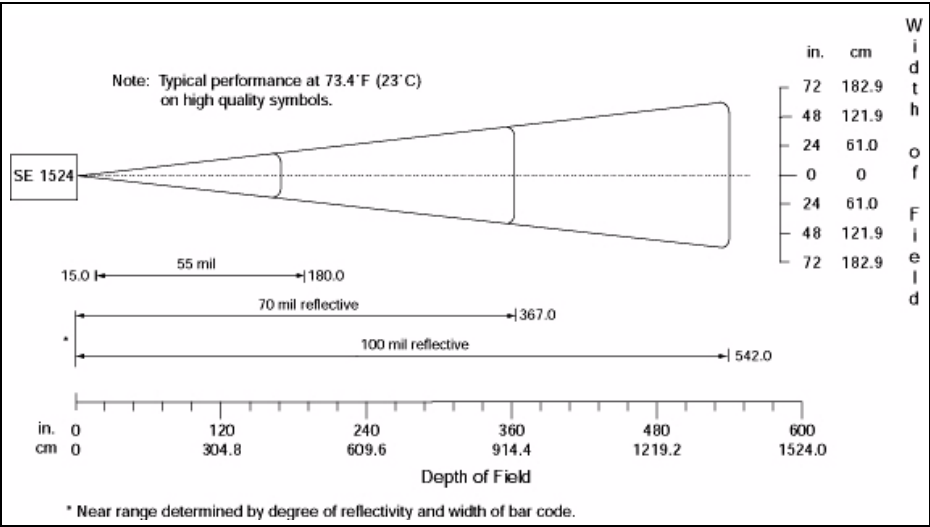


Figure 7.4 SE1524ER Decode Zone B (Long Range, Large Codes)

7.6.6 SX5303 Imager Specs

Parameter	SX5303
Type	Imager LED Class 1
Light Source	Visible LED 623 nm
Scan Pattern	Image capture field
Optics	1.3 megapixel (1280 x 1024)
Field of View	26 cm x 21 cm @ 15 cm
Pitch Angle	±45°
Skew Angle	±45°
Ambient Light	200 Lux to full sunlight.
Minimum Contrast	10%
Targeting	Center locating 623 nm LED.
Decoded Symbolologies Supported	Linear: Code 39; UPC/EAN; I2of5; Code 128; Codabar; RSS PDF417: + PDF417, microPDF417; Composite; image capture and signature capture. Data Matrix: Data Matrix; QR Code; Maxicode; Aztec Code; Planet; Postnet; Royal Mail 4SCC; 4 State postal codes from Australia, Canada, Japan; Korean Post 3of5.

7.6.6.1 SX5303 Typical Performance @ 300 Lux

Code	SX5303ST			SX5303ULR			SX5303HD		
	Mil Size	Min range (inches)	Max range (inches)	Mil Size	Min range (inches)	Max range (inches)	Mil Size	Min range (inches)	Max range (inches)
Data Matrix	10.0	4.1	6.7	10.0	5.5	13.1	7.5	3.5	4.5
Data Matrix	15.0	2.8	8.8				10.0	3.25	5.0
Data Matrix							12.5	2.75	5.5
Data Matrix							15.8	2.5	5.75
PDF417	5.0	4.2	6.4	10.0	4.6	16.3	5.0	3.5	4.75
PDF417	7.5	3.2	8.7	15.0	2.1	22.2	10.0	2.5	6.0
PDF417	10.0	2.2	10.1	20.8	2.8	25.8	15.0	2.75	7.25
PDF417	15.0	1.8	12.3						
PDF417	20.8	2.3	10.6						
QR				15.0	5.7	11.5	10.0	3.25	4.75
QR	7.5	3.2	3.3	20.8	3.3	15.4	15.0	2.25	5.75
QR	10.0	4.0	6.7						
QR	15.0	2.7	8.8						
QR	20.8	1.9	10.6						
Code 39	5.0	4.5	5.4	10.0	4.9	13.5	5.0	3.25	5.0
Code 39	7.5	3.1	8.3	15.0	2.4	20.3	10.0	2.25	6.5
Code 39	10.0	2.4	9.5	20.8	2.8	25.6	15.8	2.25	7.0
Code 39	15.0	1.9	11.6						
Code 39	20.8	2.3	13.7						
Code 128				15.8	3.75	17.25	10.0	2.25	6.5
Code 128				20.8	2.75	21.5			

7.7.1 PowerScan® LR and XLR Industrial Scanner Specs

Mechanical

Standard and Intermec-compatible.

Mechanical

6.9 x 11.2 x 18.3 cm (2.7 x 4.4 x 7.2 in)

Scanner - 280 g (9.9 ozs)

Cable (82.3 cm 32 in) - 176 g (6.2 ozs)

Collapsed: 81 cm (32 in)

Max working: 183 cm (72 in)

Operating voltage

4 VDC to 14 VDC

Operating current - nominal

Undecoded: 75 mA @ 5 VDC

Decoded: 100 mA @ 5 VDC

Idling current - low power mode 50 μ A @ 5 VDC

Light source

Extra bright 650 nm Visible Laser Diode (VLD)

Scan System

Frictionless lifetime flexure mechanism

Rate

35 scans/sec nominal

Depth of field - Long Range

Paper Labels (decoded)

7.5 mil 6 to 10 in (15 to 25 cm)

10 mil 5 to 20 in (13 to 51 cm)

15 mil 5 to 32 in (13 to 81 cm)

20 mil 5 to 48 in (15 to 122 cm)

40 mil 8 to 85 in (20 to 216 cm)

55 mil 15 to 108 in (38 to 274 cm)

Reflective Labels (decoded)

40 mil 22 to 100 in (56 to 254 cm)

55 mil 30 to 104 in (76 to 366 cm)

70 mil 40 to 180 in (102 to 457 cm)

100 mil45 to 264 in (114 to 671 cm)

Depth of Field-Extra Long Range	Paper Labels (decoded) 15 mil 28 to 60 in (71 to 152 cm) 20 mil 28 to 72 in (71 to 182 cm) 40 mil 28 to 144 in (71 to 144 cm) 55 mil 40 to 180 in (102 to 457)
	Reflective Labels (decoded) 40 mil 40 to 180 in (102 to 457 cm) 70 mil 80 to 300 in (2032 to 762 cm) 100 mil 80 to 432 in (203 to 1097 cm)
Print Contrast Ratio	25% minimum
Pitch	± 65°
Skew	± 55°
Ambient Light Immunity	Artificial light: 1200 ft. candles. Sunlight: 8000 ft. candles.
Environmental	
Temperature Rating	Operating: -22° to 122° F (-30° to 50° C) Storage: -40° to 158° F (-40° to 70° C)
Humidity	5 to 95% NC
Shock (at 23° C)	Withstands multiple 6 foot drops to concrete.
Vibration	Meets MIL-STD-810E
Water and Dust	IEC529 rating IP54DW
Decoding Capabilities	
Auto-discriminates between:	UPC A, E/EAN8, 13/JAN8, 13 (P2/P5, Code 128 EAN add-ons) Code 128, MSI/Plessey, Code 39, Interleaved 2 of 5, Code 39 Full Ascii, Standard 2 of 5, Code 93, Codabar,
Safety/Regulatory	
Electrical	Complies to: Gost R; TUV; UL; cUL
Emissions	Complies to: FCC-A;EN55022-B BCIQCNS13438; AS/NZS3548; VCCI-B
Laser Classification	IEC 60825-1: 1993+A1: 1997+A2:2001 CDRH 21 CFR 1040 Class II

Communication

Standard and Intermec-compatible.

6.9 x 11.2 x 18.3 cm (2.7 x 4.4 x 7.2 in)

Scanner - 280 g (9.9 ozs)

Cable (82.3 cm 32 in) - 176 g (6.2 ozs)

Collapsed: 81 cm (32 in)

Max working: 183 cm (72 in)

Extra bright 650 nm Visible Laser Diode (VLD)

Frictionless lifetime flexure mechanism

35 scans/sec nominal

Paper Labels (decoded)

7.5 mil 3.0 to 6 in (9 to 15 cm)

10 mil 1.5 to 15 in (4 to 38 cm)

15 mil 1.0 to 25 in (2.5 to 64 cm)

20 mil 1.0 to 35 in (2.5 to 89 cm)

55 mil 6.0 to 60 in (15 to 152 cm)

High Density (decoded)

3 mil 1.0 to 2 in (2.5 to 5.1 cm)

4 mil 1.0 to 3 in (2.5 to 8 cm)

5 mil 0.8 to 3.8 in (2 to 10 cm)

7.5 mil 0.6 to 4.5 in (1.5 to 11 cm)

10 mil 0.2 to 5.5 in (0.5 to 14 cm)

25% minimum

 $\pm 65^\circ$ $\pm 55^\circ$

Artificial light: 1200 ft. candles.

Sunlight: 8000 ft. candles.

Electrical

Operating voltage	4 VDC to 14 VDC
Operating current - nominal	Undecoded: 75 mA @ 5 VDC Decoded: 100 mA @ 5 VDC
Idling current - low power mode	50 μ A @ 5 VDC

Environmental

Temperature Rating	Operating: -22° to 122° F (-30° to 50° C) Storage: -40° to 158° F (-40° to 70° C)
Humidity	5 to 95% NC
Shock (at 23° C)	Withstands multiple 6 foot drops to concrete.
Vibration	Meets MIL-STD-810E
Water and Dust	IEC529 rating IP54DW

Decoding Capabilities

Auto-discriminates between:	UPC A, E/EAN8, 13/JAN8, 13 (P2/P5, Code 128 EAN add-ons) Code 128, MSI/Plessey, Code 39, Interleaved 2 of 5, Code 39 Full Ascii, Standard 2 of 5, Code 93, Codabar,
-----------------------------	---

Safety/Regulatory

Electrical	Complies to: Gost R; TUV; UL; cUL
Emissions	Complies to: FCC-A;EN55022-B BCIQCNS13438; AS/NZS3548; VCCI-B
Laser Classification	IEC 60825-1: 1993+A1: 1997+A2:2001 CDRH 21 CFR 1040 Class II

7.8 RD7950 Integrated UHF RFID Reader

For detailed RD7950 specifications, please see Appendix B: “RD7950 Integrated UHF RFID Reader,”, page B-11.

7.9 HU3000 - 1900 mAh Lithium-Ion Battery Pack

For detailed safety instructions, please see “Lithium-Ion Battery Safety Precautions” on page xxiv.

Technology	Lithium-Ion (Li-Ion)
Operating Temperature	-20°C to 60°C (-4°F to 140°F)
Charge Temperature	5°C to 39°C (41°F to 102°F)
Storage Temperature	-30°C to 60°C (-22°F to 140°C) (Storage at elevated temperatures is not recommended.)
Charge Cycles	Minimum of 300 charge cycles with no degradation below 70% of nominal capacity
Charge Time	Charge time is typically 2 hours.
Voltage	7.4 V nominal (6V min. to 8.4V max.)
Cell Configuration	2 series connected cells
Capacity	1.9 Ah nominal at 300mA discharge 20°C to 6.0V (minimum)
Supported Chargers	6-Gang Charger Combo Charger Combo Docking Station Quad Docking Station

SUPPORT SERVICES AND WORLDWIDE OFFICES

Psion Teklogix provides a complete range of product support services to its customers worldwide. These services include technical support and product repairs.

A.1 Technical Support

For technical support in **North America**:

Call Toll free: +1 800 387 8898 Option 3 *or*

Direct Dial: +1 905 813 9900 Ext. 1999 Option 3

For technical support in **EMEA** (Europe, Middle East and Africa), please contact the local office listed in the website below:

<http://www.psionteklogix.com/EMEASupport>

For technical support in **Asia**, please contact the local office listed in the website below:

<http://www.psionteklogix.com>

Technical Support for Mobile Computing Products is provided via email through the Psion Teklogix customer and partner extranets. To reach the website, go to www.psionteklogix.com, and click on the appropriate Teknet link on the home page. Then click on the “Login” button or the “Register” button, depending on whether you have previously registered for Teknet. Once you have logged in, search for the “Support Request Form”.

A.2 Product Repairs

For repair service in **North America**:

Call Toll free: +1 800 387 8898 Option 2 *or*

Direct Dial: +1 905 813 9900 Ext. 1999 Option 2

For repair service in **EMEA** (Europe, Middle East and Africa), please contact the local office listed in the website below:

<http://www.psionteklogix.com/EMEASupport>

For repair service in **Asia**, please contact the local office listed in the website below:

<http://www.psionteklogix.com>

A.3 Worldwide Offices

COMPANY HEADQUARTERS

Psion Teklogix Inc.
2100 Meadowvale Boulevard
Mississauga, Ontario
Canada L5N 7J9

Tel: +1 905 813 9900
Fax: +1 905 812 6300
Email: salescdn@psion.com

CANADIAN SERVICE CENTRE

Psion Teklogix Inc.
7170 West Credit Ave., Unit #1
Mississauga, Ontario
Canada L5N 7J9

Tel: +1 800 387 8898 Option 2 - or -
Direct: +1 905 813 9900 Ext. 1999, Option 2
Fax: +1 905 812 6304
Web: www.psionteklogix.com

NORTH AMERICAN HEADQUARTERS AND U.S. SERVICE CENTRE

Psion Teklogix Corp.
1810 Airport Exchange Boulevard, Suite 500
Erlanger, Kentucky
USA 41018

Tel: +1 859 371 6006
Fax: +1 859 371 6422
Email: salesusa@psion.com

INTERNATIONAL SUBSIDIARIES (see also www.psionteklogix.com)

Psion Teklogix S.A.
La Duranne
135 Rue Rene Descartes
BP 421000
13591 Aix-En-Provence
Cedex 3; France

Tel: +33 4 42 90 88 09
Fax: +33 4 42 90 88 88
E-mail: tekeuro@psion.com

APPENDIX

B

RD7950 INTEGRATED UHF RFID READER

B.1	Introduction	3
B.2	Current Software And RFID File System Versions	3
B.3	RFID Tag Compatibility	3
B.4	Installation	3
B.4.1	Attaching The Pistol Grip	4
B.4.2	Attaching The RD7950.	5
B.4.3	Installing The RFID File System Software From Flash	8
B.4.4	Enabling The RD7950	10
B.5	Product Specifications	11
B.5.1	RFID Standards Compliance.	11
B.5.2	Host Device	11
B.5.3	Programming Environment	11
B.5.4	RFID Applications	11
B.5.5	Technical Specifications	11
B.6	Regulatory Information.	13
B.6.1	RF Exposure Statement	13
B.6.2	Approvals.	13

B.1 Introduction

The RD7950 UHF RFID Reader is an EPC-compliant 900MHz RFID reader available for Psion Teklogix rugged hand-held computing devices. The RD7950 can be retrofitted to deployed Psion Teklogix products, while leveraging existing hardware infrastructures. Multimedia data capture capabilities are delivered by combining RFID with existing technologies such as laser bar code scanning or imaging.

B.2 Current Software And RFID File System Versions

The RFID File System software is closely connected with the other terminal system software images. To ensure proper operation, the versions must be compatible. For current software compatibility information, please contact Psion Teklogix support (1-800-387-8898).

B.3 RFID Tag Compatibility

Compatible with EPC Class 0, Class 0+, Class 1, Class 1 Generation 2, ISO 18000-6 B, Intermec Intellitag, EM 4022 and EM 4222.

B.4 Installation



Note: *Normally the RD7950 comes pre-assembled to the 7535 G2 from the factory. Review these instructions only if your RD7950 was shipped separately.*

To install the RD7950 UHF RFID Reader to the 7535 G2 Hand-Held Computer, first attach the pistol grip (see Figure B.1 on page B-4).

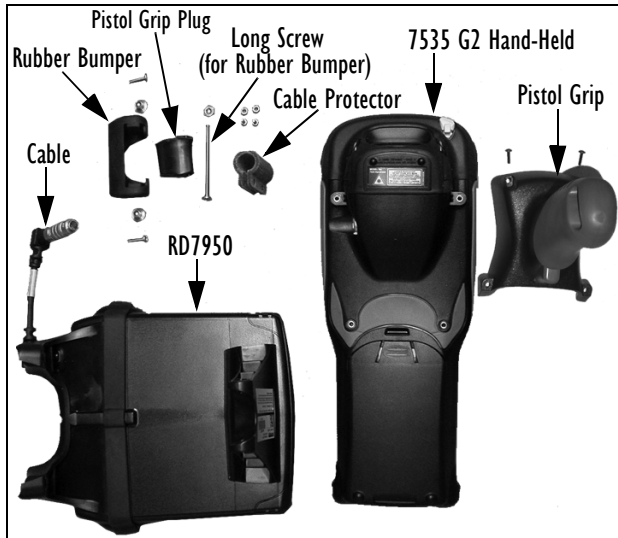


Figure B.1 RD7950 Installation Components

B.4.1 Attaching The Pistol Grip



Notes: A Phillips head screwdriver is required.

Do not use adhesives such as Loctite to secure the screws on carrying accessories. These chemicals may damage the plastic casing.


The pistol grip is attached to the back of the 7535 G2 Hand-Held Computer using the four threaded inserts in the upper part of the 7535 G2 casing. Four black #4-40 Phillips head screws are provided with this accessory.



Note: Prior to installation, make sure the trigger mechanism is securely snapped into the pistol grip body and that the trigger operates properly.


- Position the pistol grip so that it fits snugly over the back of the unit and the inserts on the back of the 7535 G2 align with the holes in the pistol grip.

- Using a Phillips screwdriver, securely fasten the pistol grip to the back of the 7535 G2. Tighten the rear screws to a torque of 3kgf-cm (3 lbs-in), or until finger-tight, to secure the pistol grip in place.

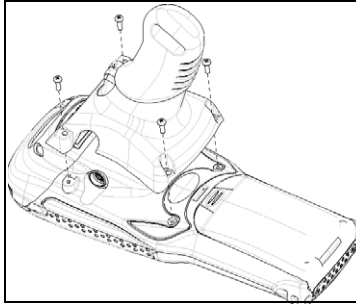

B.4.2 Attaching The RD7950

- Push in the inserts on either side of the rubber bumper.

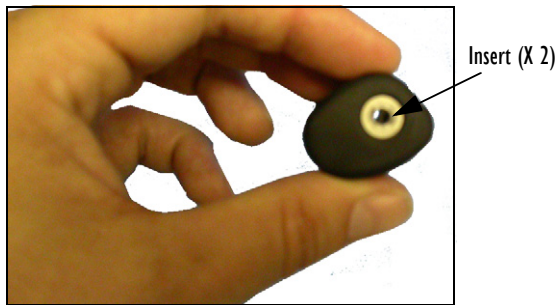


- Snap the rubber bumper onto the RD7950.



Appendix B: RD7950 Integrated UHF RFID Reader
Attaching The RD7950

- Insert the pistol grip plug in the pistol grip handle.

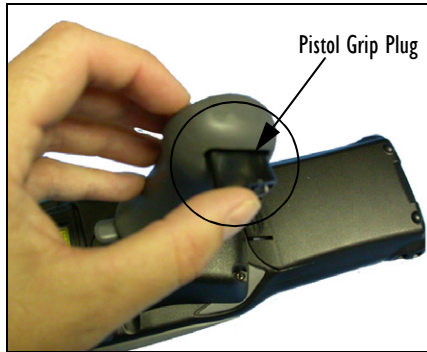

- Position the RD7950 on the back of the 7535 G2, fitting the rubber bumper on the RD7950 onto the hand-held pistol grip.



- Insert the long screw through the rubber bumper, and secure it with a nut.



- Attach the RD7950 to the 7535 G2 by screwing it on using two front screws.



- Plug the RD7950 cable into the tether port on the 7535 G2.



- Wrap the cable protector around the end of the cable.



Appendix B: RD7950 Integrated UHF RFID Reader
Installing The RFID File System Software From Flash

- Secure the cable protector with two screws and nuts.



Figure B.2 RD7950 Installed On 7535 G2 Hand-Held Computer

B.4.3 Installing The RFID File System Software From Flash

If the RFID File System Software is not present on your unit, you will need to take a few steps to install it from the flash disk. To determine whether the software is present, check for the *RFID File System icon* in the Control Panel.




Important: *For the latest RFID File System information, please go to <http://www.pSIONteklogix.com/downloads>, which will take you to the Teknet home page. Login with your Teknet Username and Password. (If you're not already a member of Teknet, you'll need*


to register at this home page so that you can access RFID File System information.) Once you've entered your name and password, the Download page is displayed.

In the opening paragraph at the top of the Download page, click on "developer resources". The current version of the RFID File System can be downloaded from this location. To upgrade the other software images, please contact Psion Teklogix support (1-800-387-8898).

- Tap on **My Device>Flashdisk>RFID File System cab file.**

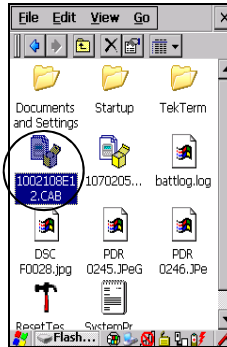


The *Install* window is displayed.

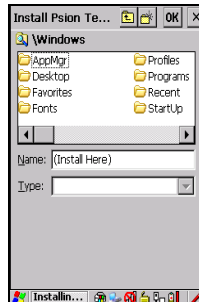

- Tap on **OK** to begin the software installation.

- In the *Confirm File Replace* window, tap on **Yes To All**.

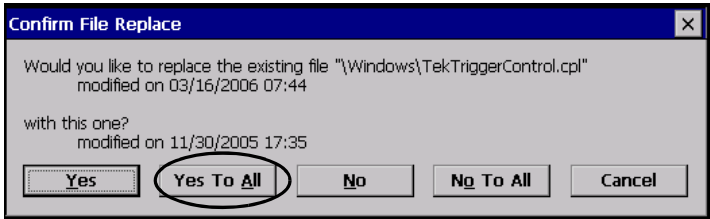

- Tap on **OK** in the *Reset now?* window to complete the installation and reset your unit.



B.4.4 Enabling The RD7950

Note: *RFID File System software must be installed on your 7535 G2 in order for the integrated UHF RFID reader to operate.*

The trigger is selected using the Trigger Control icon on the Windows Control Panel (for details see page 110). Immediately after the RFID File System is installed, by default the pistol grip trigger operates the RD7950. In other words, as soon as the RFID FS is installed, pressing the trigger causes an RFID scan.

*The Trigger Control display should show that **RFID File System** owns **Handgrip Trigger**.*

- When **RFID usage** is selected as the trigger source in the RFID File System software on the 7535 G2, pulling the trigger causes a Scanning icon to appear. While this icon is displayed, the RD7950 is powered on and actively probing for RFID tags.
- When the trigger is released, the image will disappear, and the RD7950 is powered down.



B.5 Product Specifications

*Specifications subject to change.

B.5.1 RFID Standards Compliance

EPC Class 0, 0+, Class 1, Class 1 Generation 2
ISO 18000-6 Type B (U-Code, HSL, Intellitag)
EM 4022, EM4222

B.5.2 Host Device

7535 G2 Hand-Held Computer

B.5.3 Programming Environment

Windows[®] Win32 File API

B.5.4 RFID Applications

Psion Teklogix RFID File System

B.5.5 Technical Specifications

Frequency Range:

RFID Tag Frequency Range	Country/Region
865 - 868 MHz	Europe
908.5 - 914 MHz	South Korea
902 - 928 MHz	Canada
902 - 928 MHz	United States
952 - 954 MHz	Japan

Technical Specifications

Transmitter Power Output:	1 Watt (30dBm)
Channel Spacing:	500kHz
Channel Bandwidth:	Class 0: 205kHz
	Class 1: 300kHz
	ISO18000-6: 70kHz
Number of Hops:	50 (United States and Canada)
Data Rate:	57600 bps
Input Voltage:	5V
Current Rating:	1.5A

Read Distance

Class 0, 2x2 tag:	0 - 2.5 m (0 - 8 ft.)
Class 0, 11020:	0 - 3 m (0 - 10 ft.)
Class 0+ 4x4:	0 - 3.5 m (0 - 11 ft.)
Class 1 9238 Squiggle:	0 - 2.5 m (0 - 8 ft.)
Class 1 9338:	0 - 3.5 m (0 - 11 ft.)

Read distance is highly dependant upon tag configuration, material to which the tag is applied, and the presence of metal and water around the tag. Metal and water will decrease read ranges significantly.

Write Distance

Write distance for Class 0+ and Class 1 tags is approximately 50% of the read distance referenced above.

Weight

- Less than 1400g
- 7535 G2 is approximately 775g (27oz.) with pistol grip.
- Integrated Reader is approximately 600g (21oz.).

Environmental

Operating temp:	0°C to +50°C (32°F to 122°F)
Storage temp:	-25°C to +60°C (-13°F to 140°F)
Humidity:	5 - 95% RH, non-condensing
Rain/Dust:	IEC 529, classification IP54
Shock:	1.22 m (4 ft.) drop to polished concrete multiple times
Cradle vibration:	1.5g RMS PSD (4 Hz - 500 Hz)

B.6 Regulatory Information

B.6.1 RF Exposure Statement

Changes or modifications not expressly approved by Psion Teklogix Inc. could void the user's authority to operate the equipment.



Warning: *This portable RF transmitting device has been tested and found to comply with FCC and IC RF exposure requirements with a maximum SAR of 0.11 Watts/Kg associated with body tissue. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.*

B.6.2 Approvals

Industry Canada RSS-210

FCC Part 15

Safety: UL 1950, CSA C22.2 No950, LVD EN60950

EMC: FCC Part 15 Class B, EMC Directive Class B

APPENDIX C


PORT PINOUTS

C.1 Tether Port Pinout	3
C.2 Docking Station Connector	3
C.3 Battery Contacts	4
C.4 JB5 To USB Type B Cable - P/N CA1020	5
C.5 JB5 To RS-232 Serial Cable - P/N CA1010	5

C.1 Tether Port Pinout

The tether port connector incorporates multiplexed undecoded scanner, decoded scanner, RS232 serial, and USB interfaces. In order for it to operate, a special wiring scheme is needed. If you have a need to create cables for the tether port, contact a Psion Teklogix representative and request document #1010032 “Instruction Tether Port Termination”. Attempting to interface to the tether connector without following this document may cause damage to the 7535 G2 or the tethered device.


C.2 Docking Station Connector

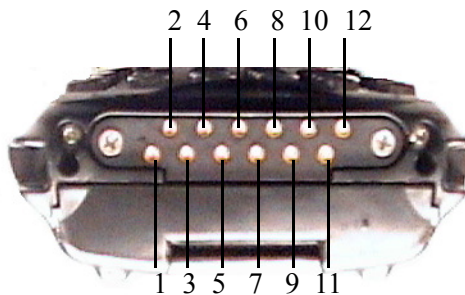

1. Ext 5V Switched. Used by external peripherals. 5VDC, 1A max.
2. RS-232 Rx Data. Console receive pin.
3. RS-232 Tx Data. Console transmit pin
4. DC Power In (13 - 18VDC @ 3A max). External power adaptor positive input.
5. USB Host Minus. For connecting USB devices.
6. USB Host Plus. For connecting USB devices.
7. DC Power In. Same as pin 4.
8. Docking Station ID. Identifies device attached to the docking station connector. The external device applies a specific resistance between this pin and ground as identification.
9. Ground.
10. USB Device Minus. Connects to another USB host, such as a PC.
11. USB Device Plus. Connects to another USB host, such as a PC.
12. Ground

C.3 Battery Contacts

These contacts represent right to left numbering with the docking port pointing toward you, and the battery contacts facing upward.

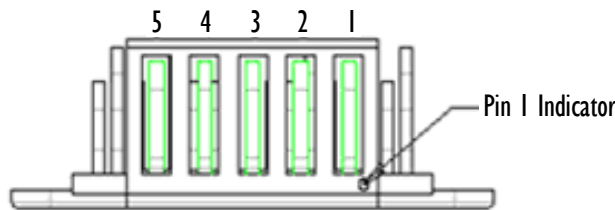


Battery Contacts		
Pin #	Signal	Description
1	POS	Positive Battery
2	CLK	SMBUS Clock
3	BAT_D	Presence/Cell Count
4	DATA	SMBUS Data
5	NEG	Negative Battery

C.4 JB5 To USB Type B Cable - P/N CA1020


USB CABLE ASSY

(Mates with USB devices that incorporate Type B receptacles)

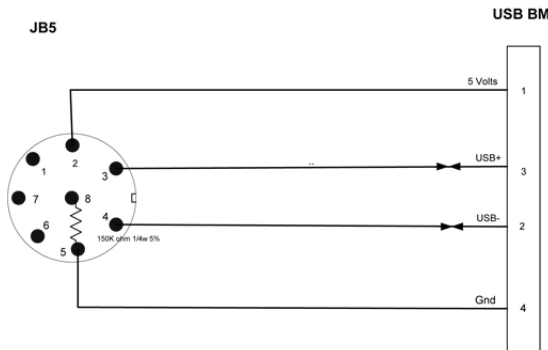

C.5 JB5 To RS-232 Serial Cable - P/N CA1010

Cable JB5/DE9 Straight Through

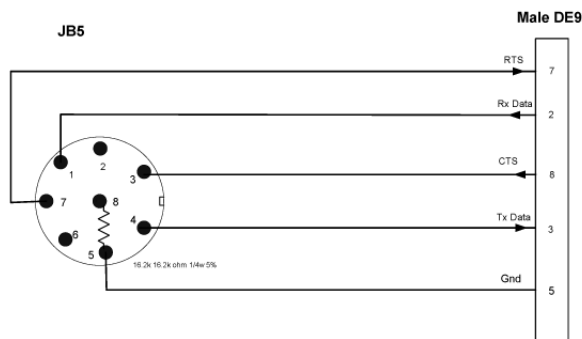

APPENDIX **D**

USB SETUP APPLICATION

D.1 USB Setup	3
D.1.1 Launching The Application	3
D.1.2 Installation Complete Dialog Box	5

D.1 USB Setup

The USB Setup application is used to update a Windows PC so that it can connect to a Psion Teklogix 7535 G2 using the USB port on the Portable Docking Module (PDM) connector. To download the USB Setup application, go to:

www.psionteklogix.com/downloads

This will take you to the Teknet home page.

- Login with your Teknet Username and Password. (If you're not already a member of Teknet, you can register for free at this home page so that you can access the USB Setup application.)

Once you've entered your name and password, the *Download* page is displayed.

- Scroll down to the *Utilities* heading, and then under *USB Setup*, tap on **Download**. If you need further assistance, please contact Psion Teklogix support (1-800-387-8898).

System Requirements

- Windows 2000 or XP.
- ActiveSync 3.5 or later.

The install program:


- updates copies of the device installation scripts `usbstor.inf` and `wceusbsh.inf` with Psion Teklogix-specific information, and
- sets up a USB connection between the PC and the 7535 G2.

D.1.1 Launching The Application

Before running the USB Setup application:

1. Unplug the 7535 G2 from your PC, and exit all running applications.
2. Double-click on the USB Setup executable in the directory you copied it to.

Welcome Dialog Box

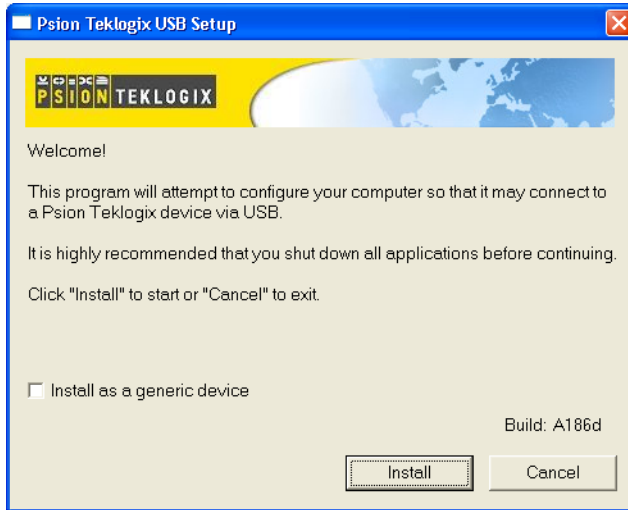


If you check the “Install as a generic device” checkbox, the Hardware Manager on your PC will not prompt you to install every new device you connect to your PC. A generic configuration will be used for the Psion Teklogix devices.

3. Tap on the **Install** button to configure your PC or the **Cancel** button to exit the USB Setup program.

The program checks that ActiveSync is installed and that it is a supported version—3.5 or later. If the version installed on your PC is not supported, you’ll need to exit the USB Setup application, and install a later version of ActiveSync. ActiveSync can be downloaded from Microsoft at:


<http://www.microsoft.com/downloads>

In some cases, you may see an additional dialog:

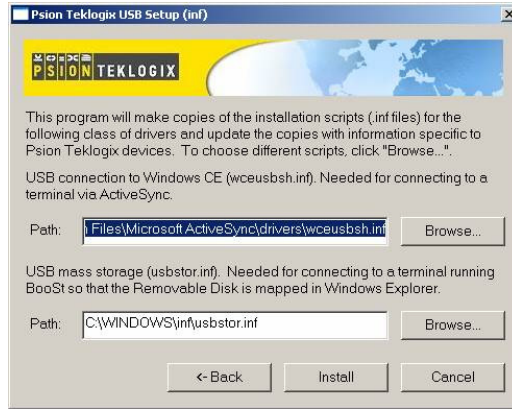

Usually, this dialog is shown when more than one version of ActiveSync is installed. You can either select the correct inf file for the USB Setup program to work with, or you can cancel the installation, and uninstall the extra copies of ActiveSync.

D.1.2 Installation Complete Dialog Box

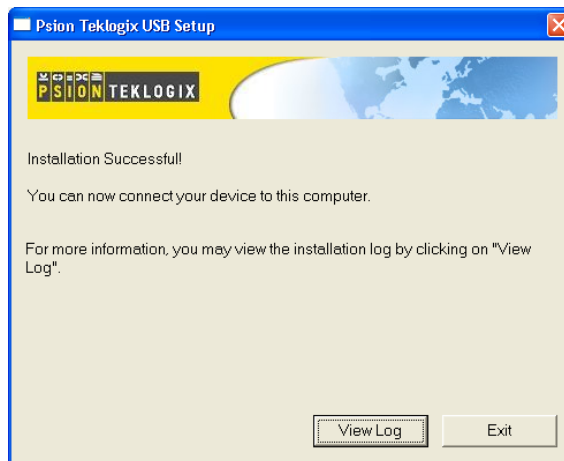

This dialog box indicates the success or failure of the installation.

4. Tap on **Exit** to exit the application.

If you need to view the log file, tap on **View Log**.

Installation Complete Dialog Box

Once the USB Setup program is exited, you can connect the 7535 G2 to your PC using a Portable Docking Module (PDM) (see Section 6.9 on page 224 for more information) and a USB cable, and turn the unit on. If the USB Setup process was successful, the “Found new hardware” wizard may start. If this occurs, choose the recommended defaults. ActiveSync will detect your 7535 G2.

APPENDIX

E

WIRELESS WIDE AREA NETWORK (WWAN)

E.1	Wireless WAN	3
E.1.1	Taskbar Icons	3
E.1.2	Establishing A Connection	4
E.1.2.1	Disconnecting From A Network	5
E.1.2.2	Shutting Down The Wireless WAN User Interface	5
E.1.3	Advanced Information	6
E.1.3.1	Entering A PIN Number	6
E.1.3.2	Error States	7
E.1.4	Tools Menu	8
E.1.4.1	WWAN Data Configuration	8
E.1.4.1	Security Configuration	12
E.1.4.2	Network Configuration	13
E.1.4.3	Driver Mode Configuration	14
E.1.4.1	Modem Information	15
E.1.5	SMS Menu	15
E.2	Power Mode	17

E.1 Wireless WAN

A computer equipped with a GSM/GPRS radio provides wide area networking capabilities, and detailed information is provided here for that functionality. However, those radios are not available in the 7535 G2 at this time.

E.1.1 Taskbar Icons

Wireless WAN icons in the taskbar indicate the status of your wide area network connection. Note that these icons are only visible when a GSM/GPRS radio is installed in the computer, and the interface is enabled.

The letter in the signal strength icon (**G** for GSM/GPRS) indicates that a packet data service is available and initialized. Keep in mind that the signal strength icon is displayed without a letter if packet data service is not available or if it is available but not yet initialized.



User interaction is required (e.g. the user is required to enter a PIN).



A non-recoverable (fatal) error has occurred.



The modem status is unknown or the modem is not connected to any network (the signal strength is 0%).



The modem has found a network, and the signal strength is between 1% and 20%.



The modem has found a network, and the signal strength is between 21% and 40%.



The modem has found a network, and the signal strength is between 41% and 60%.



The modem has found a network, and the signal strength is between 61% and 80%.



The modem has found a network, and the signal strength is between 81% and 100%.



A GPRS packet data connection is active, the signal strength is between 41% and 60% and GSM.GPRS packet service is available.

The signal strength icon is replaced by a connection indicator icon when a packet data connection is started.



A GPRS packet data connection is active.

In addition to the signal strength or connection indicator a second icon may be shown:



A new SMS message has arrived.

E.1.2 Establishing A Connection

To display the main *Wireless WAN* dialog box:

- Double-tap on the **Wireless WAN** icon in the taskbar.

If the icon is not visible in the taskbar, the radio interface has been shut down or the modem has been removed:

- In the *Control Panel*, choose the **Wireless WAN** icon.



Figure E.1 Wireless WAN Icon

The main *Wireless WAN* dialog box is displayed.

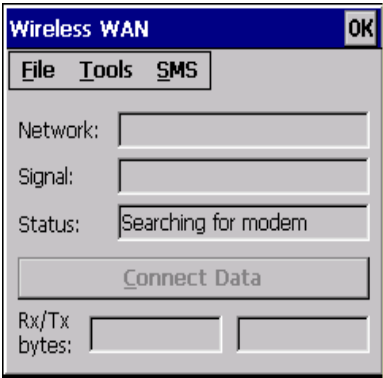


Figure E.2 Establishing A Connection

 Note: If you are prompted to enter a PIN, refer to “Entering A PIN Number” on page 6 for details.

When “Ready to connect” is displayed in the *Status* field, the *Connect Data* button is enabled.

- Tap on the **Connect Data** button.

The progress of the connection is tracked in the *Status* field.

- PPP link to modem active.
- Authenticating user.
- User authenticated.
- Connected.



Note: *Keep in mind that these states may be displayed fairly quickly if the progress of the connection is rapid.*

When the connection state reaches *PPP link to modem active*, the taskbar icon changes to indicate an active connection. The *Connect Data* button changes to *Disconnect*.

E.1.2.1 Disconnecting From A Network

To disconnect from the network:

- Tap the stylus on the **Disconnect** button, and then on **OK**.

When the computer’s network connection is severed, the *Status* field displays “Ready to connect”.

The signal strength is displayed in the main Wireless WAN screen, even while a connection is active. The *Rx bytes* and *Tx bytes* fields estimate the amount of data transmitted and received, respectively.

E.1.2.2 Shutting Down The Wireless WAN User Interface

While it is not usual to shut down the GSM/GPRS user interface, you can accomplish this by tapping on the **File** menu and choosing the **Exit** command at the bottom of the main *Wireless WAN* dialog box



Note: *Once you’ve shut down the user interface, you can only enable the radio by opening the Control Panel and tapping on the Wireless WAN icon to display the Wireless WAN dialog box.*

E.1.3 Advanced Information

In most cases, when a GSM/GPRS radio and SIM are installed in your computer, setup is automatic. Follow the steps outlined under the heading “Establishing A Connection” on page 4 to make a connection. The information in this section is for advanced setup purposes.

E.1.3.1 Entering A PIN Number

If a PIN is required, a PIN entry dialog box is displayed.

- Type your PIN, and press [ENTER].



Note: *If you exceed the number of allowable attempts, a PUK entry window is brought to the foreground. You'll need to enter a new PIN number.*

Once the correct PIN or PUK is entered or if none was required, the modem is instructed to perform a GSM network registration followed by a GPRS attach. The main *Wireless WAN* dialog box reflects the progress of the initialization.

- Searching for modem
- Initializing modem
- SIM is ready
- Searching for network
- Registered on network
- Searching for GPRS
- Ready to connect

If the modem loses the connection to the GSM network, the following states are repeated: *Searching for network*, *Registered on network*, *Searching for packet data*, and *Ready to connect*.

E.1.3.2 Error States

The following temporary error states (i.e., these states may disappear without interaction) may be displayed:

- Emergency calls only.
The modem has found a network but is not allowed to register (e.g. no roaming agreement between networks). The modem keeps searching for another network.
- No network found.
A network is not currently available. The modem continues searching for a network.
- Packet data not available.
The current network does not support a packet data service.
- Packet data not allowed.
The modem is not allowed to use the packet data service on the current network (e.g. no GPRS roaming agreement between network; a roaming agreement for voice may still be in place). It is also possible that you do not have a subscription for GPRS at all.

The remaining error states are permanent:

- SIM is missing.
The SIM card is missing. After the SIM has been inserted a warm boot may be required.
- SIM failure.
The SIM card is permanently disabled (e.g. because the wrong PUK has been entered too many times). A new SIM is needed.
- Modem failure.
The modem did not respond to commands as expected. If a warm boot does not clear this condition, the modem may need to be replaced.
- NDIS error.
An internal software error has occurred. If a warm boot does not clear this condition, Psion Teklogix technical support may need to investigate further.

E.1.4 Tools Menu

The *Tools* menu in the main *Wireless WAN* dialog box offers some additional, advanced setup features.

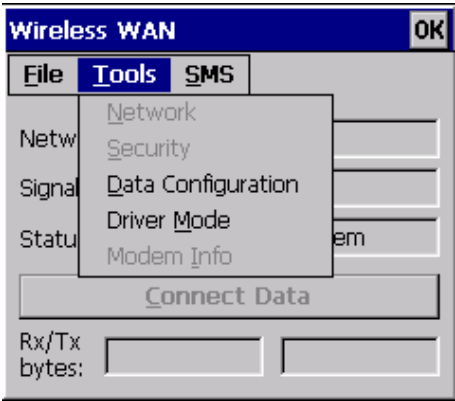


Figure E.3 Tools Menu

E.1.4.1 WWAN Data Configuration

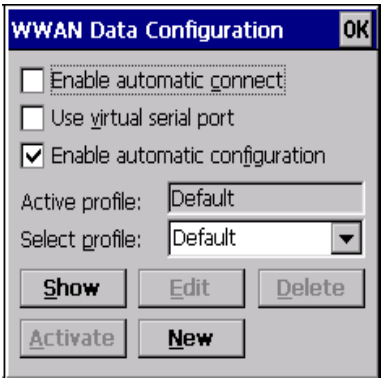


Figure E.4 Data Configuration

Enable Automatic Connect

If the **Enable automatic connect** checkbox is checked (unchecked by default), the Wireless WAN user interface will attempt to establish a GPRS connection whenever GPRS is available (e.g. after resume from suspend without further user interaction).

To activate the automatic connection mode:

- Tap on the **OK** button.

While automatic connection mode is enabled, the *Connect Data* button in the main *Wireless LAN* dialog box changes to *Disable Auto*. To close the currently active connection (if any) and disable the automatic connection mode:

- Tap on **Disable Auto**.



Important: *Automatic connection mode should not be used if applications other than the Wireless WAN user interface (e.g. Connection Manager) are expected to open and close connections.*

If the automatic connection mode is enabled and another application closes the GPRS connection, the WWAN user interface will immediately try to re-establish the connection.

Use Virtual Serial Port

If *Use virtual serial port* is enabled, packet data connections are established through the virtual serial port of the WWAN driver rather than through the WWAN driver directly. This checkbox should **only** be checked if certain third-party VPN (Virtual Private Network) clients are used that do not work correctly otherwise. The default setting is **disabled** (unchecked).



Notes: *The connection setup takes longer through the virtual serial port.*

Enable Automatic Configuration

In most cases, ***the data connection is configured automatically and no user interaction is required.*** This is true even if multiple SIM cards from different operators are used with the same device. The connection parameters are adjusted automatically when a new SIM card is detected (this may require a warm boot). The connection parameters are retrieved from a database.

Manual configuration should be necessary only if:

- One or more parameters in the database are incorrect or a new operator is not yet in the database. (The database should be corrected for subsequent software releases.)
- An operator has assigned individual GPRS user names and passwords.
- A very large site has their own APN. Such connections always have to be configured manually.
- A customer has subscribed for a static IP address. By definition this must be configured manually.

Profiles

In the following section, all the parameters that need to be configured for a connection (such as APN, user name, password, DNS server addresses etc.) are referred to as a profile. Every profile is identified by an arbitrary, unique name. The profile named *Default* is special in that it is always present and can neither be edited nor deleted. (A sample dialog box is presented in Figure E.4 on page 8.) The *Default* profile uses parameters from a built-in database. The home network (the network that issued the SIM) is used for the database look-up. While there can be many configured profiles, only one profile can be active at any time.

If connection profiles are configured manually, the **Enable automatic configuration** checkbox should normally be unchecked.

In one particular use case, manually configured profiles may be combined with automatic configuration. If multiple SIM cards are used with the same device, each SIM card being from a different operator and some or all of them requiring a manually set up profile, automatic configuration may be used to automatically pick the correct manually configured profile for each SIM card. For this to work, each profile must be configured while the corresponding SIM card is inserted in the device and initialized (i.e. the status is at least *SIM is ready*).

The *Select profile*: drop-down list in the data configuration profile selects to which profile a subsequent action applies. A profile named *Default* is always present and contains the current parameters from the database. The following actions are available:

Show

The parameters for the selected profile are displayed when you tap the stylus on this button. For the *Default* profile, the publicly known password is shown—otherwise, the password is hidden.

Edit

The parameters of the selected profile can be edited when you choose the **Edit** button. Keep in mind that you *cannot* edit the **Default** profile.

Delete

The selected profile is deleted. You *cannot* delete the *Default* profile.

Activate

When this button is chosen, the selected profile becomes the active profile. Activation is possible only if the **Enable automatic configuration:** checkbox is unchecked.

New

Tapping on the **New** button allows you to create a new profile.

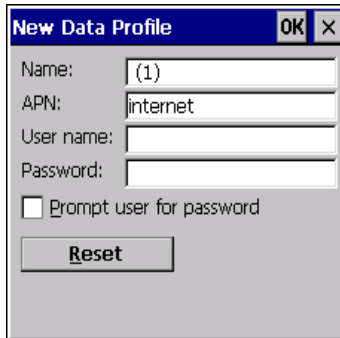


Figure E.5 Creating A New Profile

The name of the newly created profile must be different from all existing profiles. Also, the name cannot be *Default*. When the **New Data Profile** dialog box is opened, a proposal for a unique name is filled in the corresponding entry field. If a manually configured profile has a secret password and unauthorized access to the device is a concern even after the SIM PIN has been entered, the password should not be entered in the *New Data Profile* dialog box and the **Prompt user for password** checkbox should be checked instead. In this case, you will be prompted for the password each time a connection is initiated (the **Connect Data** button in the main *Wireless WAN* dialog box is selected).

Reset

The *Reset* button in the *New Profile* and *Edit Profile* dialog boxes resets all entry fields to the values they had when the dialog box was opened.

Advanced IP

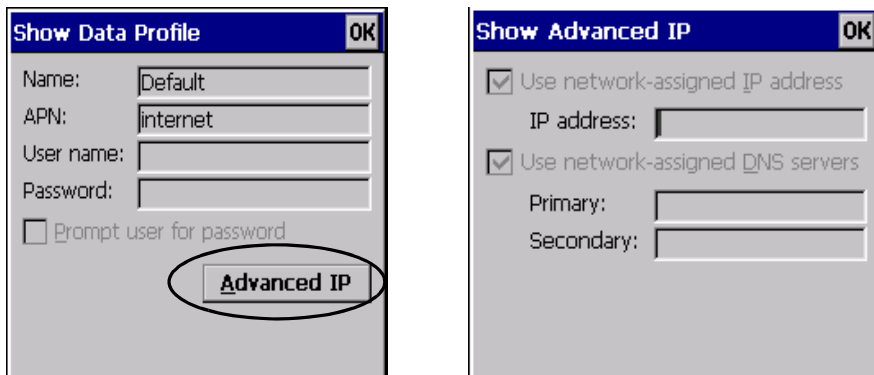


Figure E.6 Assigning IP Information

The **Advanced IP** button in the *Show Profile* and *Edit Profile* dialog boxes opens another dialog box that allows you to configure a static IP address as well as the IP addresses for the primary and secondary DNS server.

E.1.4.1 Security Configuration

The **Security Configuration** dialog box is accessed through the *Tools* menu. The **Security Configuration** dialog box allows you to enable, disable and change the PIN. You will need the current PIN to make any of these changes. The PIN must be enabled in order to be changed. (If the PIN is disabled, the *New PIN* entry field is greyed out.)



Note: *Keep in mind that some network operators do not allow the SIM PIN to be disabled. A new PIN must consist of 4 to 8 numeric digits.*

The *Require PIN on resume* checkbox is independent of the aforementioned settings. By default, this checkbox is unchecked. While this option remains unchecked, any PIN entered on startup or through the *Security Configuration* dialog box and submitted successfully to the modem is stored in memory for as long as the device is not rebooted. This stored PIN is then used without further user interaction whenever the modem requires a PIN (such as resume after suspend or modem removal). The stored PIN is also automatically entered in the *Current PIN* text box whenever the *Security Configuration* dialog box is called up.

If unauthorized access to the device is a concern, the **Require PIN on resume** checkbox should be checked. In this case, the PIN is not stored; whenever a PIN is required, you will be prompted to enter an appropriate value.

E.1.4.2 Network Configuration

In the main Wireless WAN window:

- Tap on the **Tools** menu, and choose **Network**.

By default the GSM radio modem automatically chooses from the available and allowed networks (allowed networks are the home network and all other networks with which the home network has a roaming agreement). You may find there are some situations in which you want to override this default behaviour. For example, you may want to disable roaming if you find yourself in a border area where the home network is not available but a foreign roaming partner is available. Abroad, you may find that an available network does not have GPRS roaming agreements. In this case, you'll need to manually select the network which you know to support GPRS roaming.

Automatic network selection is enabled or disabled by checking or unchecking **Enable automatic network select** in the *Network* dialog box. When automatic network selection is disabled, you must select a network manually.

Available networks can also be viewed without changing any settings. Scanning for available networks is a lengthy operation—a progress bar is shown while the scan is active. For every network that is found, the network name, country, status and numeric network identifier (MCC/MNC, Mobile Country Code followed by the Mobile Network Code) is displayed.



Notes: *Your home network operator will need to let you know which other networks have roaming agreements. Even when a network is listed with an 'Available' status, it does not necessarily follow that it can be used or that the roaming agreement covers GPRS.*

A status of 'Forbidden' indicates that the network cannot be used. If you choose a network that is not covered by a roaming agreement, the status in the main WWAN dialog box changes to 'Emergency calls only', 'No network found', 'GPRS not available' or 'GPRS not allowed'.

E.1.4.3 Driver Mode Configuration

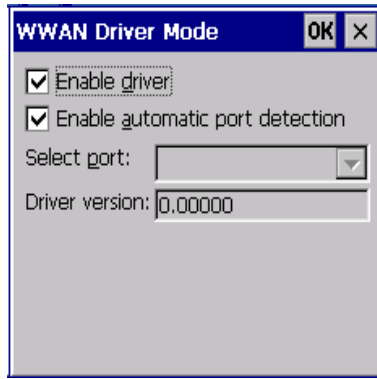


Figure E.7 Driver Mode

By default, the Wireless WAN driver is enabled (the **Enable driver** checkbox is checked). The driver must be disabled in order to use the modem for anything other than GPRS (e.g. dial-up data, fax, or in order to manually submit AT commands to the modem for development, testing, approvals, etc.). If the *Enable driver* checkbox is not checked, the driver is shut down as soon as the **OK** button in the *Driver Mode* dialog box is chosen.

If, on the other hand, the Wireless WAN driver is not running and the **Enable driver** checkbox is checked, the Wireless WAN driver is started as soon the *Driver Mode* dialog box is closed using the **OK** button.



Note: *When the driver is not running, no network status or signal strength can be displayed.*

Since all currently supported GSM modems are automatically detected, the **Enable automatic port detection** checkbox should always be checked. If this checkbox is not checked, a serial port can be selected manually. This experimental feature allows the driver to be used with an internal GSM modem that was not recognized by the automatic detection or an external GSM modem connected to a serial port of the computer through USB or through Bluetooth. An external modem connected to a serial port must support 115.2kbit/s, 8bit, no parity and hardware flow control.

E.1.4.1 Modem Information

The fields in this dialog box cannot be edited, they only display information about the computer's modem. If the network operator has not programmed a user's phone number into his SIM, the *Phone:* field remains empty. If the main menu shows an error status, at least partial modem information may be available.

E.1.5 SMS Menu

SMS functions are accessed through the *SMS* menu. For modems that support a SIM card, the SIM initialization typically takes longer than the network initialization, resulting in a noticeable delay before the SMS functions become available.



Figure E.8 SMS Menu

New

Tapping on the **New** button opens a dialog for sending a new SMS message. The recipient's phone number (to be entered in the *To:* field) can consist of the digits 0 through 9, as well as the * and # characters, optionally preceded by one + character, indicating an international number (i.e. the country code follows immediately after the + character).

By checking the *Store message in Outbox* field a new message can be stored in the Outbox before being sent. If no storage space is available, or the modem does not support the storage of outgoing messages, then this checkbox is disabled.

Inbox

Tapping on the **Inbox** button opens the list of received messages. Reading 50 messages, for example, from the SIM can take about 30 seconds. By default the list of messages is sorted with the most recently received message first. The list can be sorted by any other column by clicking on the corresponding column heading. Clicking the same column heading twice reverses the sort order. Pressing any letter or digit moves the highlight to the next message whose address begins with that letter or number.



Note: *The date and time formats can be changed through the Region and Language menu in Control Panel. For a new date or time format to take effect the Inbox has to be closed and re-opened.*

The *Open* button opens the selected message in a new window such that the entire message can be read including the original formatting (line breaks are replaced by spaces in the Inbox message list). Pressing the **Reply** button opens the new message dialog as described above, except the destination phone number is filled in already.

Outbox

Tapping on the **Outbox** button opens the list of sent messages. Otherwise the *Outbox* behaves exactly as the *Inbox* described above. The date and time when a message was sent is not available for GSM modems.

SMS Configuration

Tapping on the **SMS Configuration** button opens the SMS configuration dialog. The SMS Centre address follows the same rules as the recipient's phone number in the *New* message dialog. The message validity period parameter is sent to the SMS Centre with each message sent subsequently and instructs the SMS Centre on how long it should attempt to deliver the message to the recipient (the SMS Centre may impose an upper limit on the validity period regardless of the setting).



Note: *Only certain discrete validity period values can be sent and thus the validity period is rounded to the nearest allowed value. The next time the SMS configuration dialog is opened the rounded value is shown.*

The user interface tries to keep the SMS storage location available for a new incoming message if the *Delete oldest message when full* checkbox is checked. In this case, when a new message arrives and the SMS storage becomes full, the oldest received message is deleted. If any string is entered as the *Message Suppression Prefix*, then messages beginning with that string will not be shown in either the

Inbox or *Outbox*. In this way messages intended for another application running on the same device can be hidden from the user, as long as those messages begin with the string configured here.

E.2 Power Mode

The power mode of the modem is controlled through the *Power* menu in the Control Panel (not through the Wireless WAN user interface).

For CF Card modems, the settings are found under the *Devices* tab. If the checkbox for a modem is unchecked then no power is applied to the modem and no driver is loaded (neither the serial port driver nor the Wireless WAN driver). If the checkbox is checked then power is applied to the modem and the drivers are loaded when the computer is turned on. Power is removed from the modem when the computer enters suspend mode.

INDEX

A

Accepted Start Char 173

accessories

bar code readers, connecting 213

hand strap 15

picker cradle 227

pistol grip 17

Active Conn Tab 122

ActiveSync

ASync profile 118

Adaptive Windowing 189

adaptor cables, tether 233

Addendum 149, 150, 151, 177

Addendum (UPC/EAN bar codes) 190

Addendum Add-on 2 178

Addendum Add-on 5 178

Addendum Security 178

Ad Hoc network 21

Advanced (wireless connection) 26

AIAG

AIAG Strip 146

AIAG Strip 146

Aim Duration 156

aiming dot, duration of 145, 155, 187

ALT Key 36

ANSI

transmitting data 147, 150

appearance (display colour scheme) 92

appending to bar codes

characters 147, 150, 195

approvals, 7535 G2 (including scanner)
238

arrow keys

moving the cursor 36

ASCII

Full Ascii 146, 172

audio indicators

adjusting volume 49

description of beep conditions 49

volume adjustment using the BLUE
key 49

Authentication, Bluetooth Controls 119

authentication, network (Shared Mode) 22

Auto Exposure (Imager) 188

Aztec 194

B

backlight

display 90

intensity 42

keyboard 41

backup profile, creating (Total Recall) 131

backup profile, restoring (Total Recall)
136

Bad Scan Beep 196

bar code

appending to 147, 150, 195

connecting bar code reader 213

decodes required 145

decoding edge-to-edge 145

displaying type of bar code 195

external bar code reader 213

parameters 143–194

prefix character 147, 149

Security 145

stripping characters 147, 150

suffix character 147, 149

symbolologies

Codabar 152, 165, 178, 191

Code 11 152, 180

Code 128 147, 161, 190

Code 39 146, 190

Code 93 152, 166, 179, 191

Discrete 2 of 5 154, 168, 182

EAN 13 148, 162, 175

EAN 8 150, 162, 176

IATA 2 of 5 154

Interleaved 2 of 5 153, 167, 180,
191

Matrix 2 of 5 181

MSI Plessey 153, 167, 181

UPC A 150, 163, 176

UPC E 151, 163, 177

bar code reader

Index

- applications 241
- external (specs) 240
- external scanner, operation of 213
- integrated scanner, operation of 50
- internal or integrated 241
- Barcodes Must Decode** 187
- batteries
 - capacity dialog box 104
 - charge, time required 214
 - charge cycles 214
 - chargers 33
 - charging 13
 - gauge 47
 - installing 32
 - installing in 7535 G2 14
 - power saving scheme dialog box 105
 - removing 32
 - run time, maximizing 56
 - safety precautions xxiv
 - specifications 256
- battery charger
 - safety instructions xxvi–xxvii
- battery pack 214
- battery safety xxiv–xxvii
- battery *See also* batteries 214
- Baud** 199, 201, 202
- beeper
 - adjusting volume 49
 - description of beep conditions 49
 - volume adjustment using the BLUE key 49
- Bi-Direction Redundancy** 157
- BKSP (DEL Key) 36
- Bluetooth radio
 - changing device name 122
 - device service profiles 118
 - ISM band 116
 - PINs for devices 119
 - radio configuration 116–129
- Bluetooth setup 116
 - GPRS setup 123
 - peripherals 227
- Bluetooth specs 239
- BooSt
 - console (cold reset) 28
- Bright For** (backlight) 91
- BSP**, Bluetooth Controls 123
- C**
 - cable diagrams C-1
 - cables, tether adaptor 233
 - calibrating (touchscreen) 42, 110
 - Captures Per HW Trigger** 188
 - Center Barcode Only (Imager)** 186
 - CH**, Bluetooth Controls 119
 - changing password (Start Menu security) 71
 - characters
 - appending to bar codes 147, 150
 - prefix 147, 149
 - stripping 147, 150
 - suffix 147, 149
 - charger
 - descriptions of 33
 - safety instructions xxvi–xxvii
 - charging (battery) 13
 - Check Digit** 153
 - check digit 149, 151, 153, 154, 168
 - Check Digit, One** 154, 168
 - Check Digits (MSI Plessey)** 168
 - Check Digit Verification** 160, 173, 175, 180, 182, 183
 - Check Digit Verification (Codabar)** 179
 - Check Digit Verification (I 2 of 5)** 167
 - Click Data** (scanner double-click) 195
 - Click Time** (scanner double-click) 195
 - CLSI Editing** 166
 - CLSI Library System** 179
 - Codabar 152, 165, 178, 191
 - Codabar** 165
 - Code 11 152, 180
 - Code 128 147, 190
 - Code 128** 161, 174
 - Code 128 Emulation** 169, 183
 - Code 32, Convert To** 159
 - Code 32 Prefix** 159
 - Code 39 146
 - Code 39** 159, 172
 - Code 93 152, 166, 179, 191
 - Code 93** 166
 - cold reset 28
 - Cold Reset (Shutdown menu) 77
 - COM**, Bluetooth Controls 123
 - Command Prompt 72
 - Communities** 205
 - Composite** 170, 194
 - configuring IEEE 802.11g radio 18
 - connection list table, Bluetooth Controls 122
 - Console Port (COM3) settings 200

- Console Port settings
 - Baud** 201, 202
 - Data Bits** 201, 202
 - Parity** 201, 202, 203
 - Stop Bits** 201, 202, 203
 - Constant Illumination** 190
 - Contact** 204
 - Continuous Scan Mode** 156, 172, 186
 - contrast, adjusting 42
 - contrast, adjusting display 42
 - control panel
 - accessing 83
 - basic setup 89
 - Display Properties 89
 - icons 85
 - keyboard properties 93
 - power management properties 104
 - stylus properties 109
 - Conv. UPC-E To UPC-A** 164
 - Conv. UPC-E1 To UPC-A** 164
 - Convert To Code 32** 159
 - Convert To EAN 13** 167, 176
 - Convert To UPC -A** 177
 - Convert to UPC-A** 151
 - country code 148
 - cradle *See also* Picker cradle 227
 - CTRL Key 36
 - cycle tasks 74
- D**
- data
 - entering
 - with a bar code reader 213
 - Data Bits** 200, 201, 202
 - decoded (internal) scanner parameters 155
 - decoded Intermec (ISCP) parameters 171
 - decoded scanners 144
 - Decode Performance** 161
 - Decode Performance Level** 161, 162
 - Decoder Timeout** 189
 - decode zones (internal scanners) 245
 - decoding bar codes
 - decodes required 145
 - Security** 145
 - 2-D scanner 245
 - Default Dev. On Reboot** 187
 - DEL (BKSP) Key 36
 - Delete Char Set ECIs** 159
 - Demo
 - Imager 72
 - Scanner 72
 - Signature 72
 - desktop connection, remote 83
 - Device Name**, changing 122
 - dialog box, using 77
 - Diff Read Timeout** 172
 - digit
 - check digit 149, 151, 153, 154, 168
 - number system 151
 - Dim For** (backlight) 91
 - Discrete 2 of 5 154, 168, 182
 - Discrete 2 of 5** 168
 - dismounting partitions 139
 - display
 - appearance (colour scheme) 92
 - backlight 90
 - backlight, adjusting 42
 - contrast (control panel) 90
 - contrast, adjusting 42
 - Display Properties 89
 - display contrast, adjusting 42
 - Display Properties 89
 - docking device icons 48
 - docking station
 - uploading data using 58
 - Dot Time** 145, 155, 187
 - double-click
 - appending characters to a decoded bar code 195
 - scanner trigger 195
 - Double-Click**, Manage Triggers menu 112
 - Double-Tap (stylus settings) 109
 - DSSS, 802.11g radio 239
 - DUN service, Bluetooth 118
- E**
- EAN/UCC 128** 148, 161
 - EAN 128** 174
 - EAN 128 Identifier** 174
 - EAN 13 148, 162, 175
 - EAN 8 150, 162, 176
 - EAN-8 Zero Extend** 162
 - EAP (Extensible Authentication Protocol) 23
 - ECI Decoder** 159
 - Enable Bookland (UPC-EAN)** 164
 - Enable Bookland EAN** 148
 - Enable CC-AB** 171
 - Enable CC-C** 171
 - Enable Plessy** 181

Index

Enable RSS Expanded 170, 185
Enable RSS Limited 170, 184
Enable RSS-14 170, 184
Enable SNMP 205
Enable TLC-39 171
Encryption, Bluetooth Controls 119
Encryption, 802.11 wireless properties 21
Error Accept 146
ESC Key 37
EV15 1D imager scanner specs 241
Extensible Authentication Protocol (EAP)
23

F

Fast Converge (Imager) 188
features, 7535 G2 6
fields
 Field Size 147
 size 147
FNC1 Conversion 174
formatting
 entire memory card 136
 partitions 139
Full Ascii 146, 172
Full ASCII (decoded scanner) 161
Function Keys
 36-key keyboard 38
 58-key keyboard 37

G

Good Scan Beep 196
GPRS (bluetooth) 123
GSM/GPRS E-3-E-15
GTIN Compliant 174, 178

H

hand strap, installing 15

I

IATA 2 of 5 154
IEEE radio, configuring 18
imager
 EV15 1D imager scanner specs 241
 SX5303 2D imager specs 250
imager (2D) scanner
 scanning
 2D 53
imager parameters 186
Include Check 149, 151, 154, 155

Include Check (Discrete 2 of 5
 symbology) 154
Include Check (Interleaved 2 of 5
 symbology) 153
Include Chk 146, 151, 152
Include Country 148
Include Number Sys 151
Include Sym (Code 128) 148
indicators
 battery gauge 47
 docking devices 48
 LED functions 44
 modifier keys 47
 onscreen 46
 scanner message 52, 53, 54
 security level 48
 task bar 67
 tethered device 48
 Wireless WAN 49
 802.11radio signal quality 48
Infrastructure network 21
Input 197
input
 bar code reader 213
Input Panel (control panel) 85
installation
 hand strap 15
 pistol grip 17
integrated scanner option 50
Intensity (7035 backlighting) 91, 94
Interleaved 2 of 5 153, 167, 180, 191
Intermec EV15 specs 241
Internet Explorer 72
IP address, assigning 24
ISBN Conversion 175
ISBT Concat Any Pair 175
ISBT Concat Transmit 174
ISBT 128 161, 174
ISM band, Bluetooth radio 116
ITF Check (Discrete 2 of 5 symbology)
154
ITF Check (IATA 2 of 5 symbology) 155
ITF Check (I 2 of 5 symbology) 153
I 2 of 5
 Short Code 145

K

keyboard
 key repeat 93, 94
 one shot mode 95

- 36-key keyboard 40
- 58-key 39
- keyboard backlight 41
- keyboard keys 35
 - ALT 36
 - arrow keys 36
 - BKSP 36
 - CTRL 36
 - DEL 36
 - ESC 37
 - function keys, accessing 37
 - macro keys 38, 96
 - modifiers 35
 - navigating using the keyboard 63
 - one shot mode 95
 - SCAN 37
 - SHIFT 36
 - SPACE 37
 - TAB 37
- Keyboard Properties 93, 94
 - backlight 94
 - one shot mode 95
- Key Index, assigning 23
- Key Repeat tab 93
- keys
 - alpha keys, 36-key keyboard 40

L

LANAccessUsingPPP service, Bluetooth 118

Laser On Time 156, 171

LED

- charge 45
- functions 44
- receive 45
- scan 46
- transmit 45

Length Mode 179, 181, 183

Linear Decode 165

Linear Security Level 157

Lithium-Ion batteries

- installing 32
- removing 32

Location 204

Low Power Timeout 156

L1, Set Length 160

L2, Set Length 160

M

Macro keys

- accessing 38

- executing a macro 98

- Macros menu, accessing 96

- recording and saving 96

- 36-key keyboard 39

- 58-key keyboard 38

maintenance 58

Manage Triggers 110

Matrix 2 of 5 181

Max Gain (Imager) 189

Max Illumination (Imager) 189

Max Integration (Imager) 189

Max Number Barcodes 186

memory card

- creating partitions 137

- formatting entire 136

- formatting partition 139

messages

- Scan Indicator** 195

- scanner warning message 195

- Scan Result** 195

Minimum Cancel Time 156, 172

Minimum Length 173, 175, 179, 180, 181, 182, 185

Min Scan Duration 188

modem using VPN clients E-9

modifier keys 35

- locking 35

- One Shot Mode** 95

- unlocking 35

Mod 10 Check 146, 154

Mod 10 Check (Discrete 2 of 5

- symbology) 154

Mod 10 Check (I 2 of 5 symbology) 153

Mod 43 Check 146

mounting partitions 140

MSI Plessey 153, 167, 181

N

Name 206

name servers, assigning 25

network

- Ad Hoc 21

- connection, monitoring 57

- infrastructure 21

network authentication (Shared Mode) 22

Network Key, assigning 22

NOTIS Editing 166

NQuery Retry, Bluetooth Controls 123

number system digit 151

Index

O

OFDM, 802.11g radio 239
Off & On buttons 13, 34
On & Off button 13, 34
One Check Digit 154, 168
one dimensional internal scanner 52
One Shot Mode 95
ON Threshold 91, 94
Output 197

P

Parameter Scanning 156, 172, 173, 174,
175, 178, 179, 180, 181, 182, 185
Parity 200, 201, 202, 203
partitions
 creating 137
 deleting 139
 dismounting 139
 formatting 139
 management 138
 mounting 140
PDF internal scanner
 scanning
 PDF internal 53
picker cradle 227
 installing cable 229
 powered 10-55 VDC 227
 powered 12 VDC 227
 unpowered 227
picker cradle *See also* Picker Cradle 227
PIN, Bluetooth Controls 118
pinouts C-1
PINs, Bluetooth devices 119
pistol grip, installing 17
Plessy Transmit Check Digit 182
pocket PC compatibility 83
port pinouts C-1
Port Prefix, Bluetooth Controls 123
Port Replicator Tether (COM6) settings
 201
Port Replicator 9-pin (COM5) settings 202
ports
 internal scanner 240
ports parameters 198
Postal
 PlaNET 192
 PostNET 192
 Royal 192
Power Management Properties 104
 battery capacity 104

 scheme, power saving 105
PowerScan® LR and XLR specs 252
PowerScan® standard range specs 254
Power Scheme 105
power up 13
preferred networks 26
Prefix 158
Prefix Char 147, 149
Printer (serial service), Bluetooth 118
profile, creating backup 131
profile, restoring backup 136
Programs
 Command Prompt 72
 Internet Explorer 72
 Remote Desktop Connection 72
 Windows Explorer 72
punctuation marks, accessing (SHIFT
 Key) 36

R

radio
 adding new network connection 20
 advanced settings of 26
 Bluetooth 116–129
 Bluetooth specs 239
 Configure button 20
 configuring 18
 adding a new network connection
 20
 Ad Hoc 21
 authentication, network 22
 Configure button 20
 Connect button 20
 EAP (Extensible Authentication
 Protocol) 23
 Infrastructure 21
 Key Index 23
 Key Index, assigning 23
 network authentication 22
 Network Key 22
 Network Key, assigning 22
 wireless information 20
 wireless properties 21
 802.1X authentication 23
Connect button 20
IP address, assigning 24
name servers 25
preferred networks, arranging 26
specifications 239
wireless connection, setting up 18

- 802.11g Direct Sequence SS 239
 - 802.11signal quality 48
 - radio specifications 239
 - Raster 158
 - Raster Expand Rate** 158
 - Raster Height** 158
 - RD7950 integrated UHF RFID reader *B-1*
 - read and write distance *B-12*
 - specifications *B-11*
 - Reading Range** 173, 175, 178, 180
 - recalibrating (touchscreen) 42, 110
 - receive LED 45
 - remote connect 83
 - Remote Desktop Connection 72
 - Repeat Delay** (between key repeats) 94
 - Repeat Rate** (of key repeats) 94
 - Repeat tab (key repeat settings) 93
 - resetting the 7535 G2
 - cold reset 28
 - warm reset 28
 - RFID
 - applications 240
 - integrated UHF RFID Reader (RD7950) *B-1*
 - RD7950 *B-1*
 - RD7950 read and write distance *B-12*
 - Rights** 206
 - RSS Code** 170, 184, 191
 - Run (Start Menu) 76
- S**
- safety instructions
 - battery charger *xxvi-xxvii*
 - scanner 50
 - safety warning, scanner 50
 - Same Read Timeout** 172
 - Same Read Validate** 172
 - Scan Data Format** 158
 - Scan Indicator** 195
 - SCAN Key 37
 - Scan Log File** 196
 - scanner
 - Accepted Start Char** 173
 - Adaptive Windowing** 189
 - Addendum** 149, 150, 177
 - Addendum Add-on 2** 178
 - Addendum Add-on 5** 178
 - Addendum Security** 178
 - Aim Duration** 156
 - aiming (target) dot duration 145, 155, 187
 - aiming dot duration 156
 - appending data 195
 - Auto Exposure (Imager)** 188
 - Aztec** 194
 - Bad Scan Beep** 196
 - bar code, appending data to 195
 - bar code applications 241
 - Barcodes Must Decode** 187
 - Bi-Direction Redundancy** 157
 - Captures Per HW Trigger** 188
 - Center Barcode Only (Imager)** 186
 - Check Digit** 153
 - check digit 149
 - Check Digits (MSI Plessey)** 168
 - Check Digit Verification** 160, 167, 173, 175, 179, 180, 182, 183
 - Click Data** (appending data) 195
 - Click Time** (double-click) 195
 - CLSI Editing** 166
 - Codabar** 165
 - Code 128** 161, 174
 - Code 128 Emulation** 169, 183
 - Code 32 Prefix** 159
 - Code 39** 159, 172
 - Code 93** 166
 - Composite** 170, 194
 - Constant Illumination** 190
 - Continuous Scan Mode** 156, 172, 186
 - Conv. UPC-E To UPC-A** 164
 - Conv. UPC-E1 To UPC-A** 164
 - Convert To Code 32** 159
 - Convert To EAN 13** 167, 176
 - Convert To UPC -A** 177
 - country code 148
 - decoded 144
 - decoded (internal) 155
 - decoded Intermec (ISCP) 171
 - Decode Perf. Level** 161, 162
 - Decode Performance** 161
 - Decoder Timeout** 189
 - Default Dev. On Reboot** 187
 - Delete Char Set ECIs** 159
 - Diff Read Timeout** 172
 - Discrete 2 of 5** 168
 - Dot Time** 155, 187
 - double-click 195
 - EAN 128** 174
 - EAN 128 Identifier** 174
 - EAN-8 Zero Extend** 162
 - ECI Decoder** 159
 - Enable Bookland** 164

Index

- Enable Bookland EAN** 148
- Enable CC-AB** 171
- Enable CC-C** 171
- Enable Plessy** 181
- Enable RSS Expanded** 170, 185
- Enable RSS Limited** 170, 184
- Enable RSS-14** 170, 184
- Enable TLC-39** 171
- EV15 1D imager scanner specs** 241
- Fast Converge (Imager)** 188
- FNC1 Conversion** 174
- Full ASCII** 161
- Good Scan Beep** 196
- GTIN Compliant** 174, 178
 - imager 186
- Include Check** 151, 153
- Include Check Digit** 154
- Include Number Sys** 151
- Input (translate)** 197
 - integrated 241
- Intermec EV15 specs** 241
- ISBN Conversion** 175
- ISBT Concat Any Pair** 175
- ISBT Concat Transmit** 174
- ISBT 128** 174
- Laser On Time** 156, 171
- Length Mode** 179, 181, 183
 - Library System 179
- Linear Decode** 165
- Linear Security Level** 157
- Low Power Timeout** 156
- Max Gain (Imager)** 189
- Max Illumination (Imager)** 189
- Max Integration (Imager)** 189
- Max Number Barcodes** 186
- Minimum Cancel Time** 156, 172
- Minimum Length** 173, 175, 179, 180, 181, 182, 185
- Min Scan Duration** 188
- NOTIS Editing** 166
- One Check Digit** 154, 168
 - one dimensional (1D) internal scanner 52
- Output (translate)** 197
- Parameter Scanning** 156, 172, 173, 174, 175, 178, 179, 180, 181, 182, 185
- PDF internal scanner dimensional (1D)** 53
- Plessy Transmit Check Digit** 182
 - ports parameters 198
 - Console Port (COM3) 200
 - Port Replicator Tether (COM6) 201
 - Port Replicator 9-pin (COM5) 202
 - Tether Port (COM1) 199
- Postal**
 - PlaNET 192
 - PostNET 192
 - Royal 192
- PowerScan® LR and XLR specs** 252
- PowerScan® standard range specs** 254
- Prefix** 158
- Prefix Char** 147, 149
- Raster Expand Rate** 158
- Raster Height** 158
- Reading Range** 173, 175, 178, 180
 - removing characters 147, 150
- RSS Code** 170, 184, 191
 - safety warnings 50
- Same Read Timeout** 172
- Same Read Validate** 172
- Scan Data Format** 158
- Scan Indicator** 195
- Scan Log File** 196
- Scanning Mode** 158
- Scan Result Time** 195
- Security** 145
- Security Level** 165
- Set Length L1** 160
- Set Length L2** 160
- SE 1200 Advanced LR specs** 244
- SE 1200 HP specs** 243
- SE 1200 LR specs** 243
- SE 1524 ER specs** 248
- SE 2223 PDF specs** 244
- Short Code** 145
- Soft Scan Timeout** 196
 - specifications, external 252
 - specifications, internal 241
- Start/Stop Transmit** 178
- Start/Stop Transmit** 173
- Strip Start/Stop Chars** 152
- Strip Trailing** 150
- Suffix** 158
- Suffix Char** 147, 149
- Supp. Redundancy** 165
- Supplementals** 164
- SX5303 2D imager specs** 250
 - target dot duration 145, 155, 187
 - techniques (scanning) 51
- TekImager Enabled** 186
- Telepen** 185
- Transmit Check Digit** 160, 167, 173, 175, 176, 177, 179, 180, 181, 182, 183

- Transmit Check Digit (MSI Plessey)** 168
- Transmit Code 1D Char** 158
- Transmit Number System** 176, 177
- Trioptic Code 39, Enable** 159
- troubleshooting tips 52
- two dimensional (2D) imager scanner 53
- UPC-A Check Digit** 163
- UPC-A Preamble** 163
- UPC-EANI** 164, 190
- UPC-EAN Shared Settings** 177
- UPC-E Check Digit** 163
- UPC-E Preamble** 164
- UPC-E1 Check Digit** 163
- UPC-E1 Preamble** 164
- Verify** 145
- warning message 195
- Window Height** 187
- Window Width** 187
- 2D Codablock** 184
- 2D Data Matrix** 193
- 2D Maxicode** 193
- 2D Micro PDF-417** 169, 183, 193
- 2D PDF-417** 169, 183, 193
- 2D QR Code** 193
- 2D UPC Half Block Stitching** 165
- scanning
 - appending characters 147, 150, 195
 - decode zones 245
 - removing characters 147
 - safety instructions 50
 - symbolologies 143
 - 1D internal 52
- Scanning Mode** 158
- Scan Result** 195
- Scan Result Time** 195
- screen
 - stylus, using to navigate 63
 - touch pen, using 63
 - Windows CE, navigating 63
- Security** 145
- Security Level** 165
- security level icon 48
- Security Settings 70
 - changing password 71
 - configuring taskbar 71
 - level 70
 - Supervisor 70
 - Teklogix 70
 - User 70
- Servers, Bluetooth Controls** 120
- Services, Bluetooth Controls** 118
- Set Length L1** 160
- Set Length L2** 160
- Set PIN, Bluetooth Controls** 119
- Settings
 - Control Panel 75
 - Network and Dial-up connections 75
 - Run 75
 - Taskbar and Start Menu 75
- SE 1200 Advanced LR specs 244
- SE 1200 HP specs 243
- SE 1200 LR specs 243
- SE 1524 ER specs 248
- SE 2223 PDF specs 244
- Shared Mode (network authentication) 22
- SHIFT Key** 36
- Short Code** 145
- Shutdown
 - Cold Reset 77
 - Suspend 77
 - Warm Reset 77
- Shutdown (Start Menu) 76
- signal quality, 802.11 48
- Simple Network Management (SNMP)**
 - See* **SNMP** 203
- SIP (Soft Input Panel) 85
- size
 - of fields 147
 - Size/Chars** (bar code scanning) 147
- Sled *See* picker cradle. 227
- SMS Configuration** E-16
- SNMP** (Simple Network Management Protocol) 203
 - Communities** 205
 - Contact** 204
 - Enable SNMP** 205
 - Location** 204
 - Name** 206
 - Rights** 206
- Soft Input Panel (SIP) 85
- Soft Scan Timeout** 196
- SPACE Key 37
- specifications
 - battery 256
 - scanner, external 252
 - scanner, internal 241
- specifications, 75235 G2 237
- Standard** (Code 128) 148
- Start/Stop Transmit** 173, 178
- Start Menu 69

Index

- cycle tasks 74
- desktop 70
- programs 72
- Run 76
- Security 70
- Settings 75
- Shutdown 76
- system tray 74
- task manager 74
- Stop Bits** 200, 201, 202, 203
- Strip Leading** 147, 150
- Strip Start/Stop Chars** 152
- Strip Trailing** 147, 150
- stylus (touch pen), using 63
- Stylus Properties 109
 - Double-tap (stylus sensitivity) 109
- Suffix** 158
- Suffix Char** 147, 149
- Supervisor security level 70
- Supp. Redundancy (Code 128)** 165
- Supplementals (UPC-EAN)** 164
- Suspend (Shutdown menu) 77
- Suspend State** 105
- SX5303 2D imager specs 250
- symbolologies
 - IATA 2 of 5 154
- symbolologies, bar code 143
 - displaying type of bar code 195
- system tray 74

T

- TAB Key 37
- target dot, duration of 145, 155, 187
- taskbar
 - onscreen indicators
 - battery gauge 47
 - docking devices 48
 - modifier keys 47
 - security level 48
 - tethered device 48
 - Wireless WAN 49
 - 802.11 radio signal quality 48
 - using 67
- task manager 74
- TekImager Enabled** 186
- Teklogix security level 70
- TekTerm application 83
- Telepen** 185
- tether adaptor cables 233
- tethered device

- connecting and disconnecting 54
- taskbar icons 48
- Tether Port (COM1) settings 199
- Tether Port settings
 - Baud** 199
 - Data Bits** 200
 - Parity** 200
 - Stop Bits** 200
- text conventions 4
- threshold, setting (backlight) 91, 94
- TKIP (Temporal Key Integrity Protocol) 21
- Total Recall
 - backup profile, creating 131
 - backup profile, restoring 136
- touch pen, using 63
- touchscreen
 - recalibration 42, 110
 - stylus, using 63
 - touch pen, using 63
- Transmit Check Digit** 175, 176, 177, 179, 180, 181, 183
- Transmit Check Digit (1 2 of 5)** 167
- Transmit Check Digit (MSI Plessey)** 168
- Transmit Code 1D Char** 158
- transmit LED 45
- Transmit Number System** 176, 177
- trigger, double-click 195
- trigger mappings 111
- triggers, configuring 110
- Trigger Type**, Manage Triggers menu 114
- Trioptic Code 39, Enable** 159
- troubleshooting tips (scanning) 52
- turning 7535 G2 off 13
- turning 7535 G2 on 13

U

- UCC 128(Code 128)** 148
- UHF RFID Reader (RD7950) *B-1*
- UPC A 150, 163, 176
- UPC-A Check Digit** 163
- UPC-A Preamble** 163
- UPC E 151, 163, 177
- UPC-EAN** 164, 190
- UPC-EAN Shared Settings** 177
- UPC-E Check Digit** 163
- UPC-E Preamble** 164
- UPC-E1 Check Digit** 163
- UPC-E1 Preamble** 164
- UPC Half Block Stitching, 2D** 165

- USB Setup Application *D-1*
 - launching *D-3*
- User security level *70*
- Use Virtual Serial Port** *E-9*
- V**
- Variations** (Code 128) *148*
- Verify** *145*
- W**
- warm reset *28*
- Warm Reset (Shutdown menu) *77*
- warnings *195*
- WEP (Wired-Equivalent Privacy) *21*
- Window Height** *187*
- Windows® Start Menu *See* Start Menu *69*
- Windows CE
 - dialog box *77*
 - files, folders, & programs, working with *64*
- Windows CE, navigating in *63*
- Windows Explorer *72*
- Window Width** *187*
- wireless connection setup *18*
- Wireless Information Tab *20*
- Wireless Properties tab *21*
- Wireless WAN *E-3–E-15*
 - SMS Configuration** *E-16*
 - Use Virtual Serial Port** *E-9*
- Wireless WAN icon *49*
- WPA authentication *22*
- WPA-PSK authentication *22*

- 1D internal scanner *52*
- 2D Codablock** *184*
- 2D Data Matrix** *193*
- 2D imager scanner *53*
- 2D Maxicode** *193*
- 2D Micro PDF-417** *169, 183, 193*
- 2D PDF-417** *169, 183, 193*
- 2D QR Code** *193*
- 2D UPC Half Block Stitching** *165*
- 36-key keyboard
 - alpha keys, accessing *40*
 - uppercase letters, creating *40*
- 58-key keyboard *39*
- 7535 G2
 - approvals *238*
 - specifications *237*
- 802.1X authentication, enabling *23*
- 802.11g radio, configuring *18*

