

SPECIFICATION FOR APPROVAL

()	Pre	limi	nary	Spec	ificatio	า

() Final Specification

Titla

Title		17	.U SAGA II	I LCD	
BUYER	General	General		LG.Philips LCD CO., Ltd.	
MODEL			*MODEL	LB190E01	

10 O" SYCA TET LCD

SUFFIX

SL01

SIGNATURE	DATE
/	
/	<u> </u>
/	
Please return 1 copy for yo	ur confirmation

With your signature and comments.

APPROVED BY DATE						
C.S. Kyoung / G.Manager						
REVIEWED BY						
J.D. Kim / Manager						
PREPARED BY						
J.I. Lim/ Engineer						
Product Engineering Dept. LG. Philips LCD Co., Ltd						

^{*}When you obtain standard approval, please use the above model name without suffix



Contents

No		ITEM					
		COVER	1				
		CONTENTS	2				
		RECORD OF REVISIONS	3				
1		GENERAL DESCRIPTION	4				
2		ABSOLUTE MAXIMUM RATINGS	5				
3		ELECTRICAL SPECIFICATIONS	6				
	1)	ELECTRICAL CHARACTERISTICS	6				
	2)	INTERFACE CONNECTIONS	9				
	3)	SIGNAL TIMING SPECIFICATIONS	13				
	4)	SIGNAL TIMING WAVEFORMS	14				
	5)	POWER SEQUENCE	16				
4		OPTICAL SFECIFICATIONS	17				
5		MECHANICAL CHARACTERISTICS	20				
6		RELIABILITY	23				
7		INTERNATIONAL STANDARDS	24				
	1)	SAFETY	24				
	2)	EMC	24				
8		PACKING	25				
	1)	DESIGNATION OF LOT MARK	25				
	2)	PACKING FORM	25				
9		PRECAUTIONS	26				
	1)	MOUNTING PRECAUTIONS	26				
	2)	OPERATING PRECAUTIONS	26				
	3)	ELECTROSTATIC DISCHARGE CONTROL	27				
	4)	PRECAUTIONS FOR STRONG LIGHT EXPOSURE	27				
	5)	STROAGE	27				
	6)	HANDLING PRECAUTIONS FOR PROTECTION FILM	27				




RECORD OF REVISIONS

			
Revision No	Date	Page	Description
Ver 0.0	Mar.30, 2006		First Draft
Ver 0.0 Ver 1.0	Mar.30, 2006 Jun.02.2006	P4,20 P9 P21,22	First Draft Update LCM Weight: 2,570g 2,620g Update Pin Configuration(Pin 25,26) Update Mechanical Drawings



1. General Description

LB190E01-SL01 is a Active Matrix Liquid Crystal Display with an integral Cold Cathode Fluorescent Lamp (CCFL) backlight system. The matrix employs a-Si Thin Film Transistor as the active element. It is a transmissive type display operating in the normally block mode. It has a 19.0 inch diagonally measured active display area with SXGA resolution (1,024 vertical by 1,280 horizontal pixel array), Gray scale or the brightness of the sub-pixel is determined with a 8-bit gray scale signal. It has been designed to apply the interface method that enables low power, high speed, low EMI. FPD Link or compatible must be used as a LVDS(Low Voltage Differential Signaling) chip. It is intended to support applications where thin thickness, wide viewing angle, low power are critical factors and graphic displays are important. In combination with the vertical arrangement of the sub-pixels, the LB190E01-SL01 characteristics provide an excellent flat panel display for Medical (Mono) products such as monitors.

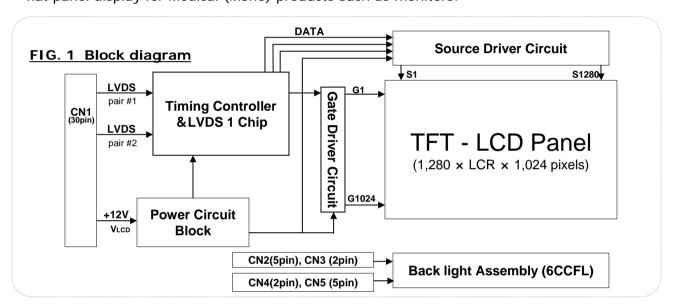

General Features

Active screen size	19.0 inches (481.9mm) diagonal			
Outline Dimension	396.0(H) x 324.0(V) x 20(D) mm(Typ.)			
Pixel Pitch	0.294 (H)mm x 0.294(V)mm			
Pixel Format	1,280(H)X1,024(V)pixels(1pixel consists of 3 sub-pixels (LCR).)			
Interface	LVDS 2Port			
Luminance, white	1,000 cd/m² (Center 1Point, typ)			
Viewing Angle (CR>10)	R/L/U/D:85/85/85/85(Min.)			
Power Consumption	Total 33.85Watt(Typ.), (5.5W@V _{LCD} , 28.35 W@Lamp)			
Weight	2,620g (Typ.)			
Display operating mode	Transmissive mode, normally Black			
Surface treatments	Hard coating (3H), Anti-glare treatment of the front polarizer			



2. Absolute Maximum Ratings

The following are maximum values which, if exceeded, may cause faulty operation or damage to the unit.


Table 1. Absolute Maximum Ratings

Parameter	Symbol	Values		Units	Notes	
rai ametei	Symbol	Min	Max	UTIILS	Notes	
Power Supply Input Voltage	V_{LCD}	-0.3	+14.0	Vdc	At 25	
Operating Temperature	T _{OP}	0	50	°C		
Storage Temperature	T _{ST}	-20	60	°C	1	
Operating Ambient Humidity	H _{OP}	10	90	%RH	I	
Storage Humidity	H _{ST}	10	90	%RH		

Note: 1. Temperature and relative humidity range are shown in the figure below.

Wet bulb temperature should be 39 °C Max, and no condensation of water.

FIG. 2 Temperature and relative humidity

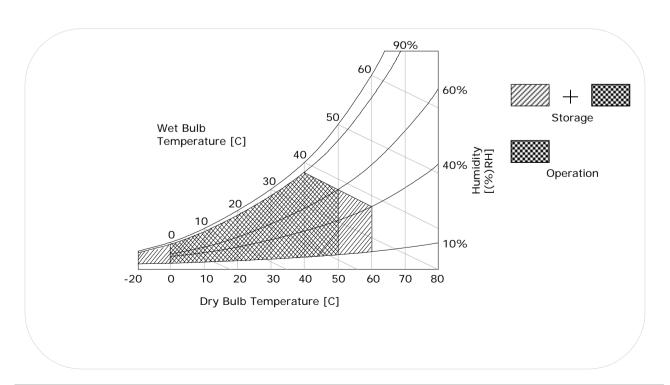



3. Electrical Specifications

3-1. Electrical Characteristics

It requires two power inputs. One is employed to power the LCD electronics and to drive the TFT array and liquid crystal. The second input power for the CCFL/Backlight, is typically generated by an inverter. The inverter is an external unit to the LCDs.

Table 2. Electrical Characteristics

Parameter	Symbol		Values	Unit	Notes		
r di diffictoi	Symbol	Min	Тур	Max		Notes	
MODULE :							
Power Supply Input Voltage	V_{LCD}	10.8	12.0	13.2	Vdc		
Power Supply Input Current	I _{LCD}	-	462	531	mA	1	
Power Consumption	P _{LCD}	-	5.5	6.4	Watt	1	
Inrush current	I _{RUSH}	-	-	3	Α	2	

Note:

- 1. The specified current and power consumption are under the VLCD=12.0V, $25 \pm 2^{\circ}\text{C}$, f_V =60Hz condition whereas mosaic pattern(8 x 6) is displayed and f_V is the frame frequency.
- 2. The duration of rush current is about 2ms and rising time of power Input is 500us \pm 20%.

FIG.3 Mosaic pattern for power consumption measurement

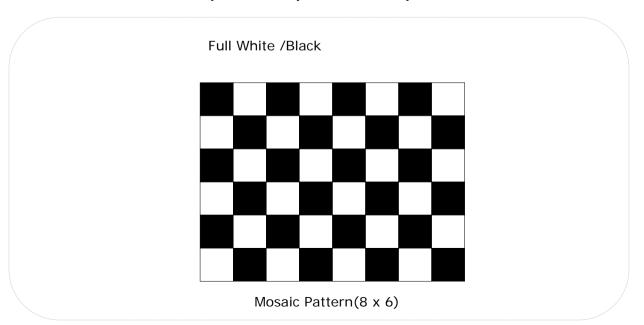




Table 3. Electrical Characteristics

Parameter		Sym	Sym Values				Notes
	arameter	bol	Min	Тур	Max	Unit	Notes
LAMP:							
Operating	Voltage	V_{BL}	655(7.5mA)	675(7.0mA)	790(3.0mA)	V_{RMS}	1, 2
Operating	Current	I _{BL}	3.0	7.0	7.5	mA _{RMS}	1
Establishe	Established Starting Voltage						1, 3
	at 25 °C				1,100	V_{RMS}	
	at 0 °C				1,400	V_{RMS}	
Operating	Operating Frequency		40	-	70	kHz	4
Discharge Stabilization Time		T _S	-	-	3	Min	1, 5
Power Consumption		P _{BL}		28.35	31.19	Watt	6
Life Time			45,000	-		Hrs	1, 7

Note:

The design of the inverter must have specifications for the lamp in LCD Assembly.

The performance of the Lamp in LCM, for example life time or brightness, is extremely influenced by the characteristics of the DC-AC inverter. So all the parameters of an inverter should be carefully designed so as not to produce too much leakage current from high-voltage output of the inverter. When you design or order the inverter, please make sure unwanted lighting caused by the mismatch of the lamp and the inverter (no lighting, flicker, etc) never occurs. When you confirm it, the LCD-Assembly should be operated in the same condition as installed in you instrument.

Do not attach a conducting tape to lamp connecting wire. If the lamp wire attach to a conducting tape, TFT-LCD Module has a low luminance and the inverter has abnormal action. Because leakage current is occurred between lamp wire and conducting tape.

- 1. Specified values are for a single lamp.
- 2. Operating voltage is measured at 25 \pm 2°C. The variance of the voltage is \pm 10%.
- 3. The voltage above V_S should be applied to the lamps for more than 1 second for start-up. (Inverter open voltage must be more than lamp starting voltage.)


Otherwise, the lamps may not be turned on. The used lamp current is the lamp typical current.

- 4. Lamp frequency may produce interface with horizontal synchronous frequency and as a result this may cause beat on the display. Therefore lamp frequency shall be as away possible from the horizontal synchronous frequency and from its harmonics in order to prevent interference.
- 5. Let's define the brightness of the lamp after being lighted for 5 minutes as 100%.

 T_s is the time required for the brightness of the center of the lamp to be not less than 95%.
- 6. The lamp power consumption shown above does not include loss of external inverter. The used lamp current is the lamp typical current. ($P_{BL} = V_{BL} \times I_{BL} \times N_{Lamp}$)
- 7. The life is determined as the time at which brightness of the lamp is 50% compared to that of initial value at the typical lamp current on condition of continuous operating at $25 \pm 2^{\circ}$ C.



- 8. The output of the inverter must have symmetrical (negative and positive) voltage waveform and symmetrical current waveform (Unsymmetrical ratio is less than 10%). Please do not use the inverter which has unsymmetrical voltage and unsymmetrical current and spike wave. Requirements for a system inverter design, which is intended to have a better display performance, a better power efficiency and a more reliable lamp, are following. It shall help increase the lamp lifetime and reduce leakage current.
 - a. The asymmetry rate of the inverter waveform should be less than 10%.
 - b. The distortion rate of the waveform should be within $2 \pm 10\%$.
 - * Inverter output waveform had better be more similar to ideal sine wave.

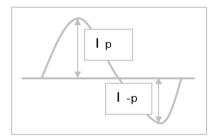

* Asymmetry rate:

$$\mid$$
 I $_{p}$ $-$ I $_{-p}$ \mid $/$ I $_{rms}$ x 100%

* Distortion rate

$$I_p$$
 (or I_{-p}) / I_{rms}

- 9. The inverter which is combined with this LCM, is highly recommended to connect coupling(ballast) condenser at the high voltage output side. When you use the inverter which has not coupling(ballast) condenser, it may cause abnormal lamp lighting because of biased mercury as time goes.
- 10.In case of edgy type back light with over 4 parallel lamps, input current and voltage wave form should be synchronized



3-2. Interface Connections


- LCD Connector(CN1): GT-101-30S-H16 (LS Cable) and IS100-C30B-C15(UJU) or Equivalent.
- Mating Connector: FI-X30H and FI-X30HL (JAE) or Equivalent.
- Interface chip must be used LVDS Part No. SN75LVDS83(Texas Instrument) or compatible.

Table 4. Module Connector(CN1) Pin Configuration

Pin No	Symbol	Description			
1	RXO0-	Minus signal of 1'st channel 0 (LVDS)			
2	RXO0+	Plus signal of 1'st channel 0 (LVDS)			
3	RXO1-	Minus signal of 1'st channel 1 (LVDS)			
4	RXO1+	Plus signal of 1'st channel 1 (LVDS)			
5	RXO2-	Minus signal of 1'st channel 2 (LVDS)			
6	RXO2+	Plus signal of 1'st channel 2 (LVDS)			
7	GND	Ground			
8	RXOC-	Minus signal of 1'st clock channel (LVDS)			
9	RXOC+	Plus signal of 1'st clock channel (LVDS)			
10	RXO3-	Minus signal of 1'st channel 3 (LVDS)			
11	RXO3+	Plus signal of 1'st channel 3 (LVDS)			
12	RXE0-	Minus signal of 2'nd channel 0 (LVDS)			
13	RXE0+	Plus signal of 2'nd channel 0 (LVDS)			
14	GND	Ground			
15	RXE1-	Minus signal of 2'nd channel 1 (LVDS)			
16	RXE1+	Plus signal of 2'nd channel 1 (LVDS)			
17	GND	Ground			
18	RXE2-	Minus signal of 2'nd channel 2 (LVDS)			
19	RXE2+	Plus signal of 2'nd channel 2 (LVDS)			
20	RXEC-	Minus signal of 2'nd clock channel (LVDS)			
21	RXEC+	Plus signal of 2'nd clock channel (LVDS)			
22	RXE3-	Minus signal of 2'nd channel 3 (LVDS)			
23	RXE3+	Plus signal of 2'nd channel 3 (LVDS)			
24	GND	Ground			
25	NC	No Connection (LPL use only to adjust Common Voltage)			
26	NC	No Connection (LPL use only to adjust Common Voltage)			
27	NC	No Connection			
28	V LCD	Power Supply +12.0V			
29	V LCD	Power Supply +12.0V			
30	VLCD	Power Supply +12.0V			



FIG. 4 Connector Diagram

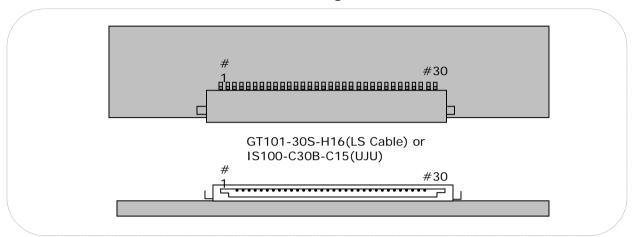

Rear view of LCM

Note:

- 1. NC: No Connection.
- 2. All GND(ground) pins should be connected together and to Vss which should also be connected to the LCD's metal frame.
- 3. All V_{LCD} (power input) pins should be connected together.
- 4. Input Level of LVDS signal is based on the IEA 664 Standard.



Table 5. Required Signal Assignment For Flat Link(TI:SN75LVDS83) Transmitter

Pin #	Pin Name	Require Signal	Pin #	Pin Name	Require Signal
1	VCC	Power Supply for TTL Input	29	GND	Ground pin for TTL
2	D5	TTL Input (R7)	30	D26	TTL Input (DE)
3	D6	TTL Input (R5)	31	T _X CLKIN	TTL Level clock Input
4	D7	TTL Input (G0)	32	PWR DWN	Power Down Input
5	GND	Ground pin for TTL	33	PLL GND	Ground pin for PLL
6	D8	TTL Input (G1)	34	PLL VCC	Power Supply for PLL
7	D9	TTL Input (G2)	35	PLL GND	Ground pin for PLL
8	D10	TTL Input (G6)	36	LVDS GND	Ground pin for LVDS
9	VCC	Power Supply for TTL Input	37	TxOUT3+	Positive LVDS differential data output 3
10	D11	TTL Input (G7)	38	TxOUT3 -	Negative LVDS differential data output 3
11	D12	TTL Input (G3)	39	T _X CLKOUT+	Positive LVDS differential clock output
12	D13	TTL Input (G4)	40	T _X CLKOUT -	Negative LVDS differential clock output
13	GND	Ground pin for TTL	41	T _x OUT2+	Positive LVDS differential data output 2
14	D14	TTL Input (G5)	42	T _X OUT2 -	Negative LVDS differential data output 2
15	D15	TTL Input (B0)	43	LVDS GND	Ground pin for LVDS
16	D16	TTL Input (B6)	44	LVDS VCC	Power Supply for LVDS
17	CLKSEL	CLKIN Wave form Selection	45	T _x OUT1+	Positive LVDS differential data output 1
18	D17	TTL Input (B7)	46	T _X OUT1 -	Negative LVDS differential data output 1
19	D18	TTL Input (B1)	47	T _X OUT0+	Positive LVDS differential data output 0
20	D19	TTL Input (B2)	48	T _X OUT0 -	Negative LVDS differential data output 0
21	GND	Ground pin for TTL Input	49	LVDS GND	Ground pin for LVDS
22	D20	TTL Input (B3)	50	D27	TTL Input (R6)
23	D21	TTL Input (B4)	51	D0	TTL Input (R0)
24	D22	TTL Input (B5)	52	D1	TTL Input (R1)
25	D23	TTL Input (RSVD)	53	GND	Ground pin for TTL
26	VCC	Power Supply for TTL Input	54	D2	TTL Input (R2)
27	D24	TTL Input (HSYNC)	55	D3	TTL Input (R3)
28	D25	TTL Input (VSYNC)	56	D4	TTL Input (R4)

Notes: Refer to LVDS Transmitter Data Sheet for detail descriptions.



The backlight interface connector is a model BHR-05VS-1(CN2,CN5), BHSR-02VS-1(CN3,CN4) manufactured by AMP is compatible.

The mating connector part number are SM02B-BHSS-1-TB(2pin), SM04(9-E2)B-BHS-1-TB(5pin) or equivalent.

The pin configuration for the connector is shown in the table below.


[Table 6] Backlight Pin Configuration

No	Pin	Symbol	Description	Notes
	1	HV	Power supply for lamp1(High Voltage side) - Gray	1
	2	HV	Power supply for lamp2(High Voltage side) - Sky Blue	1
CN2	3			
	4	LV	Power supply for lamp1(Low Voltage side) - Black	2
	5	LV	Power supply for lamp2(Low Voltage side) - Blue	2
CN3	1	HV	Power supply for lamp3(High Voltage side) - White	1
CINS	2	LV	Power supply for lamp3(Low Voltage side) - White	2
ON 4	1	HV	Power supply for lamp4(High Voltage side) - White	1
CN4	2	LV	Power supply for lamp4(Low Voltage side) - White	2
	1	HV	Power supply for lamp6(High Voltage side) - Gray	1
	2	HV	Power supply for lamp5(High Voltage side) - Sky Blue	1
CN5	3	NC	NC	
	4	LV	Power supply for lamp6(Low Voltage side) - Black	2
	5	LV	Power supply for lamp5(Low Voltage side) - Blue	2

Notes: 1. The high voltage power terminal is colored white, gray, sky blue.

2. The low voltage pin color is white, black, blue.

[Fig 5] Backlight Connector Diagram

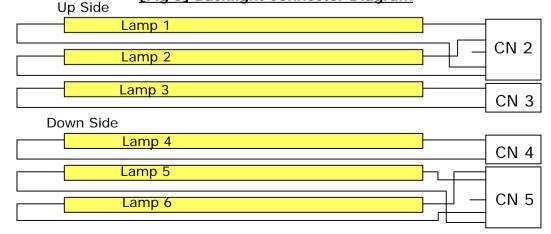



3-3. Signal Timing Specifications

This is the signal timing required at the input of the User connector. All of the interface signal timing should be satisfied with the following specifications for it's proper operation.

Table 7. Timing Table


	Parameterㅊ	Symbol	Min.	Тур.	Max.	Unit	Notes
D _{CLK}	Period	t _{CLK}	14.7	18.5	22.2	Ns	
	Frequency	f _{CLK}	45.0	54.0	68.4	MHz	
Hsync	Period	t _{HP}	672	844	1,022		
	Width	t _{wH}	8	56	358	t _{CLK}	
	Frequency	f _H	53.3	64.0	82.1	kHz	
Vsync	Period	t _{VP}	1,034	1,066	1,320		
	Width	t _{WV}	2	3	24	t _{HP}	
	Frequency	f _V	47	60	76	Hz	
DE	Horizontal Valid	t _{HV}	640	640	640		
(Data Enable)	Horizontal Back Porch	t _{HBP}	8	124	366		
	Horizontal Front Porch	t _{HFP}	8	24	358	t _{CLK}	
			-	-	-		
	Vertical Valid	t _{vv}	1,024	1,024	1,024		
	Vertical Back Porch	t _{VBP}	5	38	124	_	
	Vertical Front Porch	t _{VFP}	1	1	148	t _{HP}	
		-	-	-	-		
	DE Setup Time DE Hold Time		4	-	-	NI-	For D _{CLK}
			4	-	-	Ns	
Data	Data Setup Time	t _{SD}	4	-	-	Ns	For D _{CLK}
	Data Hold Time		4	-	-	1113	

Notes

- 1. DE Only mode operation
- 2. $t_{HFP} + t_{WH} + t_{HBP} < (1/2) t_{HV}$
- 3. $t_{VFP} + t_{WV} + t_{VBP} < t_{H_max} / t_{v_min}$
- 4. tHFP, tWH and tHBP should be any times of a character number (8).
- 5. No variation of the total number of Hsync and DE in a frame is required for normal operation.
- 6. No variation of the total number of clock in a Hsync period for t_{VBP} is required for normal operation.



3-4. Signal Timing Waveforms

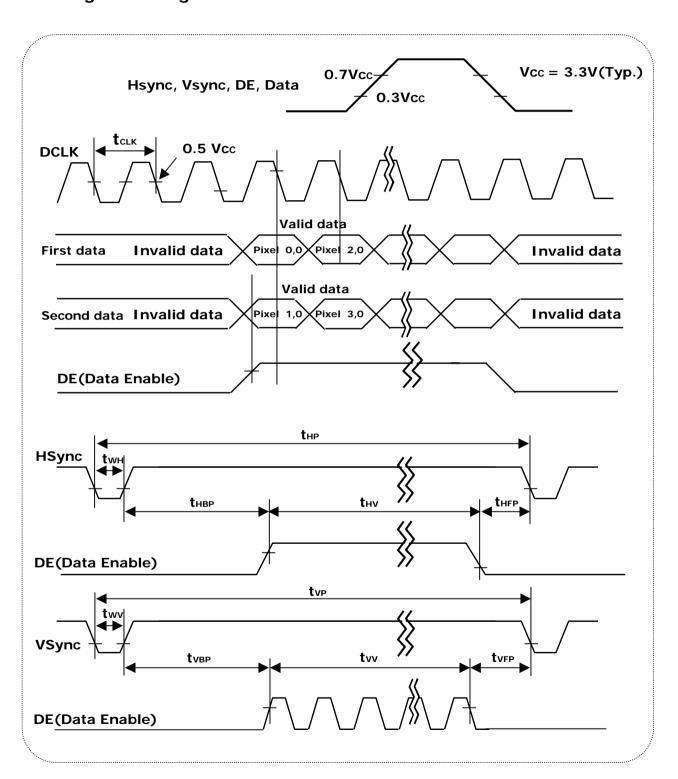



[Reference : Input Data]

The brightness of each primary LCR (left, center and right) is based on the 8-bit gray scale data input. The relation between displays gray scale and input signals is as the following table.

Table 8. Data Reference

												Inp	ut	D	ata	1									
Dien	lay gray scale				Le	eft						(Cer	nte	r						Riç	ght			
Ызр	lay gray scale	MS	SB					L:	SB	MS	SB					L:	SB	MS	SB					L:	SB
		L7	L6	L5	L4	L3	L2	L1	L0	C7	C6	C5	C4	C3	C2	C1	CO	R7	R6	R5	R4	R3	R2	R1	RO
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
		0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Left	Dark	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Sub		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
pixel	Deiodet	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	- (-	-	-	-	-	-	-	-
	Bright	1	1	1	1	1 1	1 1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	White	1	1	1 1		1		1 1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Black	0	0		0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0		0	0
Conton	Dark	lö	0		0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0		0	0
Center Sub		-	-	-	-	-	-	-	-	-	-	-	-	-	-	_	-	-	-	-	-	-	-	-	-
pixel		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Pixei	Bright	0	0	0	0	0	0	0	0	1	1	1	1	1	1	0	1	0	0	0	0	0	0	0	0
		0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0
	White	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Dowle	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
Right	Dark	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0
Sub		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
pixel	Bright	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	- 1	0	1
		0	0		0	0		0	0	0	0	0	0	0		0	0	1	1	1	1	1		1	o
	White	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	<u>.</u>	1	1



3-5. Power Sequence

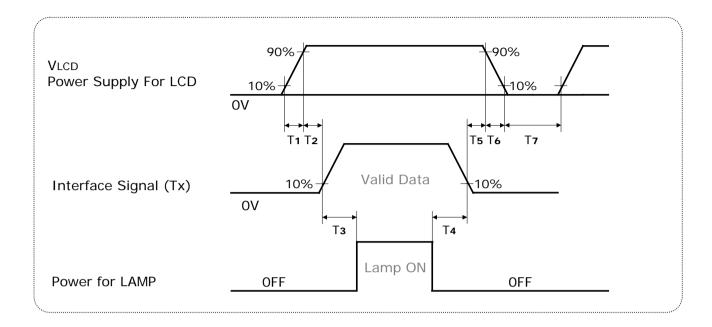


Table 9. Power Sequence

Darameter		Values								
Parameter	Min	Тур	Max	Units						
T1	0.5	-	10	ms						
T2	0.0	-	50	ms						
Т3	200	-	-	ms						
T4	200	-	-	ms						
T5	0.0	-	50	ms						
T6	0.5	-	10	ms						
Т7	500	-	-	ms						

Notes:

- 1. Please avoid floating state of interface signal at invalid period.
- 2. When the interface signal is invalid, be sure to pull down the power supply for LCD $\rm V_{LCD}$ to OV.
- 3. Lamp power must be turn on after power supply for LCD an interface signal are valid.



4. Optical Specification

Optical characteristics are determined after the unit has been 'ON' for 30 minutes in a dark environment at 25°C. The values specified are at an approximate distance 50cm from the LCD surface at a viewing angle of Φ and θ equal to 0 °.

FIG. 7 presents additional information concerning the measurement equipment and method.

FIG. 7 Optical Characteristic Measurement Equipment and Method

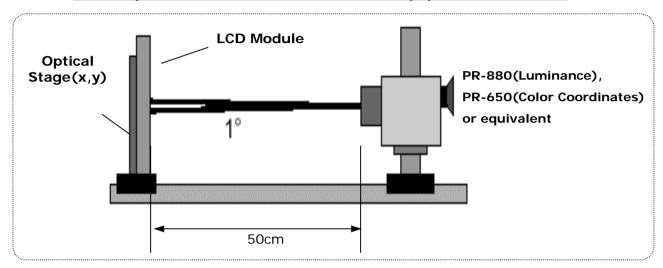


Table 10. Optical Characteristics

Ta= 25°C,
$$V_{LCD}$$
=12.0V, f_{V} =60Hz
 f_{CLK} =54MHz, I_{BL}=7.0mA

					-	'C	LK-3+MIL	Z, IBL = 7.011		
	Dara	meter0	 Syml	aal		Values		Units	Notes	
	raia	metero	Syllii	JUI	Min	Тур	Max	UTILS	Notes	
Contrast R	atio		CR		600	900	-		1	
Surface Luminance, white			L _{WH}		800	1,000	-	cd/m ²	2	
Luminance Variation			δ _{WHITE}	5P	85	-	115	%	3	
Doomonoo -	Response Time Decay Time		Tr _R		-	TBD	-	ms	4	
Response			Tr)	_	TBD	-	ms	4	
White Dale	naa		Wx		-	TBD	-			
White Bala	nce		Wy	•	-	TBD	-			
	x axis, right(φ=0°)		θr		85	-	-	Degree	5	
View	x axi	s, left (φ=180°)	θΙ		85	-	-			
l Anale ⊢	y axi	s, up (φ=90°)	θu		85	_	-			
(01/2 10)	y axi	s, down (φ=270°)	θd		85	-	-			



Notes:


1. Contrast ratio(CR) is defined mathematically as :

It is measured at center point(1)

- 2. Surface luminance is the luminance value at center 1 point(1) across the LCD surface 50cm from the surface with all pixels displaying white. For more information see FIG 8.
- 3. The variation in surface luminance at 50% gray level, δ $_{\text{WHITE}}$ is defined as

For more information see Figure 8.

FIG. 8 Luminance Measuring Point

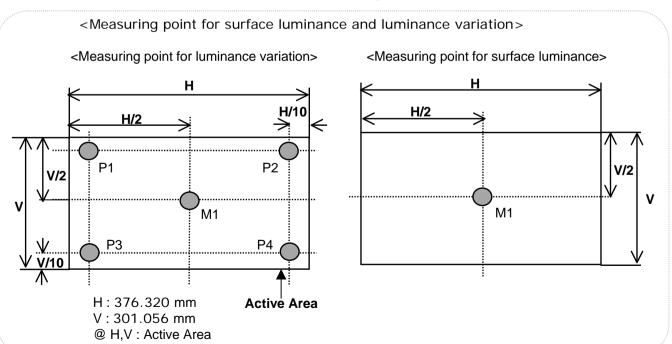



4. Response time is the time required for the display to transition from black to white (Rise Time, Tr_R) and from white to black (Decay Time, Tr_D) The sampling rate is 2,500 sample/sec. For additional information see FIG. 9.

The response time is defined as the following figure and shall be measured by switching the input signal for each gray to gray.

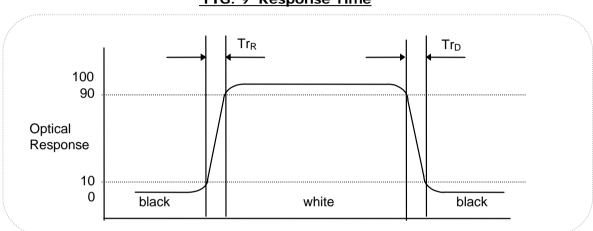


FIG. 9 Response Time

5. Viewing angle is the angle at which the contrast ratio is greater than 10 or 5. The angles are determined for the horizontal or x axis and the vertical or y axis with respect to the z axis which is normal to the LCD surface. For more information see FIG. 10.

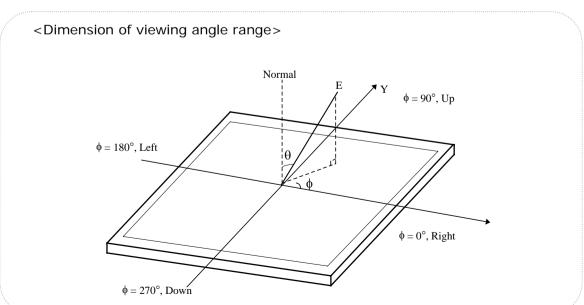


FIG. 10 Viewing Angle



5. Mechanical Characteristics


The contents provide general mechanical characteristics. In addition the figures in the next page are detailed mechanical drawing of the LCD.

-						
	Horizontal	396.0 mm				
Outline Dimension	Vertical	324.0 mm				
	Depth	20.0 mm				
Bezel Area	Horizontal	380.3 mm				
bezei Alea	Vertical	305.0 mm				
Active Diemley Area	Horizontal	376.32 mm				
Active Display Area	Vertical	301.056 mm				
Weight	2,620g (Typ.)					
Surface Treatment	Hard coating(3H) Anti-glare treatment of the from	t polarizer				

Notes: Please refer to a mechanic drawing in terms of tolerance at the next page.




<Front View>

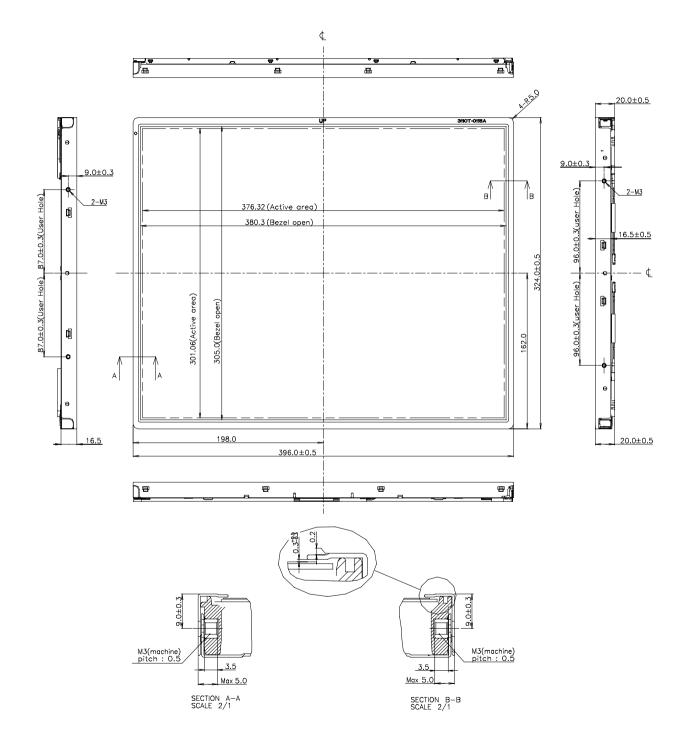



<Rear View>

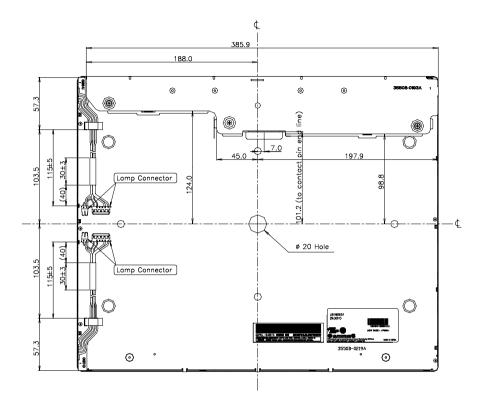

Notes

- Notes

 1. Backlight: 6 Cold Cathode Fluorescent Lamps

 2. I/F Connector Specification: GT101-30S-H16(LGC)/IN-30-BA 10(UJU)


 3. Lamp Connector Specification

 BHR-05VS-1(JST) or Compatible


 BHSR-02VS-1(JST)

 The Compatible of the Compatible o

- Torque of user hole: 3.5~4.0kgf-cm
 Tilt and partial disposition tolerance of display area as following
 The control of the contro



6. Lamp(CCFL) lot No. is marked at backlight connector



- 7. Do not wind conductive tape around the backlight wires 8. Unspecified tolerances to be $\pm 0.5 \text{mm}$



6. Reliability

Environment test condition

No	Test Item	Condition
1	High temperature storage test	Ta= 60°C 240h
2	Low temperature storage test	Ta= -20°C 240h
3	High temperature operation test	Ta= 50°C 50%RH 240h
4	Low temperature operation test	Ta= 0°C 240h
5	Vibration test (non-operating)	Wave form: random Vibration level: 1.0G RMS Bandwidth: 10-300Hz Duration: X,Y,Z, 30 min for each of the three axes.
6	Shock test (non-operating)	Shock level: 100G Waveform: half sine wave, 2ms Direction: ±X, ±Y, ±Z One time each direction
7	Altitude operating storage / shipment	0 - 10,000 feet(3,048m) 0 - 40,000 feet(12,192m)

[{] Result Evaluation Criteria }

There should be no change which might affect the practical display function when the display quality test is conducted under normal operating condition.



7. International Standards

7-1. Safety

- a) UL 60950-1:2003, First Edition, Underwriters Laboratories, Inc.,
- Standard for Safety of Information Technology Equipment.
- b) CAN/CSA C22.2, No. 60950-1-03 1st Ed. April 1, 2003, Canadian Standards Association,
- Standard for Safety of Information Technology Equipment.
- c) EN 60950-1:2001, First Edition,
- European Committee for Electro technical Standardization(CENELEC)
- European Standard for Safety of Information Technology Equipment.

7-2. EMC

- a) ANSI C63.4 "Methods of Measurement of Radio-Noise Emissions from Low-Voltage Electrical and Electrical Equipment in the Range of 9kHZ to 40GHz. "American National Standards Institute(ANSI), 1992
- b) C.I.S.P.R. "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." International Special Committee on Radio Interference.
- c) EN 55022 "Limits and Methods of Measurement of Radio Interface Characteristics of Information Technology Equipment." European Committee for Electro technical Standardization.(CENELEC), 1998 (Including A1: 2000)



8. Packing

8-1. Designation of Lot Mark

a) Lot Mark

А	В	С	D	Е	F	G	Н	I	J	К	L	М	
---	---	---	---	---	---	---	---	---	---	---	---	---	--

A,B,C : SIZE(INCH) D : YEAR

E: MONTH F ~ M: SERIAL NO.

Note

1. YEAR

Year	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010
Mark	1	2	3	4	5	6	7	8	9	0

2. MONTH

	Month	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec
ſ	Mark	1	2	3	4	5	6	7	8	9	Α	В	С

b) Location of Lot Mark

Serial No. is printed on the label. The label is attached to the backside of the LCD module. This is subject to change without prior notice.

8-2. Packing Form

a) Package quantity in one box: 6 pcs

b) Box Size: 534mm X 311mm X 461mm.



9. PRECAUTIONS

Please pay attention to the followings when you use this TFT LCD module.

9-1. MOUNTING PRECAUTIONS

- (1) You must mount a module using holes arranged in four corners or four sides.
- (2) You should consider the mounting structure so that uneven force (ex. Twisted stress) is not applied to the Module. And the case on which a module is mounted should have sufficient strength so that external force is not transmitted directly to the module.
- (3) Please attach the surface transparent protective plate to the surface in order to protect the polarizer. Transparent protective plate should have sufficient strength in order to the resist external force.
- (4) You should adopt radiation structure to satisfy the temperature specification.
- (5) Acetic acid type and chlorine type materials for the cover case are not desirable because the former generates corrosive gas of attacking the polarizer at high temperature and the latter causes circuit break by electro-chemical reaction.
- (6) Do not touch, push or rub the exposed polarizers with glass, tweezers or anything harder than HB pencil lead. And please do not rub with dust clothes with chemical treatment. Do not touch the surface of polarizer for bare hand or greasy cloth. (Some cosmetics are detrimental to the polarizer.)
- (7) When the surface becomes dusty, please wipe gently with absorbent cotton or other soft materials like chamois soaks with petroleum benzene. Normal-hexane is recommended for cleaning the adhesives used to attach front / rear polarizers. Do not use acetone, toluene and alcohol because they cause chemical damage to the polarizer.
- (8) Wipe off saliva or water drops as soon as possible. Their long time contact with polarizer causes deformations and color fading.
- (9) Do not open the case because inside circuits do not have sufficient strength.

9-2. OPERATING PRECAUTIONS

- (1) The spike noise causes the mis-operation of circuits. It should be lower than following voltage: $V=\pm 200 \text{mV}$ (Over and under shoot voltage)
- (2) Response time depends on the temperature. (In lower temperature, it becomes longer.)
- (3) Brightness depends on the temperature. (In lower temperature, it becomes lower.) And in lower temperature, response time(required time that brightness is stable after turned on) becomes longer.
- (4) Be careful for condensation at sudden temperature change. Condensation makes damage to polarizer or electrical contacted parts. And after fading condensation, smear or spot will occur.
- (5) When fixed patterns are displayed for a long time, remnant image is likely to occur.
- (6) Module has high frequency circuits. Sufficient suppression to the electromagnetic interference shall be done by system manufacturers. Grounding and shielding methods may be important to minimized the interference.
- (7) Please do not give any mechanical and/or acoustical impact to LCM. Otherwise, LCM can not be operated its full characteristics perfectly.
- (8) A screw which is fastened up the steels should be a machine screw (if not, it causes metal foreign material and deal LCM a fatal blow)
- (9) Please do not set LCD on its edge.



9-3. ELECTROSTATIC DISCHARGE CONTROL

Since a module is composed of electronic circuits, it is not strong to electrostatic discharge. Make certain that treatment persons are connected to ground through wrist band etc. And don't touch interface pin directly.

9-4. PRECAUTIONS FOR STRONG LIGHT EXPOSURE

Strong light exposure causes degradation of polarizer and color filter.

9-5. STORAGE

When storing modules as spares for a long time, the following precautions are necessary.

- (1) Store them in a dark place. Do not expose the module to sunlight or fluorescent light. Keep the temperature between 5°C and 35°C at normal humidity.
- (2) The polarizer surface should not come in contact with any other object.

 It is recommended that they be stored in the container in which they were shipped.

9-6. HANDLING PRECAUTIONS FOR PROTECTION FILM

- (1) The protection film is attached to the bezel with a small masking tape. When the protection film is peeled off, static electricity is generated between the film and polarizer. This should be peeled off slowly and carefully by people who are electrically grounded and with well ion-blown equipment or in such a condition, etc.
- (2) When the module with protection film attached is stored for a long time, sometimes there remains a very small amount of glue still on the bezel after the protection film is peeled off.
- (3) You can remove the glue easily. When the glue remains on the bezel surface or its vestige is recognized, please wipe them off with absorbent cotton waste or other soft material like chamois soaked with normal-hexane.