

ETH002-B

Technical Documentation



Overview

The ETH002-B is a drop in update of the ETH002 with additional upgrades.

The ETH002-B provides two volt free contact relay outputs with a current rating of up to 16A. The module is powered from a 12vdc supply which can be regulated or unregulated. The DC input jack is 2.1mm with positive core polarity, DC supplies are required to supply at least 500mA at 12vdc.

The relays are SPCO (Single Pole Change Over) types with the normally open, normally closed and common pins all available on the screw terminals.

New features and improvements over the ETH002 are:

- 100mb full duplex Ethernet connection (ETH008 was 10mb half duplex)
- Hostname is now configurable
- MQTT with optional TLS encryption

Operating temperature

-40C to +70C


LED indication

The ETH002-B provides a red LED mounted immediately next to each relay to indicate whether it is in a powered state (LED on), there is also two LED's mounted in the Ethernet connector which will flash with Ethernet traffic. Finally there is a green power LED just above the processor.

Connections

16A VFC (Volt Free Contacts)

NC = normally connected, C = common, NO = normally open

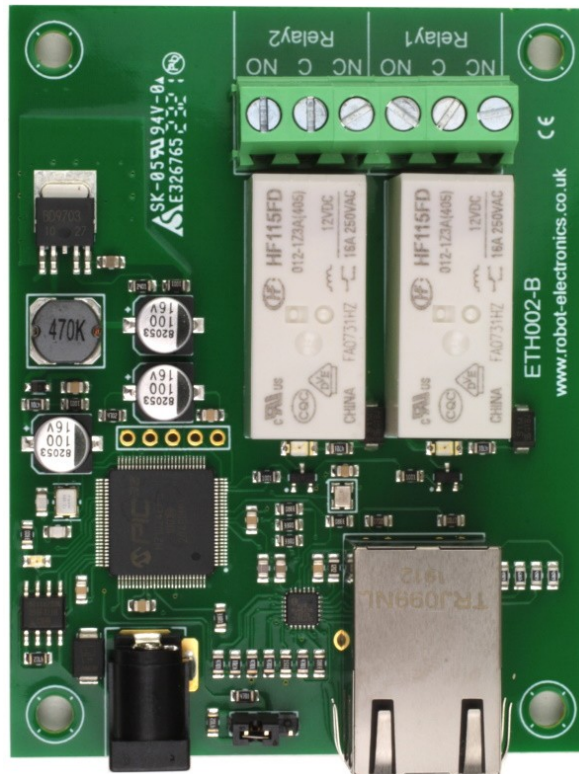


12v dc	Factory reset	
2.1mm jack	Left pair - run	RJ45 Ethernet
(+ve core)	Right pair – reset	
	Read at power up	


Relays

Two 16A volt free contact relays are provided for switching a common input between a normally closed output and a normally open output. The relay coil is powered by the 12vdc incoming supply on user command.

Relay in passive state

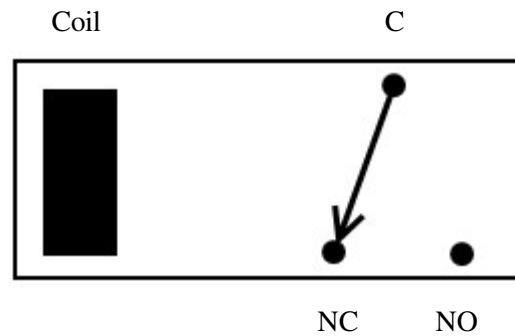


Relay in active state

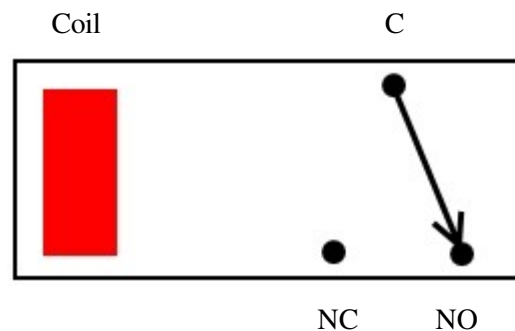

Relay power rating

If the contact load voltage and current of the relay are in the region enclosed by the solid and dotted lines in the figure below, the relay can perform stable switching operation. If the relay is used at a voltage or current exceeding this region, the life of the contacts may be significantly shortened.

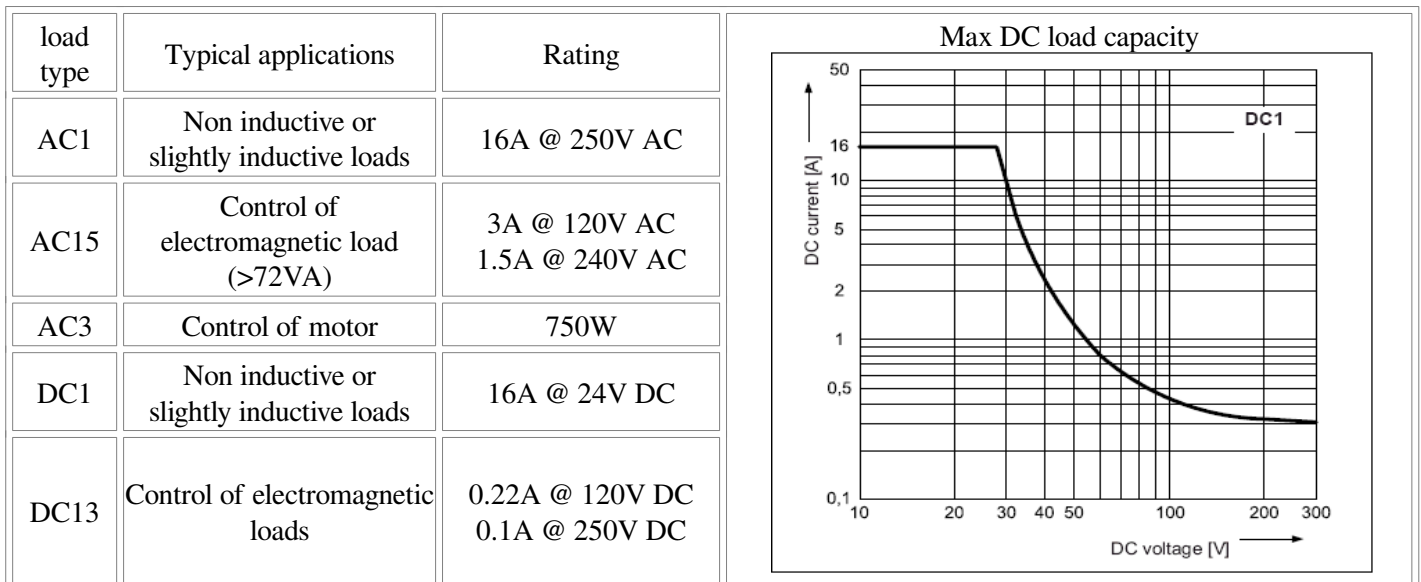

A full datasheet for the relays used on the ETH8020-B is here: [HF115FD datasheet](#)


Network connection

Once you have connected the Ethernet cable and turned on the power you will need to obtain your modules IP address.

With a DHCP Server

The easiest way to use the ETH002-B is to connect it to a network with a DHCP server. In this case the ETH002-B will have its IP address assigned automatically by the DHCP server.

To find the IP address of your module you can check in your routers settings for the list of devices connected to your network. Alternatively we also provide a Devantech Module Finder application that will scan your network and report with any modules on your network that your computer can talk to.

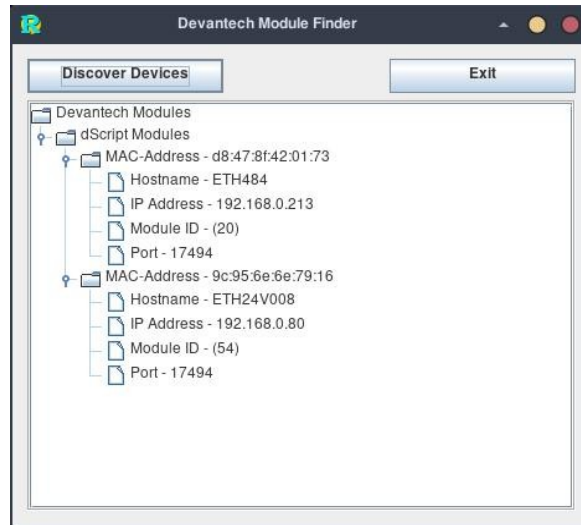

[Download the Devantech Module Finder](#)

With a Fixed IP

If there is no DHCP server a fixed IP address of 192.168.0.200 is used.

Your computer must be on the same subnet as the module. Set your computers IP address to 192.168.0.X where X is in the range of 1 to 255, but not 200 (the ETH002-B is there!) or any other IP addresses in use on the network.

Set your computers subnet mask to 255.255.255.0 so it can talk to any module with an IP address of 192.168.0.x.

Set your computers default gateway to the IP address that the internet connection is located at. This is most likely the address of your router.


Set your computers DNS server to either your router address, or a free DNS service such as Google DNS at 8.8.8.8 or Cloudflare DNS at 1.1.1.1

Example computer network settings:

IP address: 192.168.0.104
Subnet mask: 255.255.255.0
Gateway: 192.168.0.1
DNS server: 192.168.0.1

Accessing the ETH002-B from your browser


Start up your web browser and type the IP address of your module into the address bar (in this example 192.168.0.80) and you will be prompted for a password, as shown below:

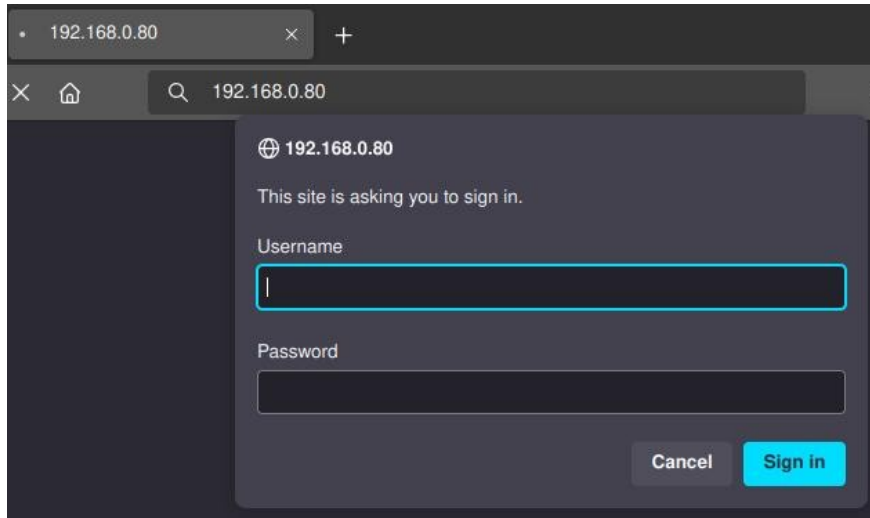

The default login is:
Username: admin
Password: password

The ability to change these settings is shown in the configuration section

You should now see the following web page:

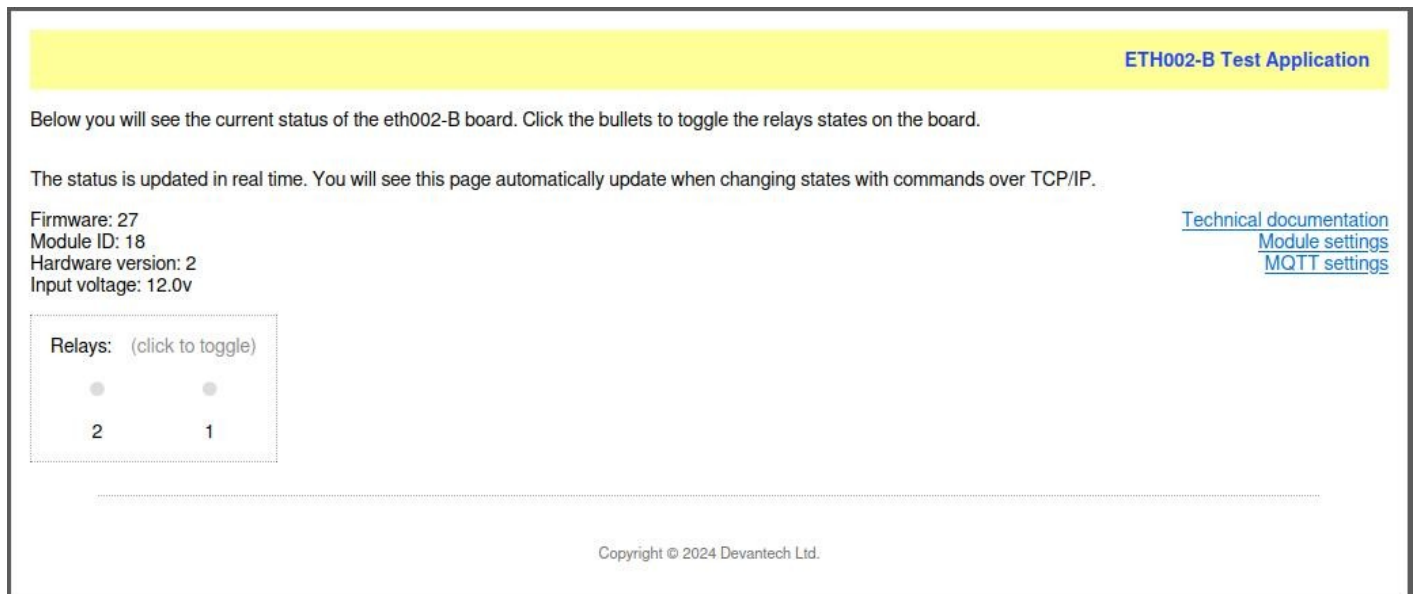

This web page will allow you to switch the outputs on and off by clicking the output buttons (the red/gray circles), and also view the states of the inputs. It also contains a links to this technical documentation and configuration pages.

Access from the Internet

The ETH002-B can be controlled over the internet almost as easily as on your local network. Your network will most likely be connected to the internet with a broadband router. This will provide NAT (Network Address Translation) and Firewall services. To access the ETH002-B from the internet you will need to open up port 17494 (0x4456) to allow incoming TCP connections. Be careful not to open up any other ports. There are a wide variety of routers and we cannot give details for all of them. If in doubt ask your system administrator for assistance. The following shows how to open up a port on a Netgear DG834 router.

Add Services

Service Definition

Name:	ETH008
Type:	TCP
Start Port:	17494
Finish Port:	17494

After logging on to your routers setup page, the first thing to do is create a new service. Click on the "Services" menu then "Add Custom Service". Enter a name for the service, select TCP and enter the ETH002-B's port address for both the start and finish ports. Click "Apply".

Inbound Services

Service	ETH008(TCP:17494)
Action	ALLOW always
Send to LAN Server	192 . 168 . 0 . 99
WAN Users	Any
start:	. . .
finish:	. . .
Log	Always

Now go to the "Firewall Rules" menu and click "Add" in the Inbound services section. Select the ETH002-B service and ALLOW always. The "Send to LAN Server" IP address is the ETH002-B's IP address, 192.168.0.96 in the example above but check what it is on your network. Click "Apply" and that's it. The ETH002-B is now accessible over the internet. Before you close the routers setup pages, go to the "Router Status" menu and make a note of its ADSL port IP address. This is the routers internet facing IP address.

Configuration

Module Settings

Settings changes in this page will not be applies until a module reset.

Module Configuration

Network Settings

Hostname:

Module MAC address:

☒ Enable DHCP

IP Address:

Subnet Mask:

Gateway Address:

DNS Address:

Port:

TCP/IP Password

☐ TCP/IP Password enable

TCP Password:

HTTP access

☒ HTTP Authentication

Username:

Password:

Latched Outputs

☐ Latched outputs enabled

MAC Address	The unique identifier of this module.
Host Name	The host name of this module.
Enable DHCP	Enable, or disable, the DHCP address. When this box is checked the module will get its IP address from the DHCP server. If it is unchecked then the module will use the network settings input below.
IP Address	The IP address of the module. Only editable if DHCP is disabled.

Subnet Mask	The subnet mask. Only editable if DHCP is disabled.
Gateway Address	The gateway address. Only editable if DHCP is disabled.
DNS address	The address of the DNS server. Only editable if DHCP is disabled.
Port	The port number that the TCP connection listens on.
TCP/IP Password	Enables, or disables, the TCP/IP password (see TCP/IP commands section). When checked the input password will be required to change any outputs via TCP/IP commands.
HTTP Authentication	Enables, or disables, the HTTP authentication that asks for a username and password to be input for access to the control pages.
Username	The username to be used for HTTP authentication.
Password	The password to be used for HTTP authentication.
Latched Outputs	Sets the outputs to latching mode. This will automatically save any permanent output state changes (not pulsed) and restore them following power loss.

MQTT Settings

The module can connect to an MQTT broker to publish certain status messages such as a power up message, or a heartbeat. Each IO on the module can also subscribe, or publish, to a topic to control or monitor its state.

To configure the settings for an IO select it from the “Choose an I/O state” drop down box and fill in the required information.

Once finished save your changes by pressing the Save Config button.

Mqtt configuration

Link a relay to a mqtt server

Broker settings.

IP address:

mqtt.eclipseprojects.io

Port:

1883

Client ID:

MQTT_NET_Client

Username:

MQTT_NET_User

Password:

MQTT_NET_Pass

Lifecycle messages.

☐ Enable Power up message

Power up publish topic:

Power up topic

☐ Enable LWT

LWT topic:

status

LWT message:

lost

☐ Enable heartbeat

Heartbeat publish topic:

Publish heartbeat topic

IO settings.

Choose a relay: Relay 1 ▾

☐ Enable Subscribe

Subscribe state topic

subscribe state topic 1

☐ Enable Subscribe pulse time

Subscribe pulse time topic

subscribe time topic 1

☐ Enable Publish

Publish topic

publish topic 1

Save Config

IP Address	The IP address of the MQTT broker to connect to.
Port	Should be 1883 for no encryption or port 8883 for a TLS encrypted link (the ETH module will automatically use TLS for port 8883).
Client ID	The client name of your module.
Username	Optional username for connection to the MQTT broker.

Password	Optional password for connection to the MQTT broker.
Enable Power Up Message	Enables, or disables, the publishing of a message at power up containing the MAC address, IP address, software and hardware versions.
Power Up Publish Topic	The topic that the power up message will be published to.
Enable LWT	Enables, or disables, the last will and testament. The broker will publish the message after no contact for 5 minutes.
LWT Topic	The topic the LWT will be published on.
LWT Message	The message published for the LWT.
Enable Heartbeat	Enable, or disable, the heartbeat, which publishes an incremented count once a minute, giving the up time, count is reset on socket loss.
Heartbeat Publish Topic	The topic that the heartbeat message will be published to.
Enable Subscribe	Enables, or disables, subscribing to a topic that contains a message of “1” or “0” to control the state of the selected output.
Subscribe State Topic	The topic to subscribe to that controls the state of the selected output.
Enable Subscribe Pulse Time	Enables, or disables, subscribing to a topic that contains a message of between “1” and “255” which will pulse the output on for that number of 100mS units.
Subscribe Pulse Time Topic	The topic to subscribe to that pulses the state of the selected output.
Enable publish	Enables, or disables, the publishing of a message containing a “1” or a “0” when the state of the selected IO changes.
Publish Topic	The topic to publish the IO state changes to.

Control Sets

There are three command sets that can be used to control the module: TCP/IP, ASCII and HTTP.

TCP access and commands

The command set designed to provide consistent expansion and new features, they are sent over TCP/IP on port 17494 (0x4456). This is the default port, it can be changed in the configuration settings. Five connections are allowed at any one time, these are independently protected but all using the same password as defined in the board configuration.

All bytes for any command must be sent in a single transaction.

Command		Action
dec	hex	
16	0x10	Get Module Info - returns 3 bytes. Module Id (18 for ETH002-B), Hardware version, Firmware version.
32	0x20	Digital Active – A three byte command. Follow with the output number, and then a time for pulsed output from 1-255 (100ms resolution) or 0 for permanent. Board will return 0 for success, 1 for failure Example: 0x20 – Digital Active 0x02 – Output 2 0x32 – (50) - 5 seconds (50 * 100ms) Board will return 0 for success, 1 for failure.
33	0x21	Digital Inactive – A three byte command. Follow with the output number, and then a time for pulsed output from 1-255 (100ms resolution) or 0 for permanent. Board will return 0 for success, 1 for failure Example: 0x21 – Digital Inactive 0x02 – Output 2 0x32 – (50) - 5 seconds (50 * 100ms)
35	0x23	Digital Set Outputs – Follow with one byte, the output states. All active = 255 (11111111) All inactive= 0. Board will return 0 for success, 1 for failure
36	0x24	Digital Get Outputs - returns 1 byte corresponding with the relays being powered, a high bit meaning the output is active.
37	0x25	Digital Get Inputs - returns 1 byte corresponding with the digital inputs, a high bit meaning input is active.
58	0x3A	ASCII text commands - allows a text string to switch outputs, see section below
119	0x77	Get Serial Number - Returns the unique 6 byte MAC address of the module.
120	0x78	Get Volts - returns relay supply voltage as byte, 125 being 12.5V DC
121	0x79	Password Entry - <i>see TCP/IP password</i> , board will return 1 for success or 2 for failure
122	0x7A	Get Unlock Time - Returns 1 byte indicating the TCP/IP password protection status: 0 - password protection is enabled and password entry is required before changes can be made 1-30 - seconds until TCP/IP password protection is re-enabled. All authorized commands set the timer back to 30 seconds (including this one). 255 - TCP/IP password is not enabled.
123	0x7B	Log Out - immediately re-enables TCP/IP password protection, board will return 0 for success

TCP/IP Password

If this option is enabled in the HTTP configuration page then a password will be required to be entered before relay states can be changed. In the following example the password was set to "apple":

0x79 - 1st byte in frame sent to ETH002-B to indicate password entry

'a' (0x61) - 2nd byte in frame (ASCII hex equivalent in brackets, <http://www.asciitable.com/>)

'p' (0x70) - 3rd byte in frame

'p' (0x70) - 4th byte in frame

'l' (0x6C) - 5th byte in frame

'e' (0x65) - 6th byte in frame

These 6 bytes are then transmitted in the same transaction to the module, and if the password is correct then a 1 will be transmitted back, a failure will send a 2.

The board will now accept changes from the device that entered the password. If communication becomes idle for more than 30 seconds then the password protection is re-enabled.

There is also a log-out command of 0x7B to enable the protection immediately.

ASCII text commands DOA and DOI

Following customer request we have added a feature that allows the outputs to be switched using an ASCII string. Devices like a Mobotix camera can now switch relays with simple strings. The string for activating output1 for 5 seconds is formatted using comma separated variables with the following syntax:

":DOA,1,50,password"

To break this down ":" (0x3A) at the start of the string indicates that there is an ASCII message to follow, "DOA" is digital output active, "1" is the output number, then "50" for 5 seconds (50 * 100ms) and finally the TCP password (if applicable).

If you wanted to make output 2 inactive for 3 seconds you would send:

":DOI,2,30,password"

To break this down ":" (0x3A) at the start of the string indicates that there is an ASCII message to follow, "DOI" is digital output inactive, "2" is the output number, then "30" for 3 seconds (30 * 100ms) and finally the TCP password (if applicable). Assuming no password is used the previous command would simply be:

":DOI,2,30 "

HTTP Commands DOAx and DOIx

A customer requested feature, allowing the digital outputs to be switched by the HTTP get function such as used in some voice over IP phones (VOIP). You can use the HTTP get function to write to the io.cgi file with the following syntax:

192.168.0.200/io.cgi?DOA2=10

This would use the default address (192.168.0.200) and make output 2 active for 1 second.

Another example would be to set output 1 inactive for 10 seconds:

192.168.0.200/io.cgi?DOI1=10

If you wish to pass a username and password with the request you can do so like this (example uses default credentials):

admin:password@192.168.0.200/io.cgi?DOA1=10


To set the relay with no timer (it will remain in state you can just pass a 0 value for the timer:

192.168.0.200/io.cgi?DOA1=0

You can test these functions by typing them directly into the address bar of most internet browsers. Also be aware that you may need to disable HTTP authentication in the HTTP configuration if your control device does not support it.

TCP Test program and example source code

To get the ETH002-B up and running in the minimum amount of time we have put together an [example java program](#), and also full [source code](#) for this program. You may examine this code or use it as a starting point for your own application.

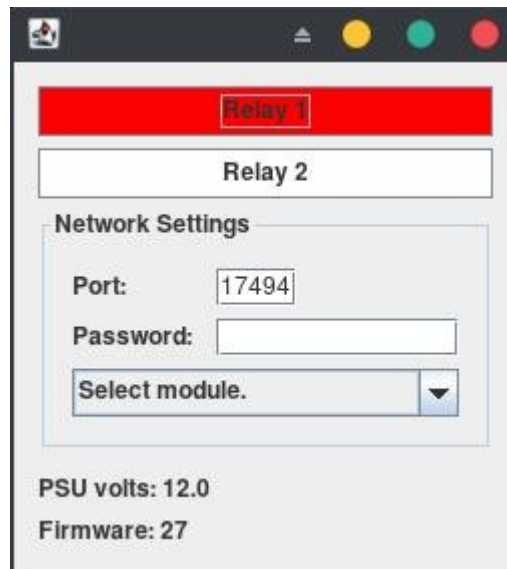


Android & iPhone Apps

We have a free app IO network available for Android and iPhone to remotely control your relays, download from Google Play or iTunes. Search for "Devantech" and you will find the app.

Software updates

With our [software update tool](#) you can upgrade the firmware to get the latest features

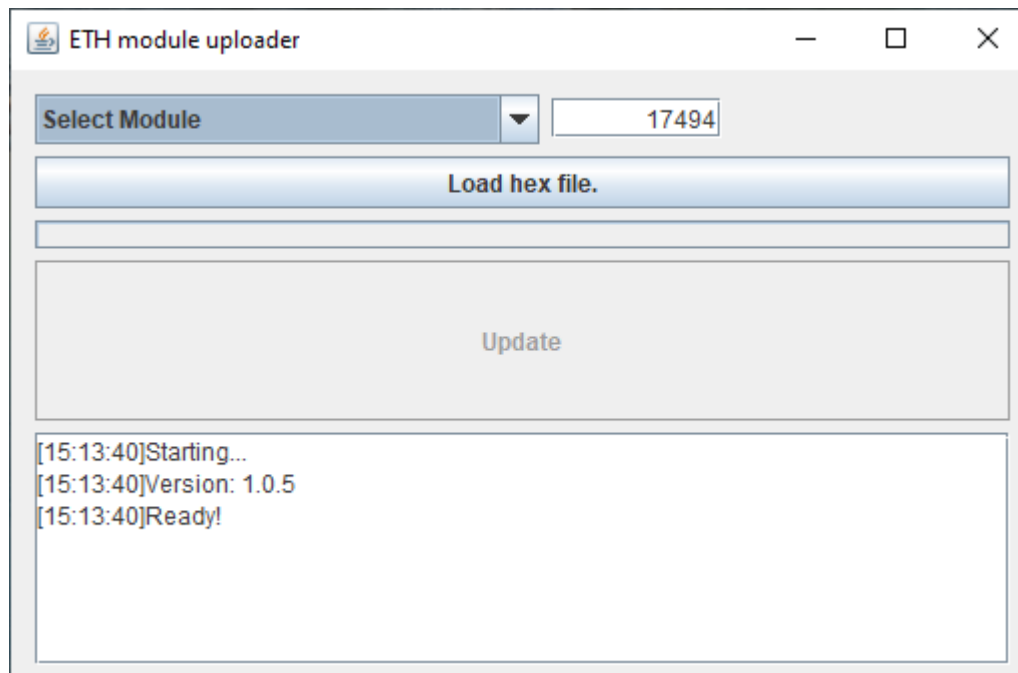

Latest firmware.

[V29](#)

Update highlights:

- Fixed memory leak, corrected reset button in http config page

Board dimensions

